



# Vertiv™ PowerIT Rack Power Distribution Unit

## Installer/User Guide

Upgradeable and Non-Upgradeable M-Series and D-Series (equipped with  
Firmware 6.x.x)

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages result from use of this information or for any errors or omissions.

Refer to local regulations and building codes relating to the application, installation, and operation of this product. The consulting engineer, installer, and/or end user is responsible for compliance with all applicable laws and regulations relation to the application, installation, and operation of this product.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use, or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

### **Technical Support Site**

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit <https://www.vertiv.com/en-us/support/> for additional assistance.

# TABLE OF CONTENTS

<b>1 Important Safety Instructions</b> .....	<b>1</b>
<b>2 Overview</b> .....	<b>3</b>
2.1 Environmental .....	3
2.2 Electrical .....	4
2.3 Networking .....	4
2.3.1 Ethernet .....	4
2.3.2 Protocols .....	4
2.3.3 User interfaces .....	5
<b>3 Installation</b> .....	<b>7</b>
3.1 Mounting .....	8
3.2 Power Connection .....	20
3.2.1 U-Lock operation .....	20
3.2.2 P-Lock operation .....	22
<b>4 Security Best Practices</b> .....	<b>23</b>
4.1 Risk Assessment .....	25
4.2 Physical Security .....	25
4.3 Account Access .....	25
<b>5 Setup</b> .....	<b>27</b>
5.1 Interchangeable Monitoring Device .....	27
5.1.1 Basic .....	27
5.1.2 Metered .....	27
5.1.3 Unit monitored .....	28
5.1.4 Switched and outlet monitored .....	30
5.1.5 Monitored and switched (IMD-5M) .....	32
5.1.6 Rapid Spanning Tree Protocol (RSTP) .....	38
5.2 Network Setup .....	40
5.3 Web User Interface .....	44
5.3.1 Main menu .....	44
5.4 Device Sub Menu .....	45
5.4.1 Overview .....	46
5.4.2 Alarms & Warnings .....	53
5.4.3 Logging .....	58
5.4.4 CO2 Data .....	60
5.5 Provisioner Sub Menu .....	61
5.5.1 Discovery .....	62
5.5.2 File management .....	63
5.6 System Sub Menu .....	64

5.6.1 Users .....	64
5.6.2 Network .....	68
5.6.3 Web server .....	78
5.6.4 Remote authentication .....	79
5.6.5 Time .....	84
5.6.6 SSH .....	85
5.6.7 USB .....	85
5.6.8 Serial port .....	86
5.6.9 Email .....	86
5.6.10 SNMP .....	88
5.6.11 Modbus .....	90
5.6.12 SYSLOG .....	91
5.6.13 Admin .....	91
5.6.14 Locale .....	91
5.7 Utilities Sub Menu .....	91
5.7.1 Configuration Backup and Restore .....	91
5.7.2 Restore defaults .....	93
5.7.3 Reboot .....	93
5.7.4 Reboot I/O Boards .....	94
5.7.5 Firmware Updates .....	95
5.7.6 Factory Access .....	96
5.8 Help Sub Menu .....	97
<b>6 Vertiv™ Intelligence Director .....</b>	<b>99</b>
6.1 Aggregation .....	99
6.2 Array Manager .....	101
6.3 Network Configuration .....	102
6.4 Views .....	104
6.4.1 Summary .....	105
6.4.2 Groups .....	106
6.4.3 List .....	109
6.4.4 Group Configuration .....	110
6.5 Interfaces .....	112
6.5.1 Group SNMP data .....	113
6.5.2 Tips and troubleshooting .....	113
<b>Appendices .....</b>	<b>115</b>
Appendix A: Technical Support .....	115
Appendix B: Available Sensors .....	117
Appendix C: TP-Link Wireless USB Adapters .....	118
Appendix D: Outlet LEDs .....	120
Appendix E: IMD Display Codes .....	121

Appendix F: Provisioner - Format of the configuration settings file ..... 123  
Appendix G: API / CLI Error Codes ..... 143  
Appendix H: An Example of Configuring LDAP for Active Directory Credentials ..... 147

This page intentionally left blank

# 1 Important Safety Instructions

## Regulatory Compliance

Vertiv products are regulated for safety, emissions and environment impact per the following agencies and policies.

### Underwriters Laboratories (UL)

UL standards are used to assess products; test components, materials, systems and performance; and evaluate environmentally sustainable products, renewable energies, food and water products, recycling systems and other innovative technologies.

The UL standards specific to this equipment are as noted on the device nameplate.

### CE

The placement of the CE mark on a product signifies that the product complies with the applicable European (EU) health, safety and environmental protection requirements, including EU legislation and product directives. The CE mark is required for products offered for sale within the European Economic Area (EEA).

The specific regulations, directives and standards applicable to each product are specified on the Declaration of Conformity.

### Federal Communications Commission (FCC)

The Federal Communications Commission (FCC) regulates interstate and international communications by radio, television, wire, satellite and cable in all 50 states, the District of Columbia and U.S. territories. An independent U.S. government agency overseen by Congress, the FCC is the United States primary authority for communications laws, regulation and technological innovation.

The FCC standards specific to this equipment are:

- This Class A device complies with part 15 of the FCC Rules.
- Operation is subject to the following two conditions:
  - This device may not cause harmful interference.
  - This device must accept any interference received, including interference that may cause undesired operation.
- This Class A digital apparatus complies with Canadian ICES-003.
- Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.



**WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.**

**NOTE:** Visit <http://www.Vertiv.com/ComplianceRegulatoryInfo> for important safety information prior to installation.

This page intentionally left blank

## 2 Overview

The Vertiv™ PowerIT Rack Power Distribution Unit (rPDU) gives data center managers the flexibility to install the intelligence required today. From basic power to power monitoring to outlet switching, the Vertiv™ PowerIT rPDU product line adapts to a business needs now and in the future.

To establish this upgrade path, Vertiv engineers took the robust Vertiv™ PowerIT rPDU design and incorporated an Interchangeable Monitoring Device (IMD). PDUs last for many years and with the IMD design, businesses are able to upgrade their PDUs to newer monitoring technologies in the future without having to replace the entire Vertiv™ PowerIT rPDU. The hot swappable IMD is changed out in a few simple steps, without interrupting power to critical servers.

### 2.1 Environmental

The operational environmental limits pertaining to temperature, humidity, and elevation are as defined in the following tables.

**Table 2.1 Temperature Limits**

Description	Minimum	Maximum
Operating	0 °C (32 °F)	60 °C (140 °F)
Storage	-40 °C (-40 °F)	70 °C (158 °F)

**Table 2.2 Humidity Limits**

Description	Minimum	Maximum
Operating	5 %	95 % (non-condensing)
Storage	5 %	95 % (non-condensing)

**Table 2.3 Elevation Limits**

Description	Minimum	Maximum
Operating	0 m (0 ft)	3050 m (10000 ft)
Storage	0 m (0 ft)	15240 m (50000 ft)

## 2.2 Electrical

Electrical product characteristics and performance are defined in the **Table 2.4** below. Also, see the product nameplate for additional rating limits.

**Table 2.4 Receptacle Ratings**

Type	Ratings
Combination C13/C19	250 VAC, 16 A (UL & CSA 16 A, 250 VAC) with C20 cord 250 VAC, 10 A (UL & CSA 12 A, 250 VAC) with C14 cord
German Schuko	250 VAC, 16 A
IEC-60320 C13	250 VAC, 10 A (UL & CSA 12 A, 250 VAC)
IEC-60320 C19	250 VAC, 16 A (UL & CSA 16 A, 250 VAC)
IEC309 PS6	230 VAC, 16 A
IEC309 PS56	230/400 VAC, 32 A
NEMA 5-15R or L5-15R	125 VAC, 12 A
NEMA 6-15R or L6-15R	250 VAC, 12 A
NEMA 5-20R or L5-20R	125 VAC, 16 A
NEMA 6-20R or L6-20R	250 VAC, 16 A
NEMA L5-30R	125 VAC, 24 A
NEMA L6-30R	250 VAC, 24 A
NEMA L7-15R	277 VAC, 12 A
NEMA L7-20R	277 VAC, 16 A
Saf-D-Grid	277 VAC, 16 A
U-Lock Locking IEC-60320 C13	250 VAC, 10 A (UL & CSA 12 A, 250 VAC)
U-Lock Locking IEC -60320 C19	250 VAC, 16 A (UL & CSA 16 A, 250 VAC)
United Kingdom BS1363	250 VAC, 13 A

## 2.3 Networking

The product communications requirements are defined in the next sections.

### 2.3.1 Ethernet

The Ethernet link speed for this product is: 10/100/1000 Mb; full duplex.

### 2.3.2 Protocols

The communications protocols supported by this product include: ARP, IPv4, IPv6, ICMP, ICMPv6, NDP, TCP, UDP, RSTP, STP, DNS, HTTP, HTTPS (TLSv1.3), SMTP, SMTPS, Modbus TCP/IP, DHCP, SNMP (V1/V2c/V3), LDAP, TACACS+, RADIUS, NTP, SSH, RS232, and Syslog.

### **2.3.3 User interfaces**

This product supports the following user interfaces: SNMP, JSON-based Web GUI, JSON API and Command line interface using SSH or serial (RS232).

This page intentionally left blank

## 3 Installation

Using the images in the [Mounting](#) on the next page, install the Vertiv™ PowerIT rPDU.

**NOTE:** Visit <http://www.Vertiv.com/ComplianceRegulatoryInfo> for important safety information prior to installation

### To install unit:

1. Wear all applicable Personal Protection Equipment (PPE). Consider using two persons when lifting and installing heavier units.
2. For horizontal units, attach mounting brackets with supplied hardware and torque fasteners to 7 In/Lb. For vertical units, install supplied toolless mounting buttons to rear of unit and torque fasteners to 13.5 In/Lb. Using appropriate hardware, attach the unit to the rack. Where applicable, installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised, and ventilation holes are not blocked.
3. Plug the Vertiv™ PowerIT rPDU into an appropriately rated and protected branch circuit receptacle.



**CAUTION:** Risk of dropping the foreign object into the body of the rPDU. Can cause equipment damage. When accessing the wiring compartment during installation to ensure no foreign object, like debris, is dropped into the body of the rPDU. If foreign objects are dropped into the rPDU during installation and cannot be recovered, DO NOT ENERGIZE the rPDU. Return the rPDU to Vertiv for repair.

For three phase WYE units, always verify a proper neutral connection is present at either the building installation branch circuit receptacle for cord-connected units or at the input wiring terminal of hardwired units. An open neutral condition can result in damage to both the rPDU and any connected equipment.

4. Plug in the devices to be powered by the Vertiv™ PowerIT rPDU.
5. Turn on each device connected to the Vertiv™ PowerIT rPDU.

**NOTE:** Sequential power-up is recommended to avoid high inrush current.

### 3.1 Mounting

Optional brackets are sold separately.

Figure 3.1 Full Length Brackets

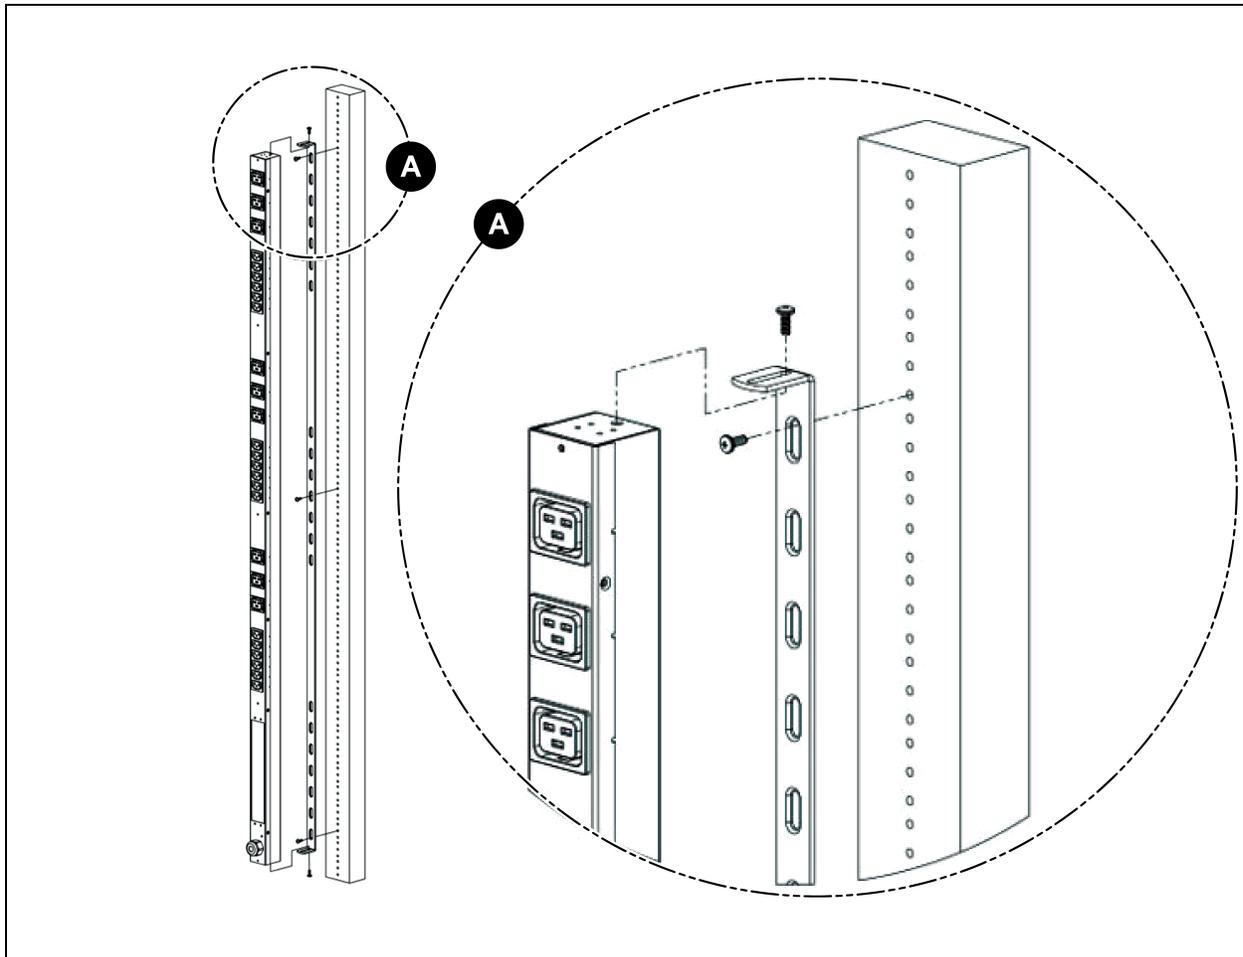


Figure 3.2 Mini L Brackets

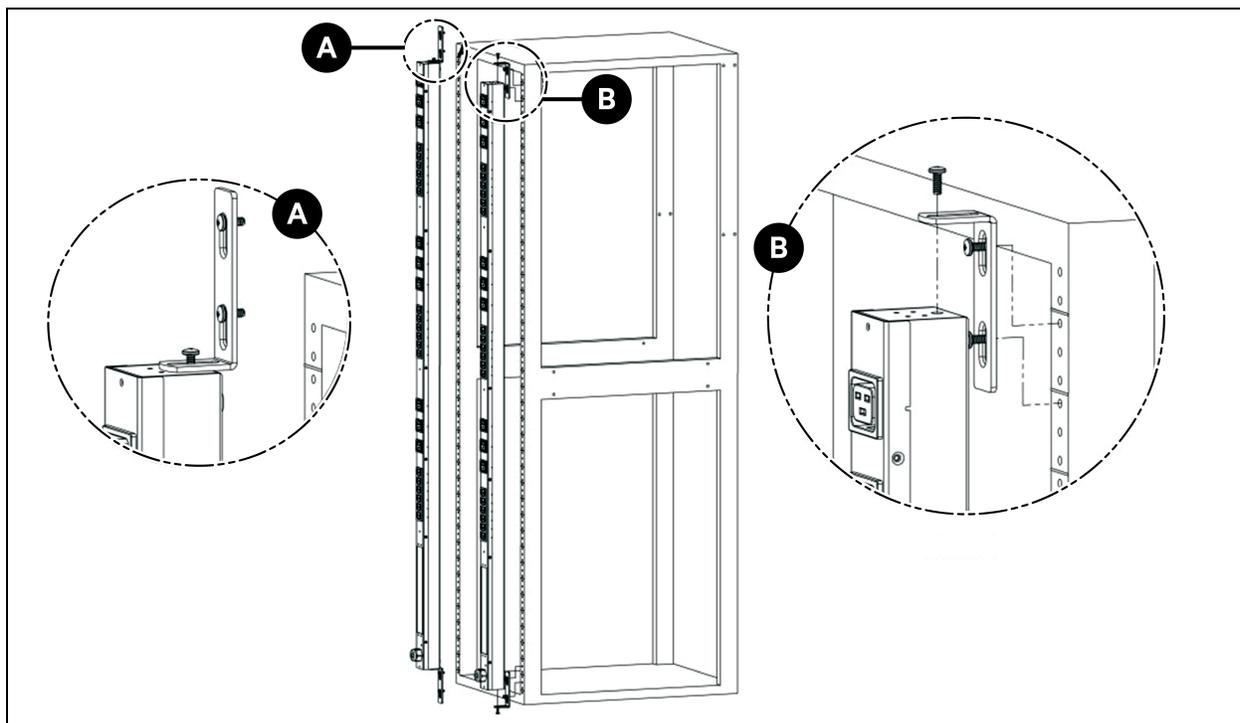


Figure 3.3 Vertical Extension Brackets

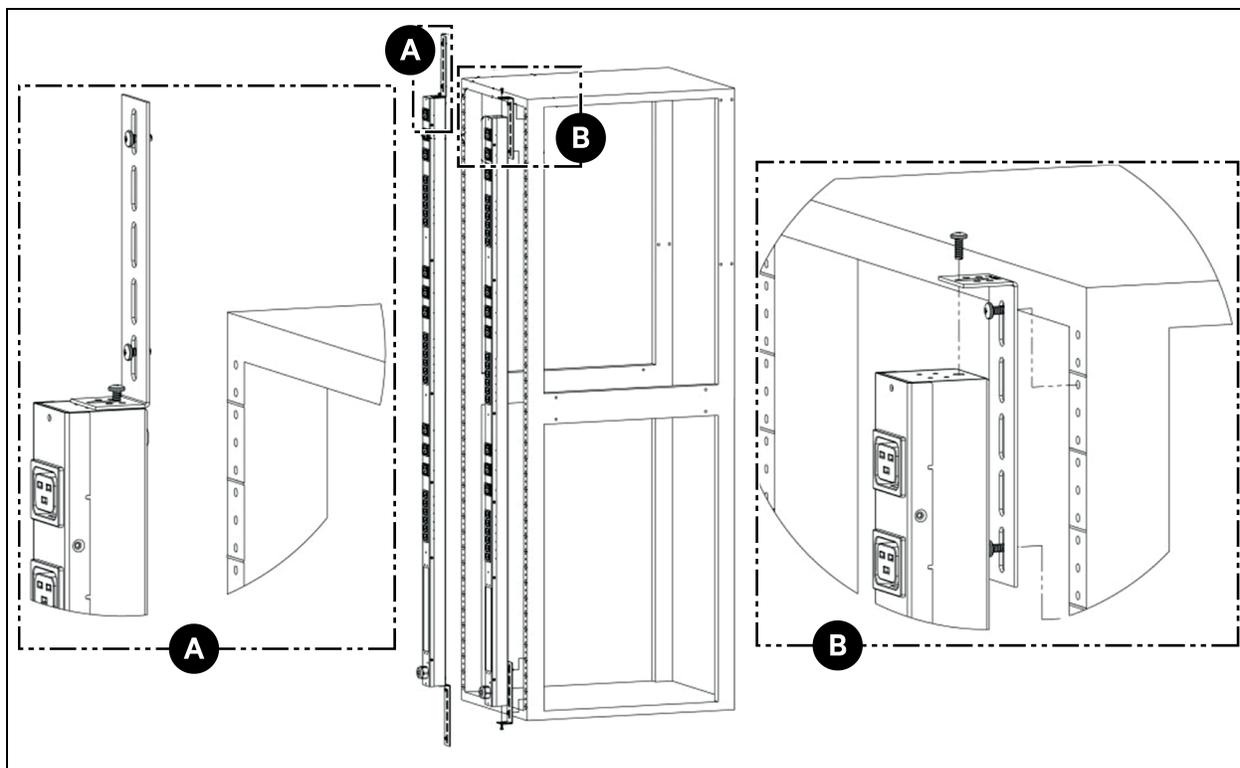


Figure 3.4 Toolless Mounting Hardware


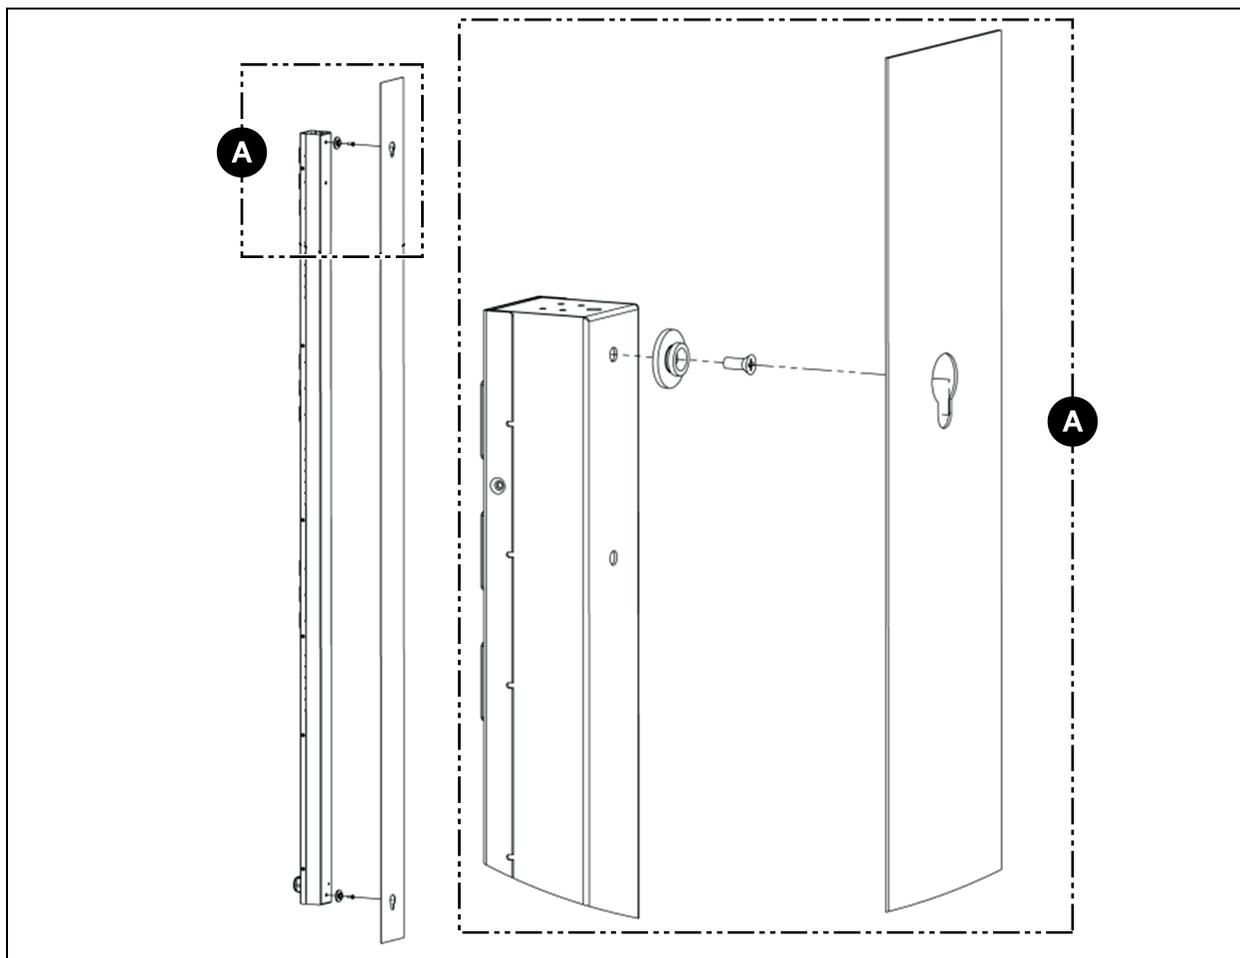


Figure 3.5 Toolless Full Length Brackets

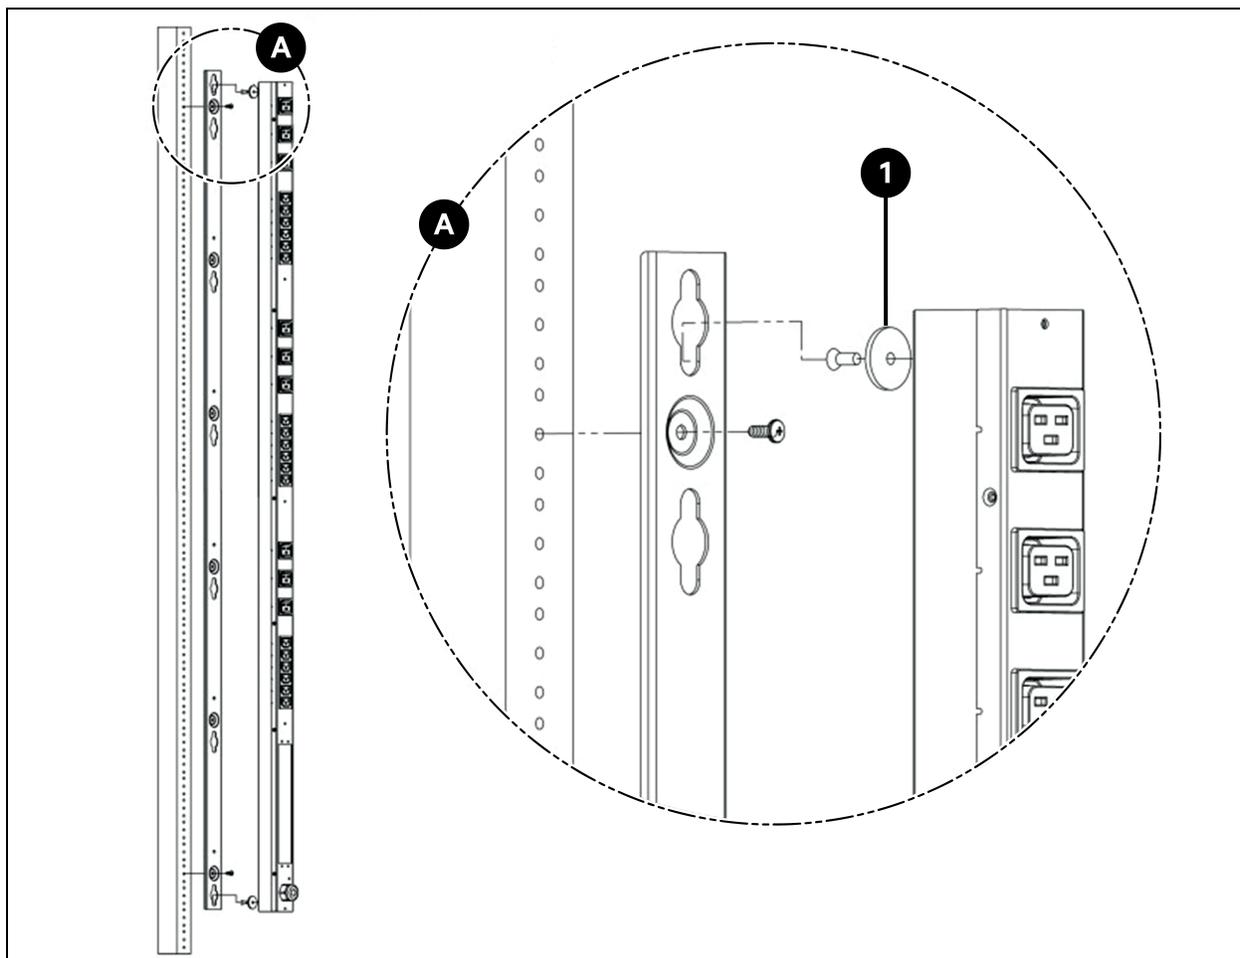

Item	Description
1	Toolless shoulder washer

Figure 3.6 Single Side Mount Two Units Brackets


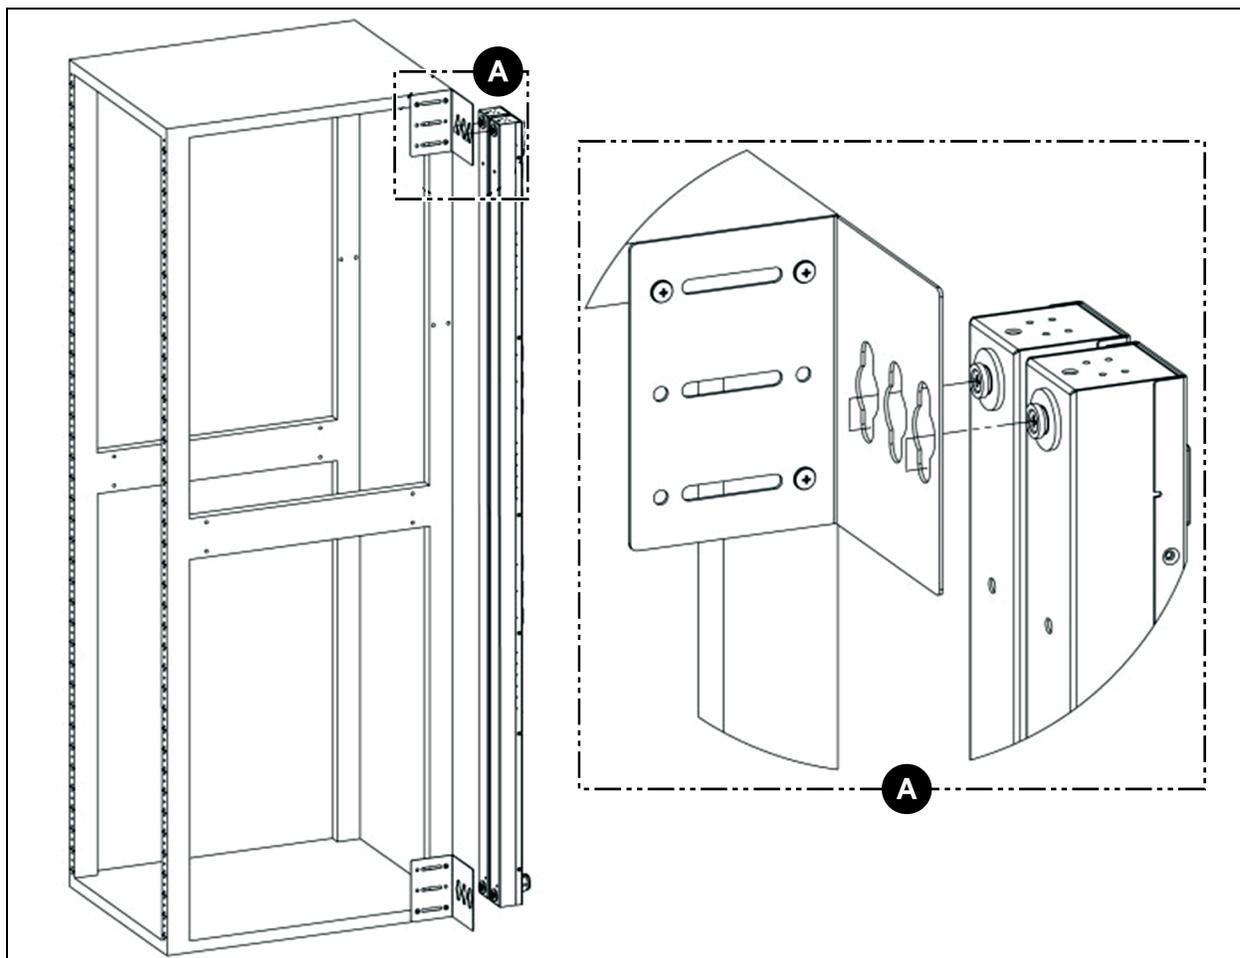


Figure 3.7 Offset/Side Mount Brackets

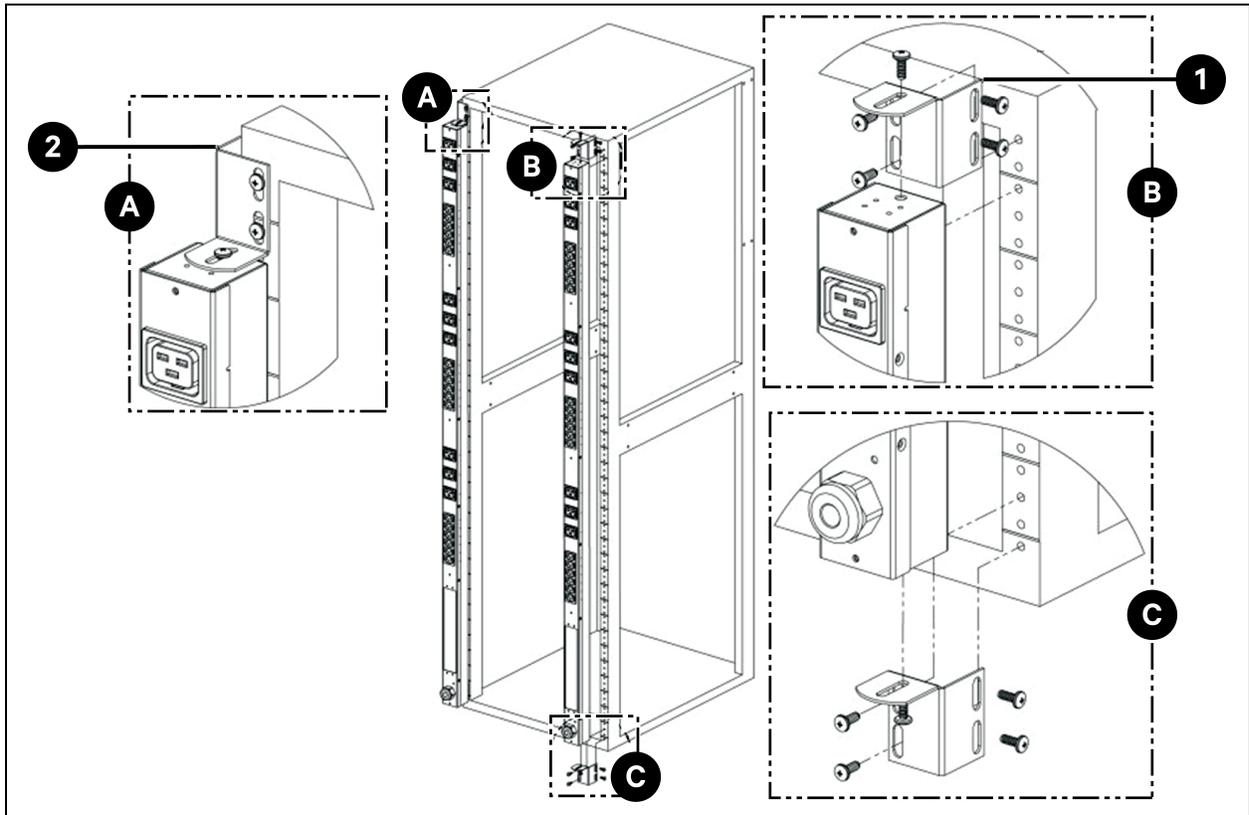

Item	Description
1	Right side option
2	Left side option

Figure 3.8 7" (inch) Extension Brackets

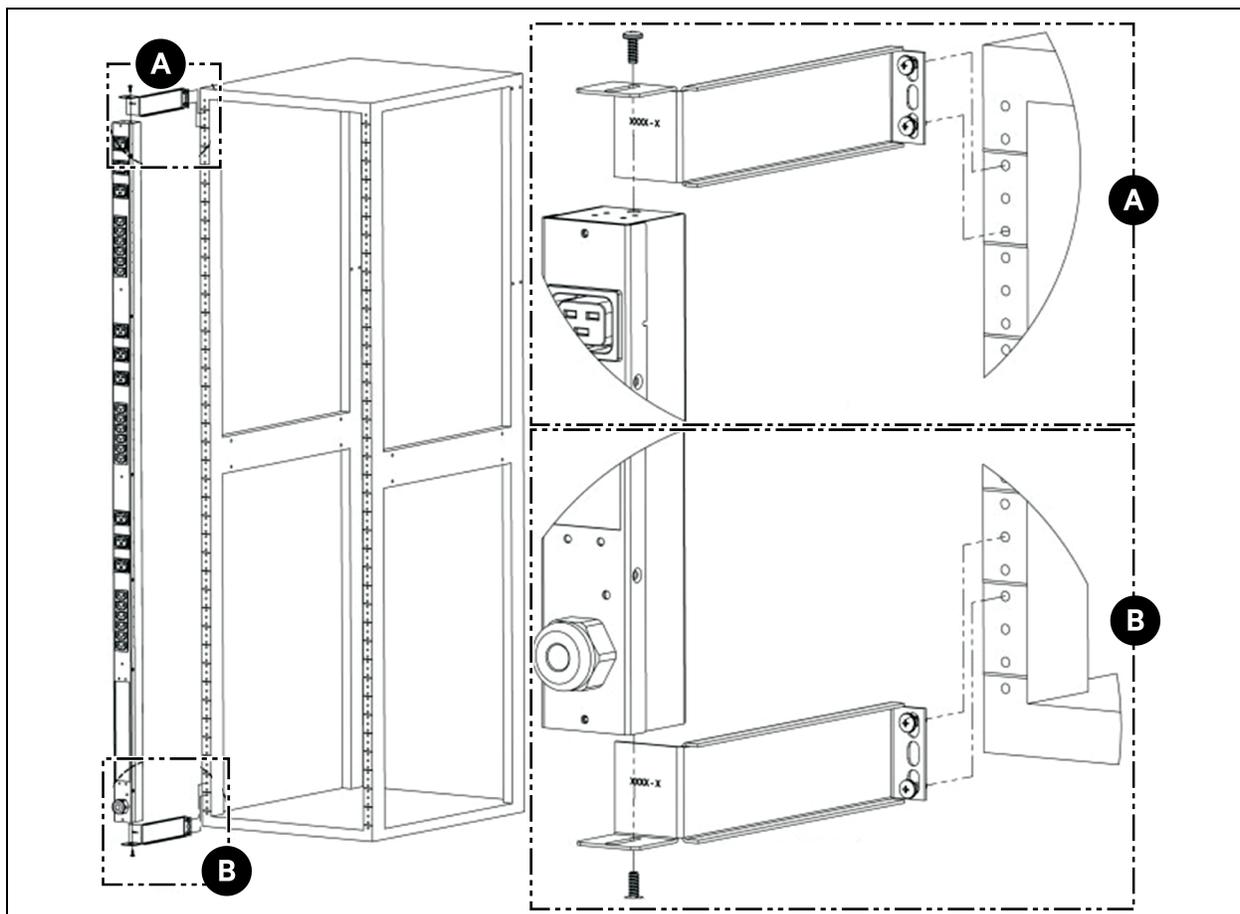


Figure 3.9 Flush Mount Bracket

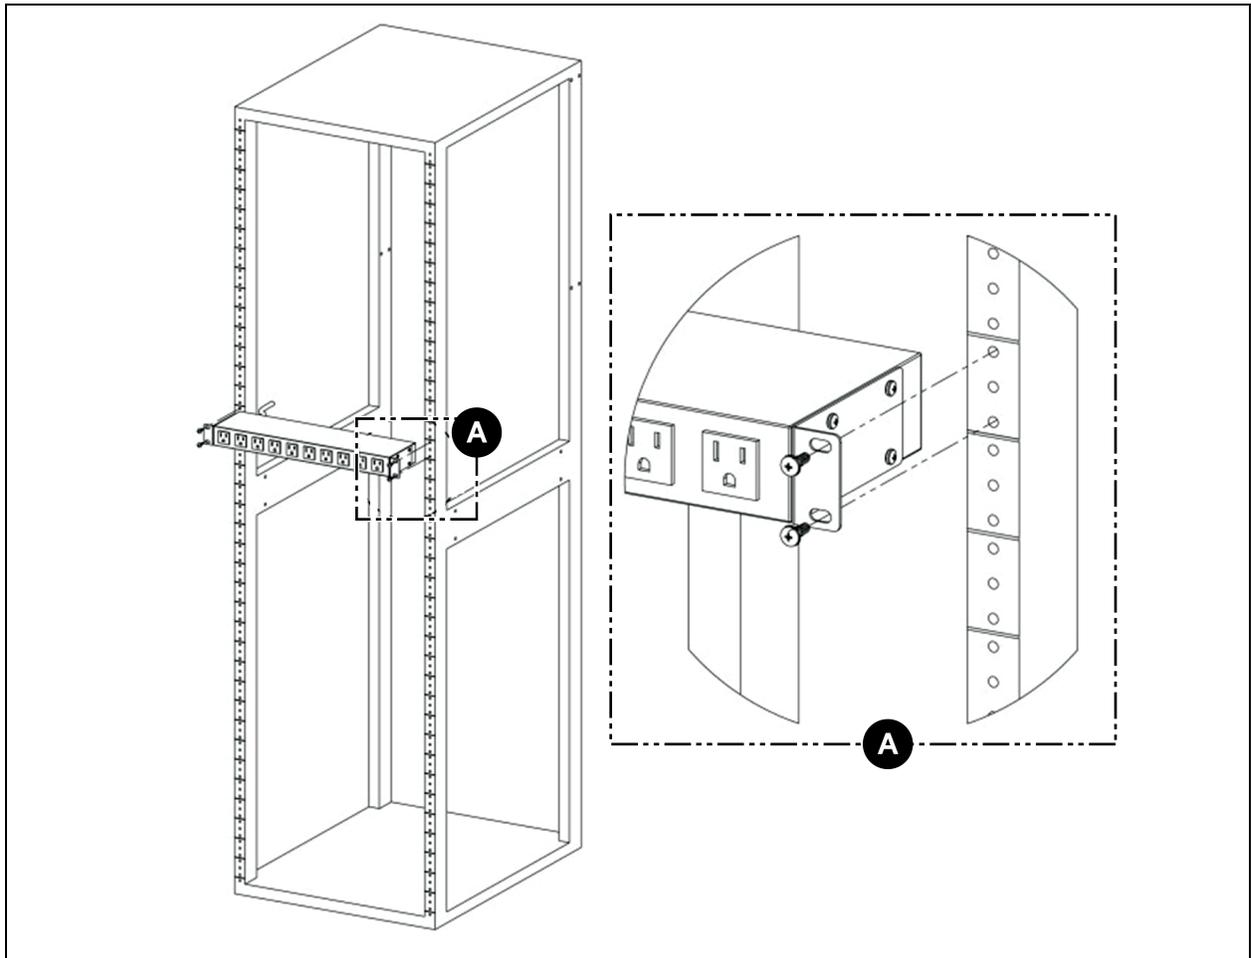


Figure 3.10 Adjustable Mount Bracket

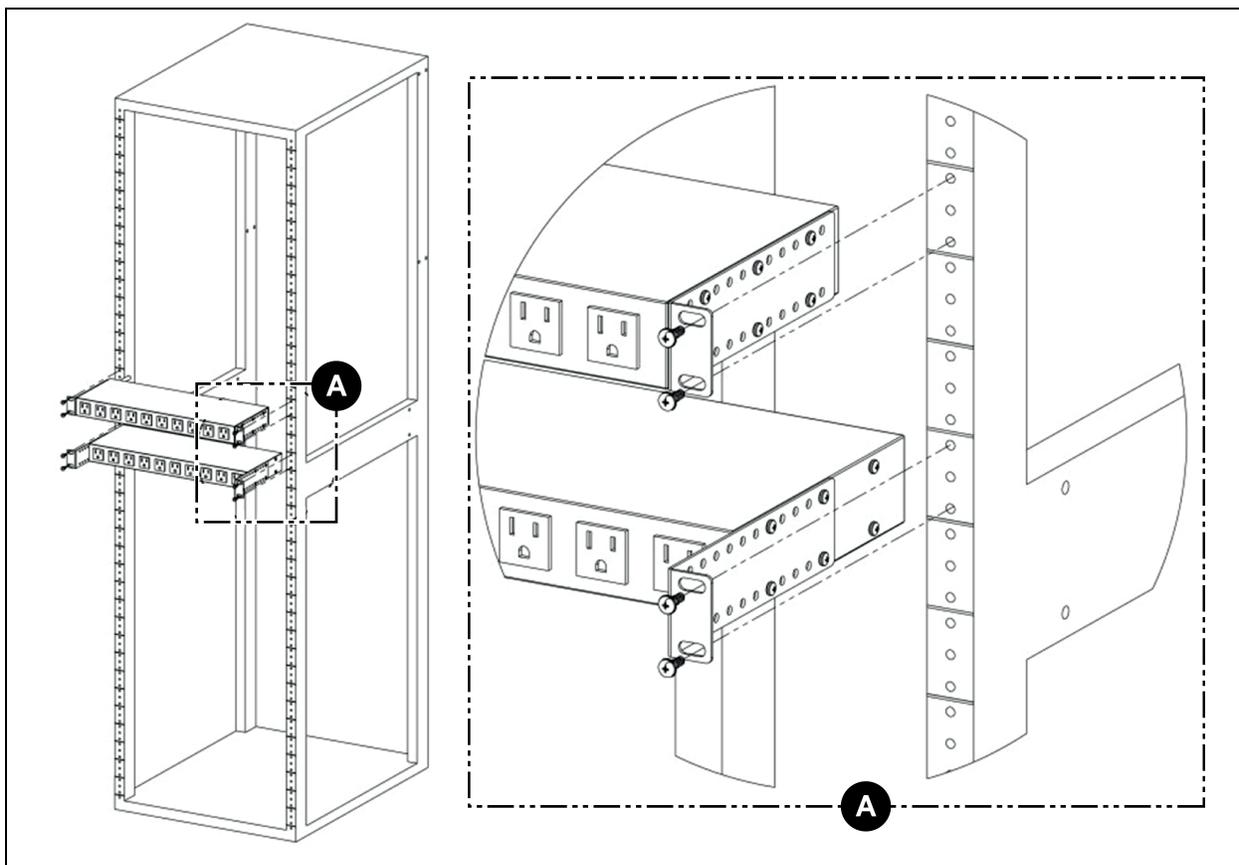


Figure 3.11 Panel Mount Bracket

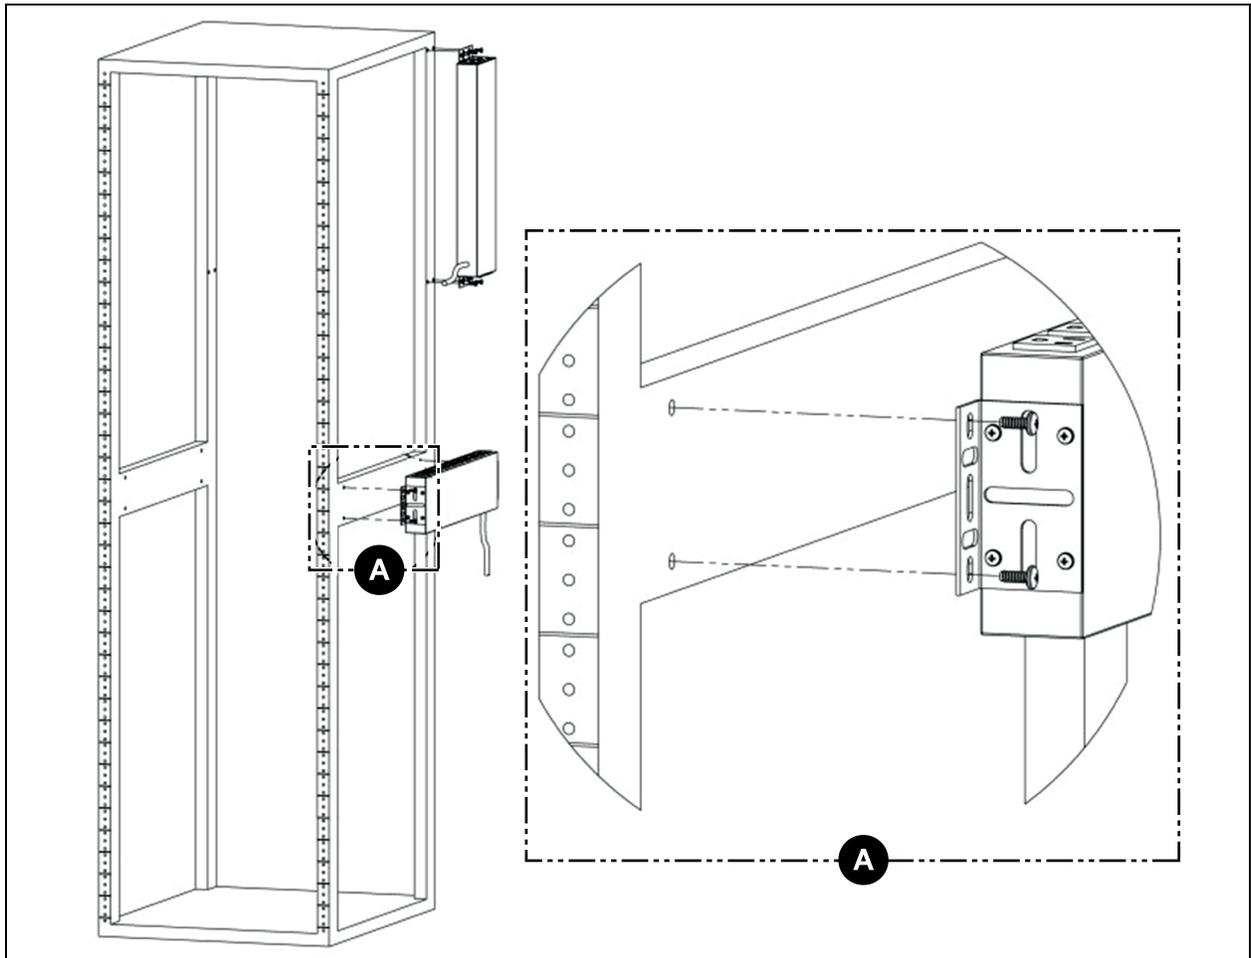


Figure 3.12 23" (inch) Conversion Mount Brackets

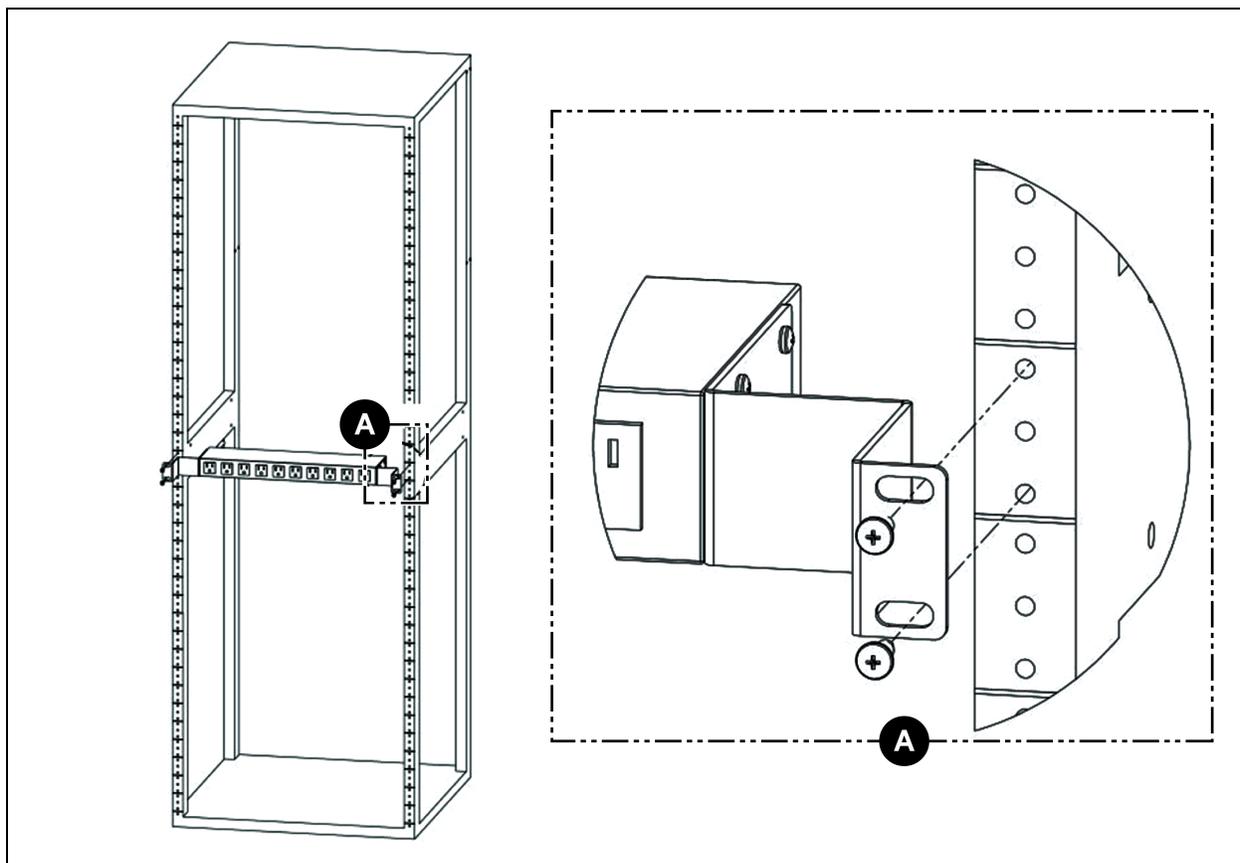


Figure 3.13 19" (inch) Horizontal/Panel-Mount Brackets


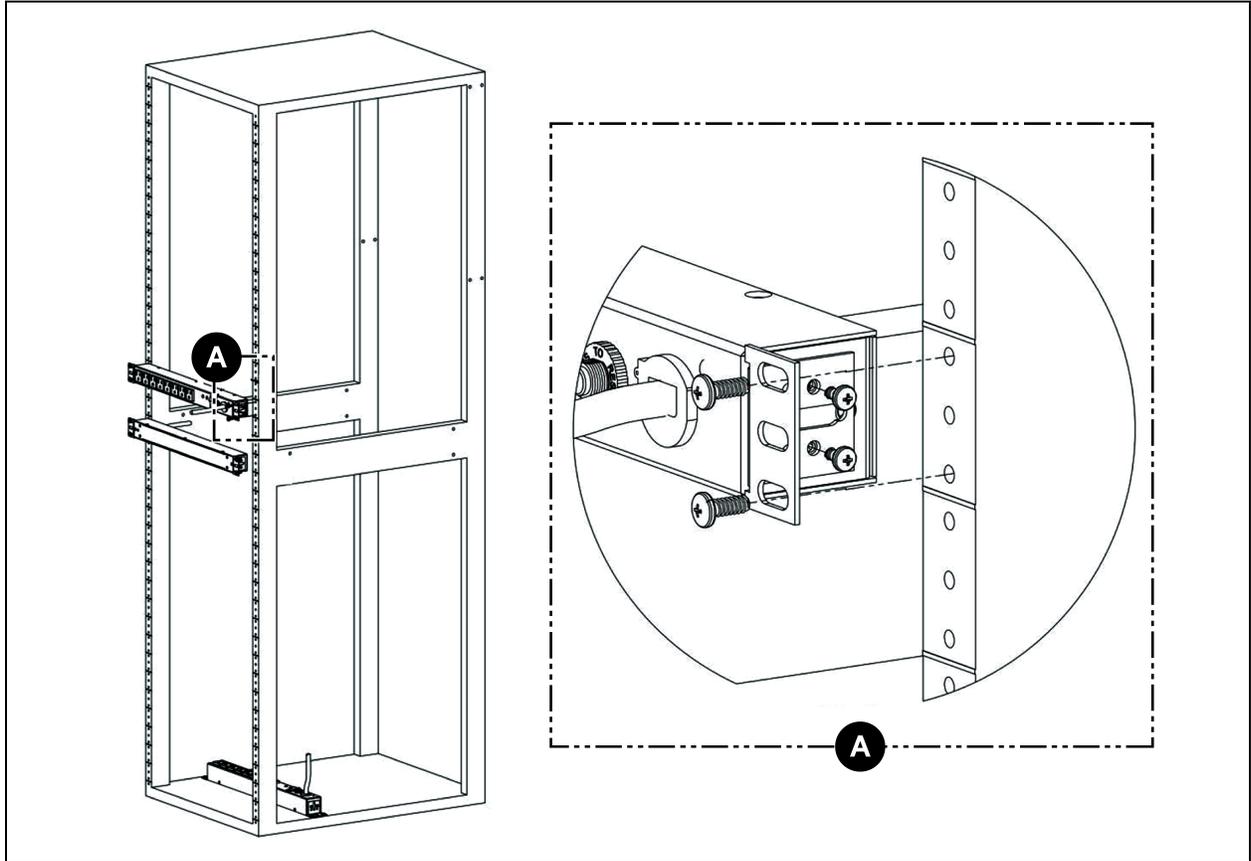


Figure 3.14 Mount Brackets for Vertiv™ PowerIT Universal Power Distribution Unit (UPDU) with Pivoting End

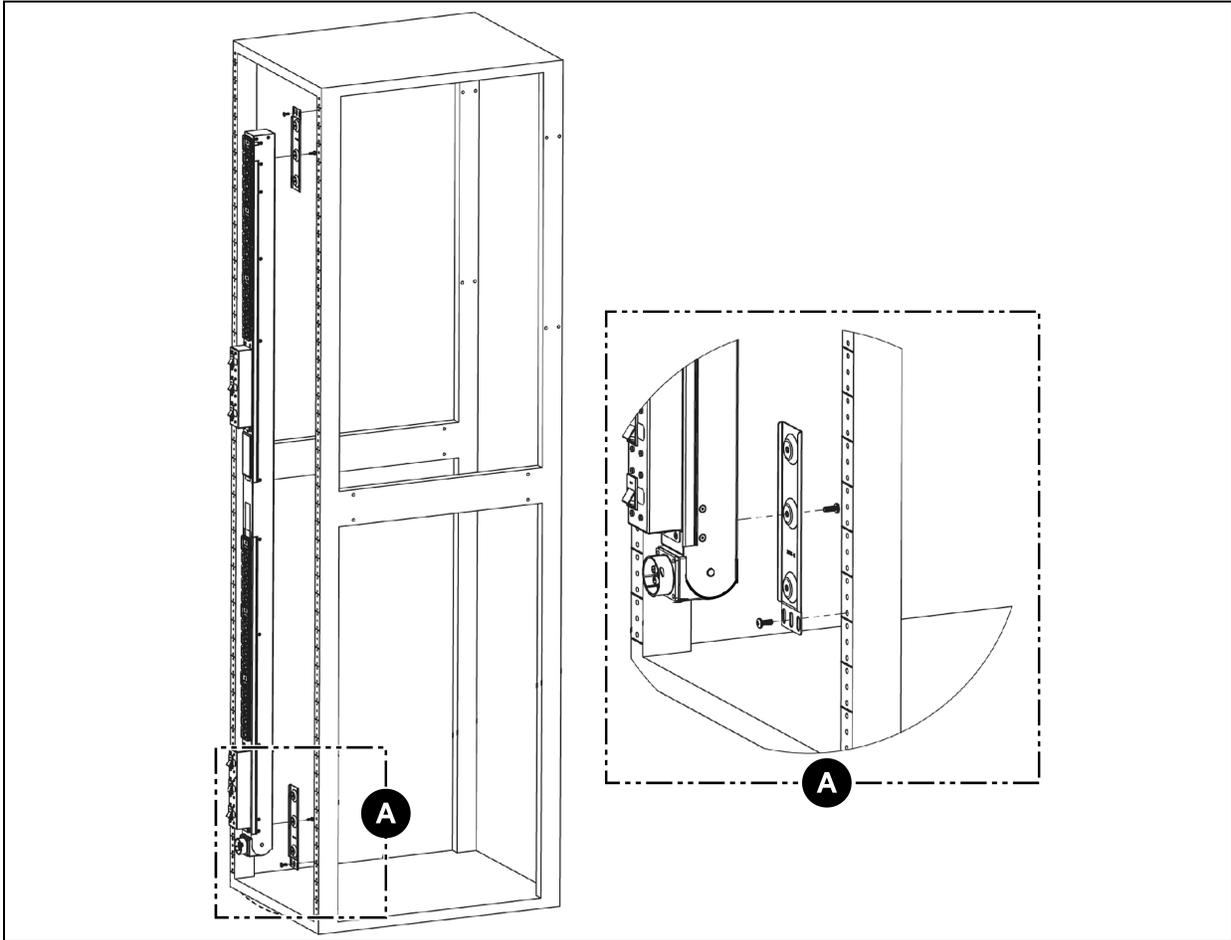

## 3.2 Power Connection

Plug the Vertiv™ PowerIT rPDU into an appropriately rated and protected branch circuit receptacle. Ensure the power cable does not exceed manufacture's bend radius (8X).

### 3.2.1 U-Lock operation

Plug in the devices to be powered by the Vertiv™ PowerIT rPDU.

- Vertiv patented U-Lock power cord retention.
- Uses standard power cords.
- Cord insertion activated locking system.
- Easy push-and-hold bezel unlocking feature.


Figure 3.15 U-Lock Cord Retention Operation



### 3.2.2 P-Lock operation

- Plug in the devices to be powered by the Vertiv™ PowerIT rPDU.
- Vertiv™ Combination C13/C19 Outlet with P-Lock power cord retention.
- Compatible with P-Lock power cords.
- Use press-and-hold tabs on the P-Lock cord to release from outlet.

Figure 3.16 P-Lock Cord Retention Operation

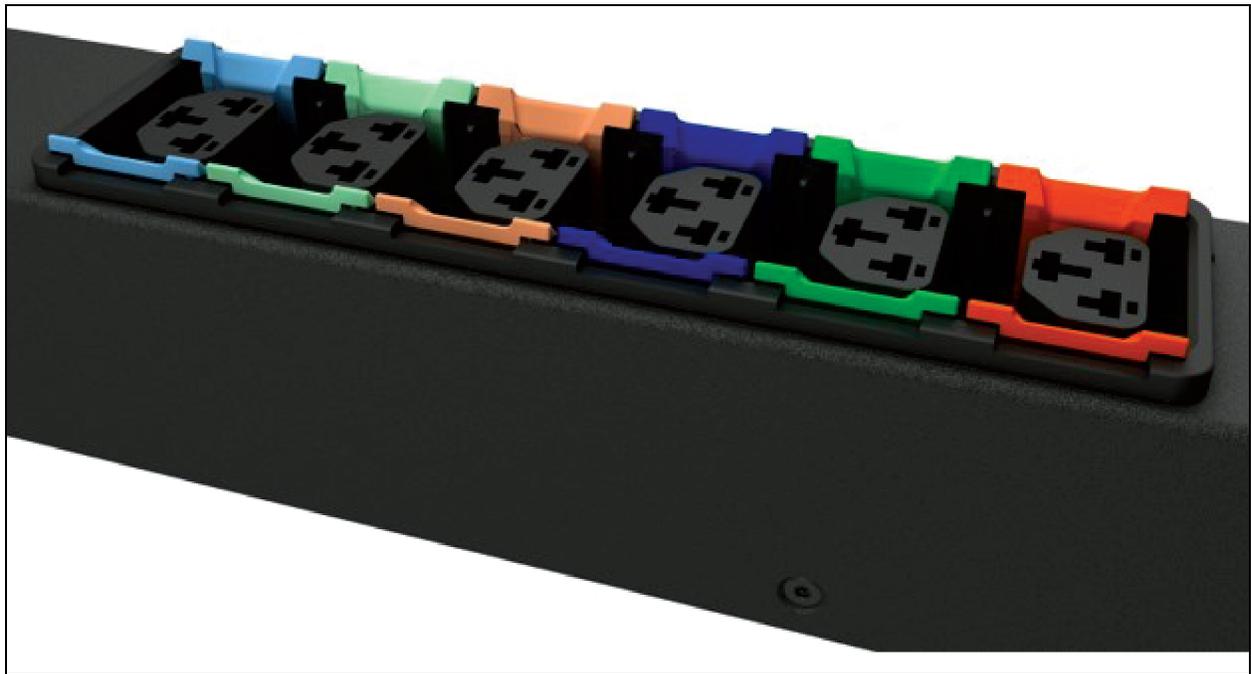

## 4 Security Best Practices

The default settings on the card support are set to the most secure configuration for deployment. Proper security of critical infrastructure equipment requires proper configuration of ALL communication services. This section summarizes the settings.

Through our Vertiv SECURE product life cycle, Vertiv is committed to minimizing cybersecurity risk in our products by deploying cybersecurity best practices across our engineering design of products and solutions, by making them more secure, reliable, and competitive for our customers.

Below are some life cycle cybersecurity recommendations. The cybersecurity recommendations are not intended to provide a comprehensive guide to cybersecurity, but rather to complement a customers existing cybersecurity programs. The following sites are available for more information on general cybersecurity best practices and guidelines:

<https://www.cisa.gov/topics/cybersecurity-best-practices>

<https://www.vertiv.com/en-us/support/security-support-center/>

**Table 4.1** below, provides a list of items to review. Each should be reviewed, configured based on the operational needs for managing the equipment, and verified that the settings support the desired operational functionality without adding unnecessary or unauthorized access to critical infrastructure equipment. A reference to the proper section in this document is provided for configuring each item.

**Table 4.1 Settings to Review and Verify to Reduce the Risk of Unauthorized Access**

Item	Description	Reference
Accounts and Passwords	Change the admin and user account names and passwords immediately to eliminate default credential access.	See <a href="#">Users</a> on page 64.
IP Network Access	Enable/disable IPV4 and IPV6 network access to the card - disable unused network access.	See <a href="#">Network</a> on page 68 .
SSHv2 Access	Enable/disable SSHv2 access for diagnostic and configuration support - disable when not in use.	See <a href="#">SSH</a> on page 85.
Web Service Protocol	Select HTTPS to use SSL encryption when accessing data through the web user interface.	See <a href="#">Web server</a> on page 78.
TLS Certificates	When using HTTPS, install your own TLS Certificates from a trusted certificate authority or generate alternative self-signed certificates.	See <a href="#">SSL Certificate: Allows you to upload your own signed SSL Certificate file to replace the default one. The certificate can be either self-signed or signed from a Certification Authority. SSL Certificate must be in either PEM or PFX (PKCS12) format.</a> on page 78 .
Remote Write Web Access	To control/write through web interface, you must log in remotely and have either an admin level or control level user account.  To prohibit remote access, disable both HTTP and HTTPS.	See <a href="#">Web server</a> on page 78.

**Table 4.1 Settings to Review and Verify to Reduce the Risk of Unauthorized Access (continued)**

Item	Description	Reference
	 <b>WARNING! Disabling both HTTP and HTTPS will immediately terminate this connection and remote access will only be available using SSH.</b>	
Communication Protocols	Enable/disable SNMP - disable unused protocols.	See <a href="#">Modbus</a> on page 90.
SNMP Version Settings	Enable/disable the desired SNMP versions, consider using SNMPv3 with user authentication and encryption.	See <a href="#">SNMP</a> on page 88.
SNMP Access Table Settings	For each SNMPv1/v2c Access table entry, set the SNMP Access Type to Read-Only to prevent changes to the device from the hosts identified in the table entry.	See <a href="#">SNMP</a> on page 88.
SNMP Community Strings	Use suitably strong values for SNMP communication in line with your organizations password policy.	See <a href="#">SNMP</a> on page 88.
SNMPv3 Settings	Use suitable hashing and encryption algorithms for SNMPv3 Authentication and Privacy settings to make SNMPv3 communications more secure.	See <a href="#">SNMP</a> on page 88.
Guest user account	This account should remain disabled, unless required. As it provides read-only access to device and may give additional context to device settings if enabled.	See <a href="#">Users</a> on page 64.

For added security, the local network firewall and gateway may be restricted to allow only the necessary traffic on the required network ports. The ports used by the MRIC-RP card are listed in the following table. Some port settings may be changed by the administrator.

**Table 4.2 Ports Used by the MRIC-RP Card (v6.1 or higher)**

Network Service	Port used	Default	Modification Required
HTTP	TCP80	N	Y
HTTPS	TCP443	Y	Y
DNS	TCP&UDP 53	Y	N
NTP	TCP&UDP 123	Y	N
SMTP	TCP25	Y	Y
SSH	TCP UDP 22	Y	N
SNMP	UDP 161, 162	N	Only trap port 162 may be changed.
Modbus	TCP 502	N	Y
VID/VIP	GDP/HTTP	N	N
DHCP Client	UDP 68	Y	N
GDP (Geist Discovery Protocol)	UDP 6687	Y	N
LDAP	TCP 389	N	Y
RADIUS	UDP1812/1813/1645/1646	N	N
TACACS	TCP 49	N	N
Remote Syslog	TCP 514	N	Y

Details for configuration of all options are provided in the remainder of this guide.

## 4.1 Risk Assessment

Vertiv recommends conducting a risk assessment to identify and assess reasonably foreseeable internal and external risks to the security, availability and integrity of the system and its environment. This exercise should be conducted in accordance with applicable technical and regulatory frameworks such as IEC 62443 and NERC-CIP. The risk assessment should be repeated periodically.

## 4.2 Physical Security

The IMD5 is designed and intended to be deployed and operated in a physically secure location. Vertiv recommends a review of the physical security and operating environment of the unit. Since an attacker or insider threat can cause serious disruption, below are some recommended best practices that include, but are not limited to:

- Restrict access to areas, racks, and units with encrypted card RFID/badges, unique multi-factor passcode authentication for access, man traps, and biometric scanners for physical access to the equipment.
- Trusted and background checked security guards with 24x7x365 physical presence and written logs to help document and note physical access to a data center, building and rack.
- Restricted physical access to telecommunications equipment and network cabling. Physical access to the telecommunication lines and network cabling should be restricted to protect against attempts to intercept or sabotage communications. Best practices include uses of metal conduits for the network cabling running between equipment cabinets.
- All USB, RJ45, and/or any other physical ports should be restricted on the units.
- Do not connect removable media (Such as USB devices and SD cards) for any operation (Such as firmware upgrade, configuration change, or boot application change) unless the origin of the media is known and trusted. Before connecting any portable device through a USB port or SD card slot, scan the device for malware and viruses.

## 4.3 Account Access

The IMD5 account access privileges should be administered to provide the least account functions that still enables the end-user to perform their job functions. Login to the IMD5 should be restricted to legitimate users. Some of the following best practices should be adopted by an organization's written procedures for network and equipment access:

- First login to the IMD5 requires credentials to be created.
- No account/logon sharing. Each user should have their own specific account and password. Logging functions of the IMD5 expect each account to be a unique non-shared user.
- Admins should restrict access and privileges to only the required functions of the user's job function.
- Restrict all admin-level privileges (Such as firmware updates, protocol enablement/disablement.) to only approved administrators.
- Ensure password strength, complexity, and length requirements are enforced at the highest level per company IT policy.
- Ensure terminated employees instantly are removed from accessing the unit. Some examples include the user of a AAA, TACACS+ user authentication process.
- Enforce session time-out after a period of inactivity.
- Use the remote syslog facility to alert you to system and network events, security threats, and visibility into the device to troubleshoot problems. (This may also be required in your environment for PCI-DSS/SOX/HIPAA compliance).

This page intentionally left blank

## 5 Setup

### 5.1 Interchangeable Monitoring Device

The Interchangeable Monitoring Device (IMD) is the core behind the Upgradable Vertiv™ PowerIT rPDU line of power products. The IMD can be replaced and upgraded to allow data centers to future proof their locations. Installing the wrong IMD for replacement in an rPDU can lead to damage to the IMD.

#### 5.1.1 Basic

The Basic Upgradable Vertiv™ PowerIT rPDU is built with the IMD-01X module, and provides low cost power distribution with the option to upgrade to add local metering and/or remote monitoring and other features in the future.

#### 5.1.2 Metered

The Metered Upgradable Vertiv™ PowerIT rPDU, a locally metered option, is built with the IMD-01D module, and provides a local display for viewing current draw (Amps) with the option to upgrade to add monitoring and other features in the future.

Figure 5.1 IMD-01D Module



Table 5.1 IMD-01D Module Descriptions

Item	Name	Description
1	Local Display	The local display shows the phase, line, and circuit current values (in Amperes).
2	Display Buttons	There are three buttons near the IMD display; a back button, a forward button, and a center button. The functions of these buttons are described in the <b>Table 5.2</b> on the next page.

**Table 5.2 Display Button Functions**


Button	Symbol	Description
Back Button		Decrement to the previous channel.
Forward Button		Increment to the next channel.
Center Button		Toggle between scrolling and static display modes. Holding this button for 10 seconds will perform a network reset, restoring the default IP address and resetting user account information.
Center Button x3		Pressing this button three times within two seconds enables VLC mode. Pressing the button while VLC mode is active returns the unit to the standard current display.
Back and Forward Buttons		Pressing both buttons at the same time flips the display 180 degrees.

**NOTE:** Display button functionality may vary based on unit configuration.

### 5.1.3 Unit monitored

Previous versions of the Vertiv™ Unit Level Monitoring Vertiv™ PowerIT rPDUs were shipped with the IMD-03E-G module.

**Figure 5.2 IMD-03E-G Module**

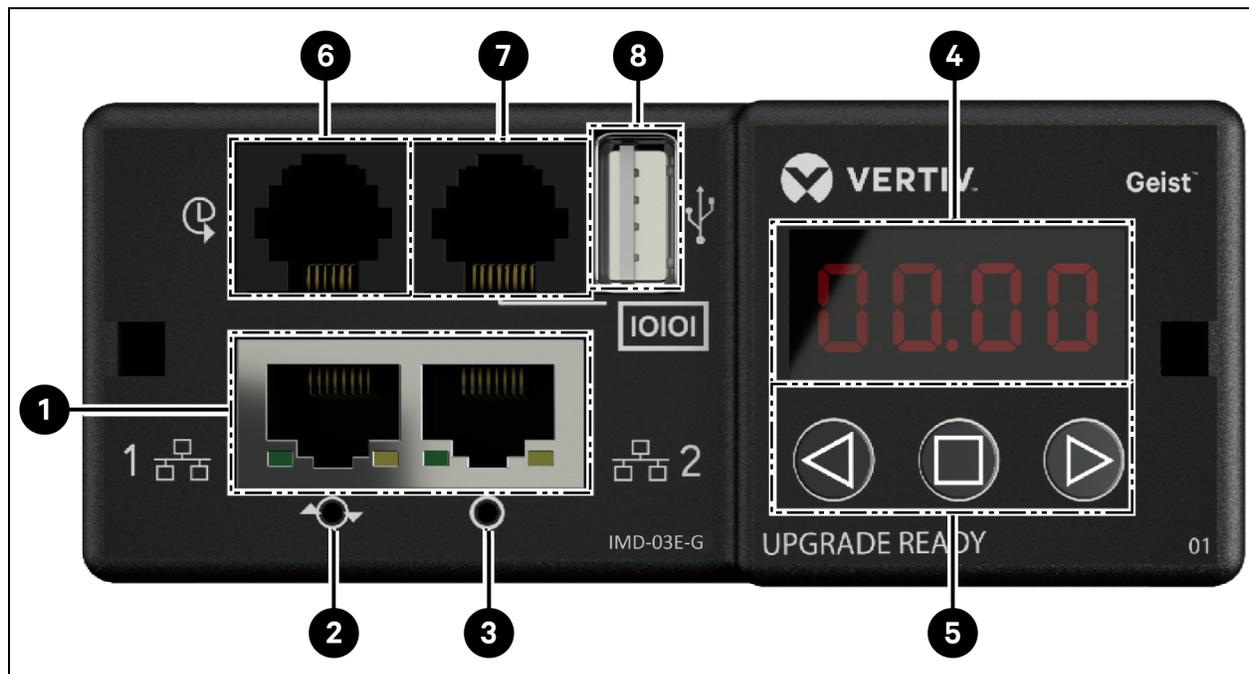

**Table 5.3 IMD-03E-G Module Descriptions**

Number	Name	Description
1	Dual Ethernet Ports	The dual Ethernet ports act as a two-port Ethernet switch, allowing for multiple devices to be daisy-chained. The dual Ethernet ports can be independently configured dual Ethernet network interfaces, allowing the rPDU to connect to two different networks.
2	Hard-Reboot Button	Pressing the hard-reboot button reboots the IMD. This acts as a power-cycle for the IMD; it does not change or remove any user information.
3	Network Reset Button	Holding the network reset button for 5 seconds during normal operation will restore the default IP address and reset the user accounts.
4	Local Display	The local display shows the phase, line and circuit current values (in amperes).
5	Display Buttons	There are three buttons near the IMD display: a back button, a forward button and a center button. The functions of these buttons are described in the <b>Table 5.4</b> below.
6	Remote Sensor Port	RJ-12 port for connecting a Vertiv™ plug-and-play remote digital sensors (sold separately). Each digital sensor has a unique serial number and is automatically discovered. Unit Monitored PDUs support up to 16 sensors. The optional Vertiv™ A2D Converter can be added to support analog sensing. The optional SN-ADAPTER can be added to support Liebert Integrated and Modular Sensors. For more information, see <a href="#">Available Sensors</a> on page 117.
7	Serial Port	RS-232 via RJ-45 port.
8	USB Port	USB port used to upload firmware, backup/restore device configuration, expand logging capacity via a USB storage device or support TP-Link wireless USB adapters. The USB port must be enabled - see <a href="#">USB</a> on page 85. Provides up to 100 mA power capacity for USB - connected devices.

**NOTE: Serial connection does not support flow control.**

**Table 5.4 Display Button Functions**

Button	Symbol	Description
Back Button		Press to decrement to previous channel.  Holding the button for 3 seconds initiates a configuration backup. The display will show a <b>bcup</b> message while the backup is being generated and will then go back to normal operation. The backup is stored on available USB storage devices and the operation will do nothing if no such drives are available.
Forward Button		Press to increment to next channel.  Holding this button for 3 seconds initiates a configuration restore. The display will show a <b>load</b> message followed by a <b>conf</b> message and then a 3 second countdown. Once the countdown expires, a <b>8888</b> message is displayed and the backup will be applied. The backup will be read from USB storage devices. If the button is released at any time during this sequence, the restore is aborted. Once the backup is applied, or if there are no backup images or no USB storage device attached, the display will then go back to normal operation.
Center Button		Toggle between scrolling and static display modes. Holding this button for 3 seconds initiates a parameter reset sequence. This sequence consists of an <b>rset</b> message, followed by a <b>dfit</b> message and then a 3 second countdown. Once the countdown expires, an <b>8888</b> message is displayed and the network, <i>http</i> user accounts and <i>LDAP/RADIUS</i> information is reset to default values. If the button is released at any time during this sequence, the reset will be aborted.


**Table 5.4 Display Button Functions (continued)**

Button	Symbol	Description
Center Button x3		Pressing this button 3 times within 2 seconds enables VLC mode. Pressing the button while VLC mode is active returns the unit to the standard current display.
Back and Forward Buttons	 and 	Pressing both buttons at the same time flips the display 180 degrees.
Back and Center Buttons	 and 	Pressing both buttons at the same time displays the primary IPv4 address for the unit.

### 5.1.4 Switched and outlet monitored

Previous versions of the Vertiv™ PowerIT Switched Unit Level Monitoring, Outlet Level Monitoring and Switched Outlet Level Monitoring rPDUs were shipped with the IMD-3E-G module.

**Figure 5.3 IMD-3E-G Module**

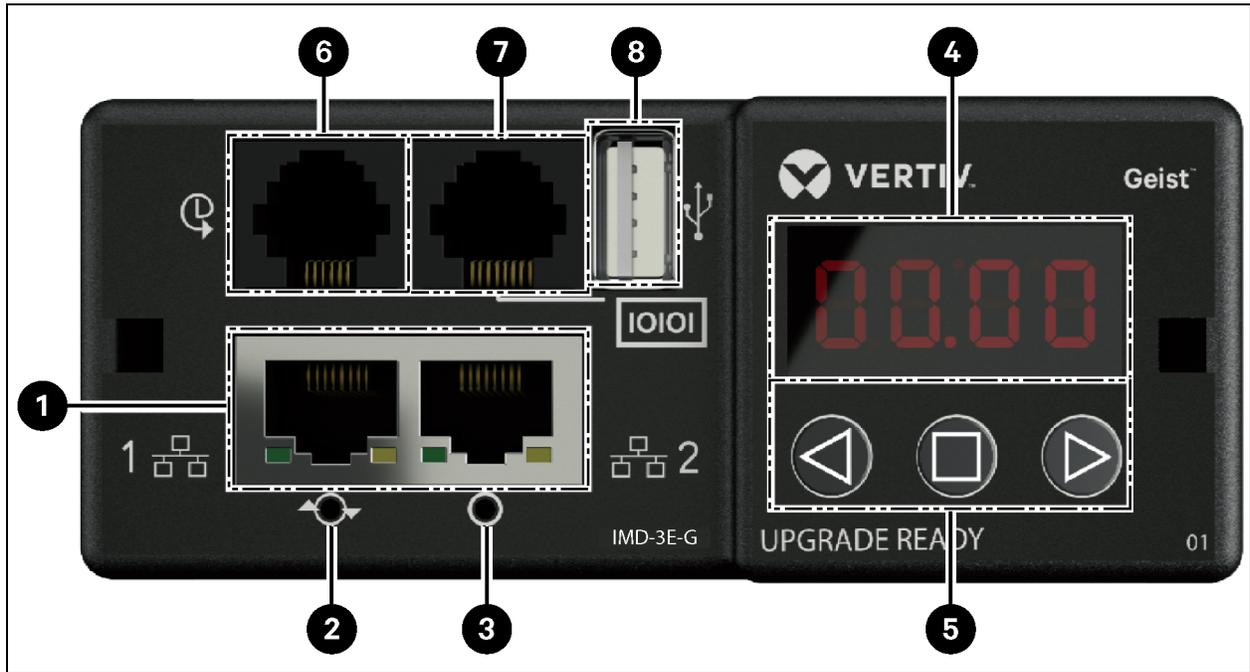

**Table 5.5 IMD-3E-G Module Descriptions**

Number	Name	Description
1	Dual Ethernet Ports	The dual Ethernet ports act as a two-port Ethernet switch, allowing for multiple devices to be daisy-chained. The dual Ethernet ports can be independently configured dual Ethernet network interfaces, allowing the rPDU to connect to two different networks.
2	Hard-Reboot Button	Pressing the hard-reboot button reboots the IMD. This acts as a power-cycle for the IMD; it does not change or remove any user information.
3	Network Reset Button	Holding the network reset button for 5 seconds during normal operation will restore the default IP address and reset the user accounts.
4	Local Display	The local display shows the phase, line and circuit current values (in amperes).
5	Display Buttons	There are three buttons near the IMD display: a back button, a forward button and a center button. The functions of these buttons are described in the <a href="#">Display Button Functions</a> on the next page.
6	Remote Sensor Port	RJ-12 port for connecting a Vertiv plug-and-play remote digital sensors (sold separately). Each digital sensor has a unique serial number and is automatically discovered. Switched and Outlet Monitored PDUs support up to 16 sensors. The optional Vertiv™ A2D Converter can be added to support analog sensing. The optional SN-ADAPTER can be added to support Liebert Integrated and Modular Sensors. For more information, see <a href="#">Available Sensors</a> on page 117.
7	Serial Port	RS-232 via RJ-45 port.
8	USB Port	USB port used to upload firmware, backup/restore device configuration, expand logging capacity via a USB storage device or support TP-Link wireless USB adapters. The USB port must be enabled - see <a href="#">USB</a> on page 85. Provides up to 100 mA power capacity for USB - connected devices.

**NOTE: USB MSC devices such as thumb drives or external hard drives are supported. USB storage devices must be formatted as FAT32.**

**NOTE: Serial connection does not support flow control.**

## Display Buttons

There are three buttons near the IMD display: a back button, a forward button and a center button. The functions of these buttons are described in the following table.


**Table 5.6 Display Button Functions**

Button	Symbol	Description
Back Button		Press to decrement to previous channel.  Holding this button for 3 seconds initiates a configuration backup. The display will show a <b>bcup</b> message while the backup is being generated and will then go back to normal operation. The backup is stored on available USB storage devices and the operation will do nothing if no such drives are available.
Forward Button		Press to increment to next channel.  Holding this button for 3 seconds initiates a configuration restore. The display will show a <b>load</b> message followed by a <b>conf</b> message and then a 3 second countdown. Once the countdown expires, a <b>8888</b> message is displayed and the backup will be applied. The backup will be read from USB storage devices. If the button is released at any time during this sequence, the restore is aborted. Once the backup is applied, or if there are no backup images or no USB storage device attached, the display will then go back to normal operation.
Center Button		Toggle between scrolling and static display modes. Holding this button for 3 seconds initiates a parameter reset sequence. This sequence consists of an <b>rset</b> message, followed by a <b>dfit</b> message and then a 3 second countdown. Once the countdown expires, an <b>8888</b> message is displayed and the network, http, user accounts and LDAP/RADIUS information are reset to default values. If the button is released at any time during this sequence, the reset will be aborted.
Center Button x3		Pressing this button three times within 2 seconds enables VLC mode. Pressing the button while VLC mode is active returns the unit to the standard current display.
Back and Forward Buttons	 and 	Pressing both buttons at the same time flips the display 180 degrees.
Back and Center Buttons	 and 	Pressing both buttons at the same time displays the primary IPv4 address of the unit.

### 5.1.5 Monitored and switched (IMD-5M)

All Vertiv™ PowerIT Monitored and Switched rPDUs are shipped with the IMD-5M module.

Figure 5.4 IMD-5M Module

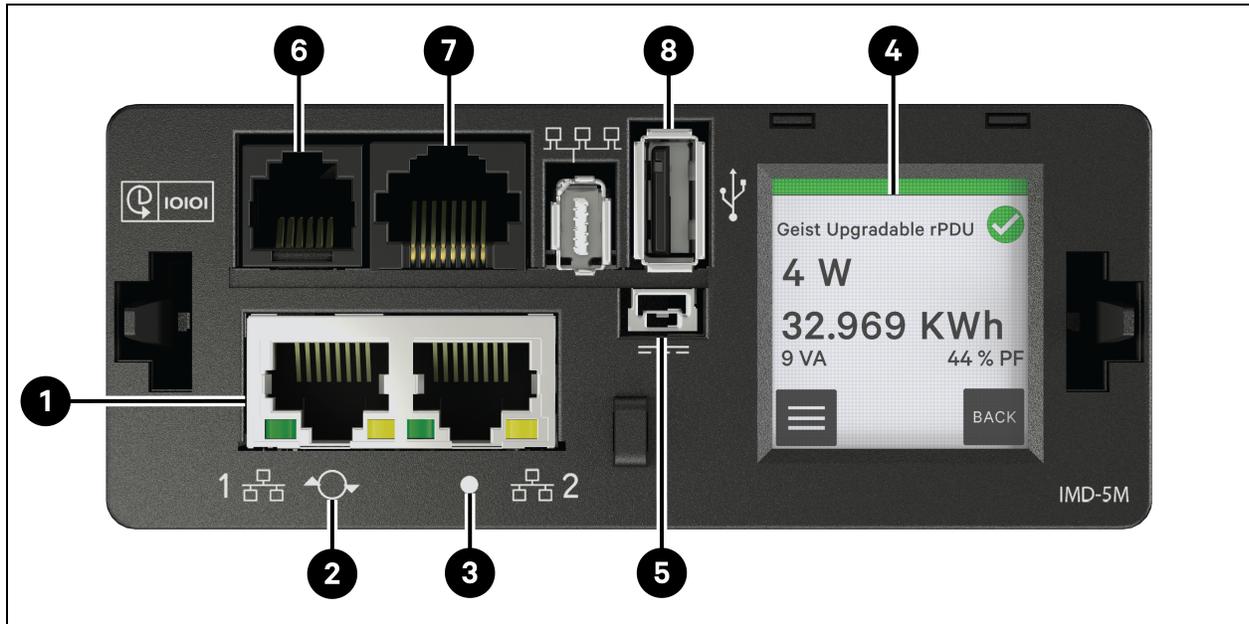

Item	Name	Description
1	Dual Ethernet ports	The dual Ethernet ports act as a two-port Ethernet switch, allowing for multiple devices to be daisy-chained. The dual Ethernet ports can be independently configured dual Ethernet network interfaces, allowing the rPDU to connect to two different networks.
2	Restart/Reset button	Press and hold the button for 10 seconds restarts the IMD. This acts as a power cycle for the IMD; it does not change or remove any user information. Press and hold the button for 25 seconds during normal operation will restore the default IP address and reset the user accounts.
3	RGB status LED	Green LED: Unit is up and running. Yellow LED: Unit is booting up.
4	Touchscreen menu	Use the touchscreen menu to find the phase, line, and circuit current values (in amperes).
5	Redundant power input	Redundant power will not work with older Basic Upgradeable, Metered Upgradeable and Unit Monitored rPDUs upgraded with the IMD-5M.
6	Remote Sensor Port	RJ-12 port for connecting a Vertiv™ plug-and-play remote digital sensors (sold separately). Each digital sensor has a unique serial number and is automatically discovered. Monitored and Switched PDUs support up to 16 sensors. The optional Vertiv™ A2D Converter can be added to support analog sensing. The optional SN-ADAPTER can be added to support Liebert® Integrated and Modular Sensors. For more information, see <a href="#">Available Sensors</a> on page 117.
7	Serial port	RS-232 via RJ-45 port.
8	USB port	USB port used to upload firmware, backup/restore device configuration, expand logging capacity via a USB storage device or support TP-Link wireless USB adapters. The USB port must be enabled - see <a href="#">USB</a> on page 85. Provides up to 0.5 watt for Unit Monitored Level and 5 watt for Monitored Outlet Level/Switched Unit Level/Switched Outlet Level.

**NOTE: Serial connection does not support flow control.**

### Touchscreen Menu Workflow

Each section is composed of one or more page groups, with each page group containing one or more pages. Most pages include Home, Enter and Next buttons. The only exceptions are the startup splash screen, the home page, pages displayed during firmware update, and pages momentarily displayed confirming results of an operation. The Home  button navigates to the home page. The Enter  button navigates the next page in the page group. If at the last page of the page group, navigation is to the first page of the page group. The Next  button navigates to the first page in the next page group. If at the last page group, navigation is to the first page group.

The top line of every page includes the System Label on a green, yellow or red background indicating the highest priority non-acknowledged alarm, along with an icon for additional alarm status indication. Additionally, the alarming measurement is displayed in yellow or red.

#### Home Page

The home page consists of links to the following three sections:

- System
- Devices
- Alarms

The home page is the only page without Home, Next, and Enter Navigation buttons.

Figure 5.5 Touchscreen Menu Workflow

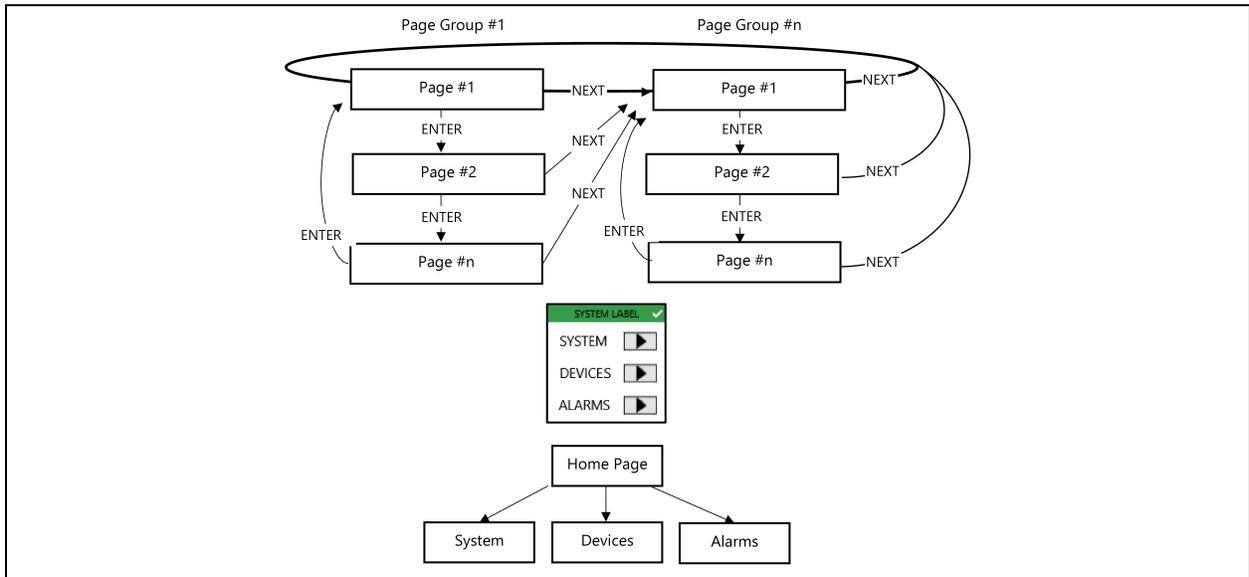


Figure 5.6 System Section

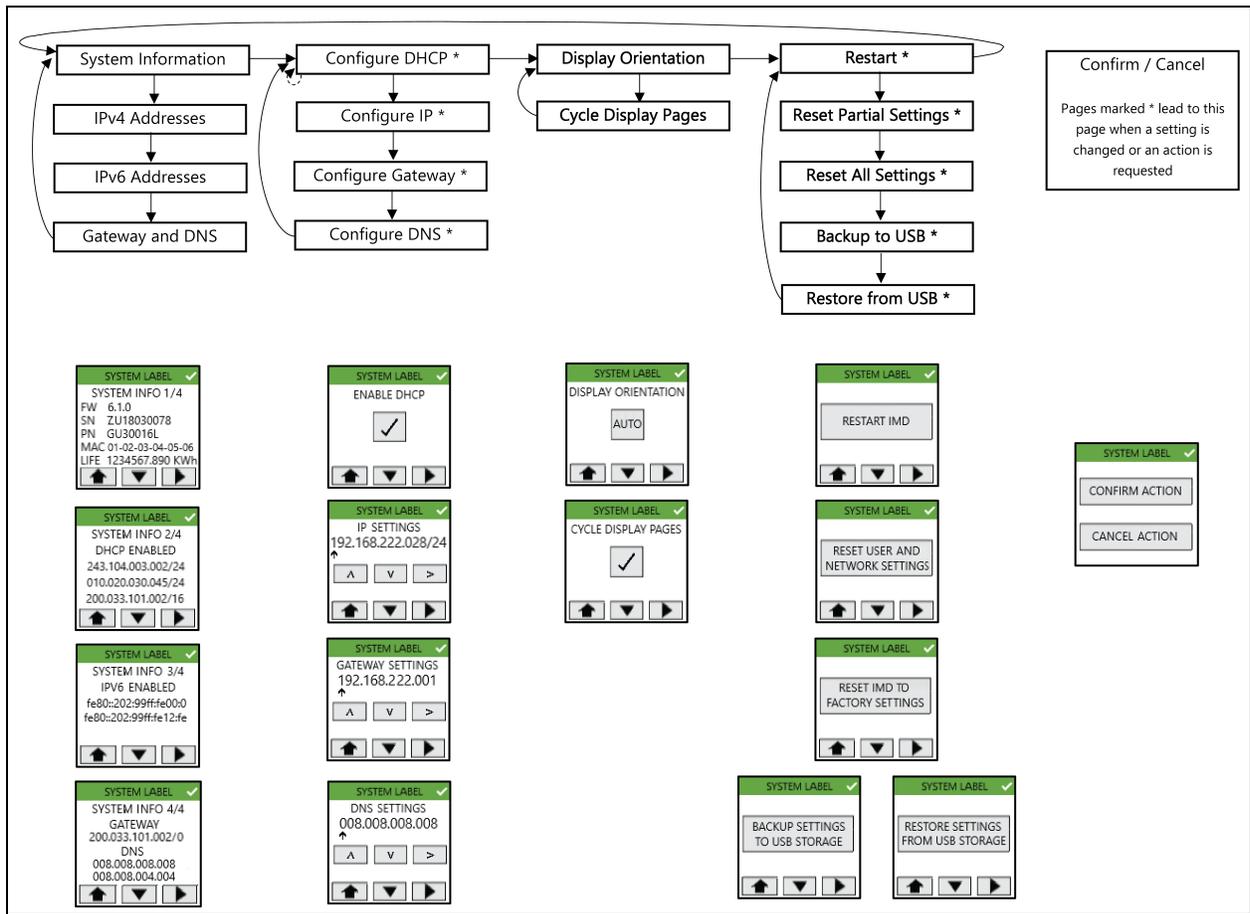


Figure 5.7 Device Section


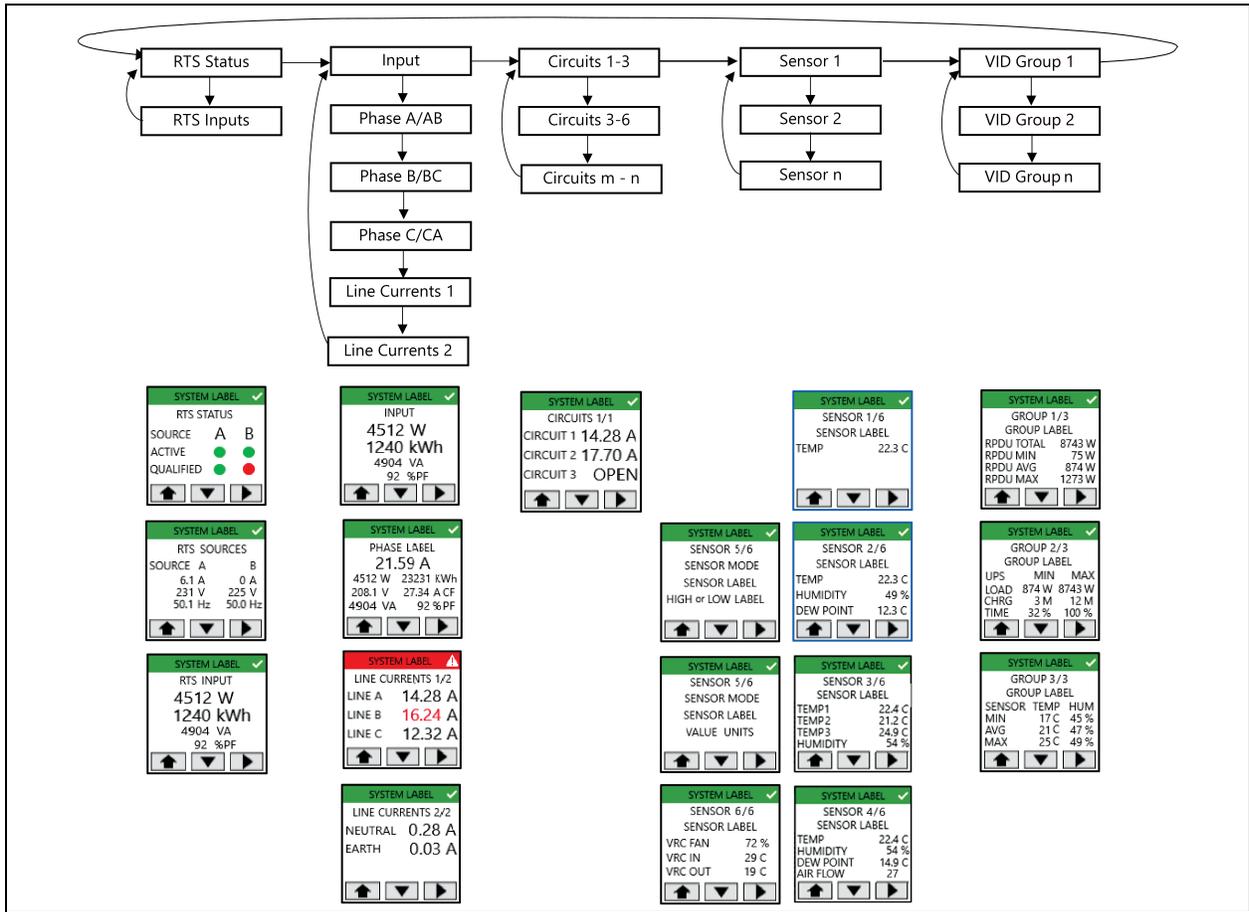


Figure 5.8 Alarm Section and Firmware Update Display

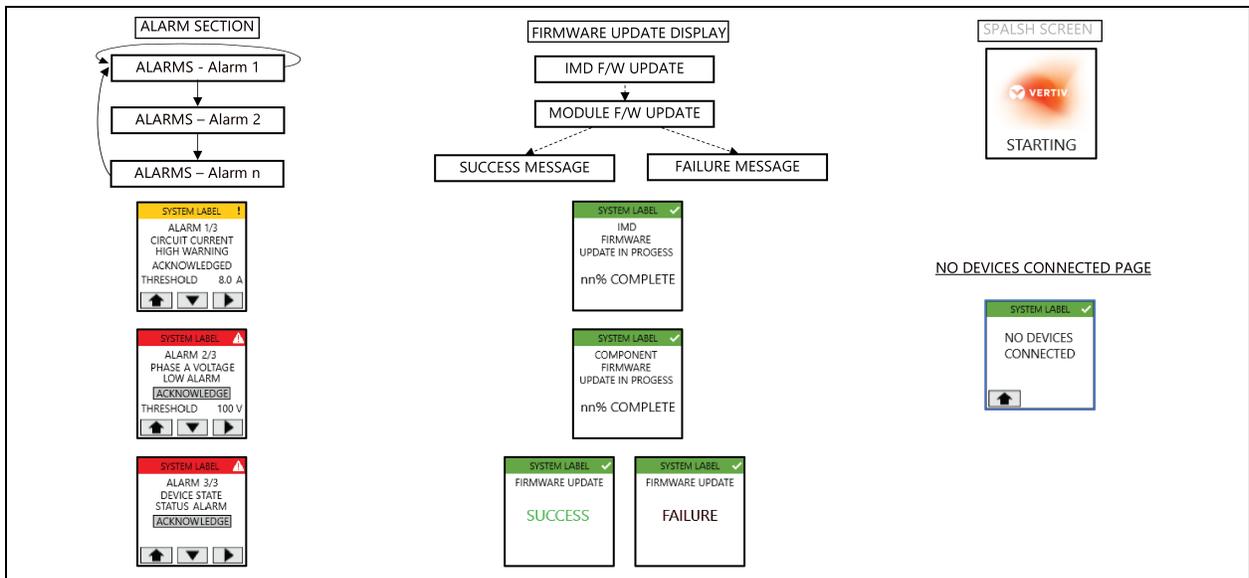

## Touchscreen menu features

- The Splash Screen page is displayed during IMD initialization.
- The default page displayed after power-on or after a 60 second touchscreen menu inactivity timeout and is determined by device type:
  - **RTS:** RTS Status page
  - **Rack PDU:** Input page
  - **RDU202:** Sensor 1 page
- The display backlight will reduce intensity after 75 seconds of touchscreen menu inactivity.
- In most cases, names are displayed. The system label scrolls to display entire label. Other labels may be displayed truncated when they exceed 10 characters.
- Each page header line will have a green, amber or red background color to indicate highest priority unacknowledged alarm status, and an icon to indicate warning and alarm states.
- The outlet page colored dot indicates outlet status (green=on, red=off) with outlet switched rack PDUs. No dot is shown when the rPDU is not outlet switch capable.
- IP settings pages will only reference IPv4 settings and IP address configuration configures only the first IP address and DNS address.
- When DHCP is enabled, the configure IP address, gateway and DNS address pages are not shown.
- The DHCP page button checkmark appears/disappears upon button press to indicate the selected option.
- The firmware update display is displayed when a firmware update commences, regardless of source (web UI, CLI, API, SCP, USB). Component firmware update progress percentage will be calculated as: (boards updated so far) / (total boards to be updated) \* 100
- Once all firmware updates are completed, the Firmware Update Success or Firmware Update Failure page is shown for 15 seconds. Thereafter, the default page is displayed.
- During the firmware update the display backlight will be set to 100% intensity. Once complete the display backlight will reduce intensity after 75 seconds of touchscreen menu inactivity.
- Only the first three IPv4 and/or IPv6 addresses are displayed addresses are displayed in the System Information page group.
- A pending action such as waiting for action confirmation or confirmation of entered IP address will be cancelled by an asynchronous event such as display timeout (see [The default page displayed after power-on or after a 60 second touchscreen menu inactivity timeout and is determined by device type:](#) above) or firmware update.
- Upon pressing any navigation button after making changes to DHCP, IP address, Gateway or DNS configuration, a confirm/cancel action page will be displayed. Selecting confirm actions the change and returns the prior page which shows the changed settings. Selecting cancel revokes the change and returns to the prior page which shows the unchanged settings.
- When the Cycle Display Pages option is selected, the default display will cycle through the pages in the page group for the device, displaying each page for 5 seconds. such as, activating Cycle Display Pages for a rack PDU will cause the display to cycle through the Input, phase, and line current pages.
- When a VID group includes more than one device type (such as, rack PDU and UPS), a VID group page will be shown for each device type within the group.
- The home page Alarms link will only be shown when an alarm has been triggered.
- Alarms can be acknowledged using the Acknowledge button, which changes to the text **Acknowledged** when actioned.

- The Display Orientation page cycles between Auto, 0 degree, 90 degree, 180 degree and 270 degree upon button presses (with the 270 degree setting cycling back to Auto). The action is instantaneous upon button press.
- When a Restart, Reset User/Network, Factory Reset, Backup or Restore action is selected, a Confirm/Cancel page is displayed. If confirmed, the action proceeds, if cancelled, the display returns to prior displayed page. Once a Reset User/Network, Factory Reset, Backup or Restore action completes, the Action Completed page is displayed for 5 seconds before the touchscreen menu returns to the default page.
- The No Devices Connected page should replace the default touchscreen menu page (or cycled default touchscreen menu pages) when no api/dev branches in a normal state are detected.
- Upon selecting a utility page group action (such as Restart), a confirm/cancel action page will be displayed. Selecting confirm actions the request after which the display returns to the home page. Selecting cancel revokes the request and returns to the prior displayed page.


### 5.1.6 Rapid Spanning Tree Protocol (RSTP)

Upgradeable monitored devices, built with the IMD-5M, include two Ethernet Ports that work together as an internal Ethernet Bridge. One of these ports can be used to connect the IMD to an existing network or both ports can be used at the same time to connect one IMD to another in a daisy chain configuration.

#### Daisy-Chaining

- Use daisy chaining to reduce network switch port count.
- Rack PDUs are connected using an Ethernet daisy chain.
- The head of the chain rack PDU connects to a network switch port.
- Each rack PDU has its own unique IP address.


Figure 5.9 Daisy-Chaining

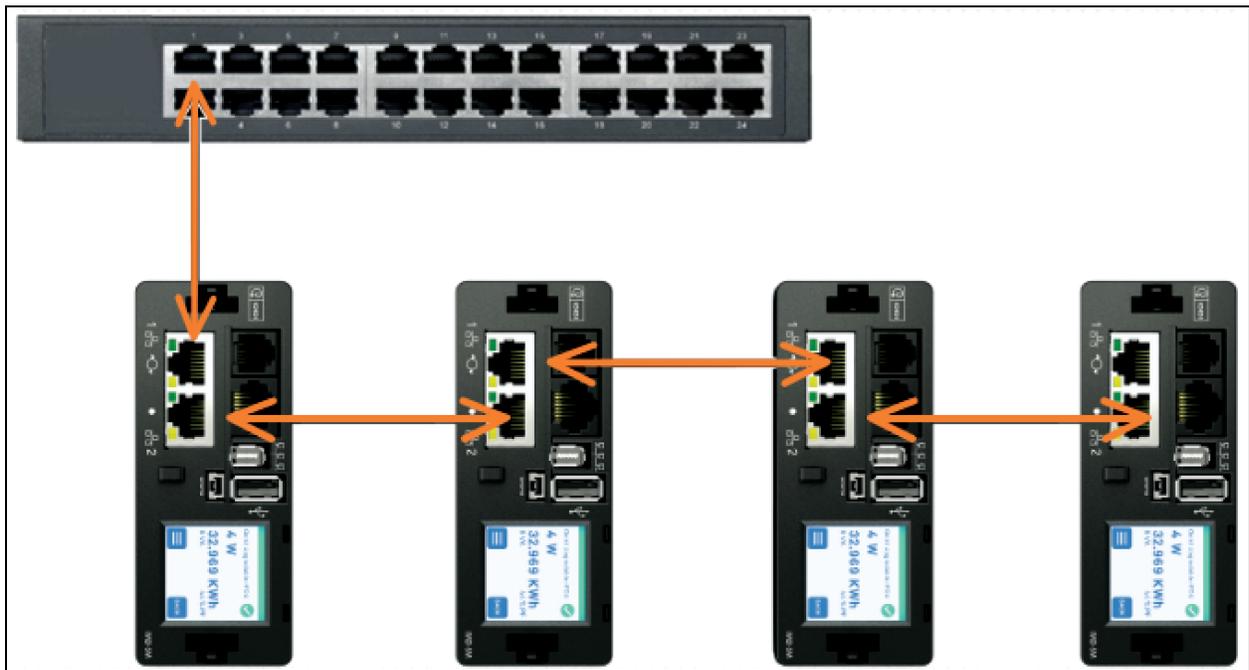

## Fault Tolerant Daisy-Chaining

- Use fault tolerant daisy-chaining to provide resilient network connectivity.
- Rack PDUs are connected using an Ethernet daisy chain.
- Both head and tail of the chain rack PDUs connect to network switch ports.
- Each rack PDU has its own unique IP address.
- Rapid Spanning Tree protocol (RSTP) must be configured to manage fault tolerance and maintain connectivity in the event of a cable fault or rack PDU power loss.

Figure 5.10 Fault Tolerant Daisy Chaining

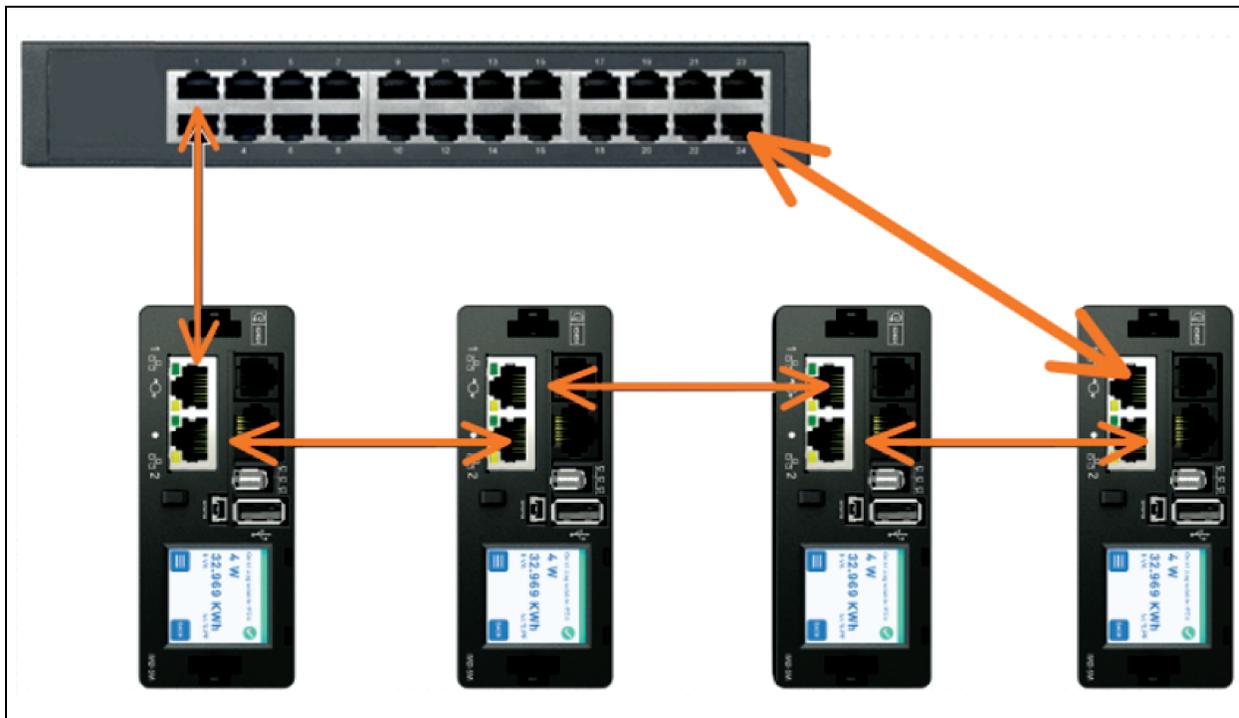

When both network interfaces are connected, the IMD implements a network bridging protocol called the Rapid Spanning Tree Protocol (RSTP). RSTP is an IEEE standard that is implemented by all managed bridges. Using RSTP, bridges in the network exchange information to find redundant paths or loops. IPv6 should be disabled when using redundant network connectivity.

When a loop is detected, the bridges in the network work together to temporarily disable the redundant paths. This allows the network to avoid broadcast storms caused by the loops. In addition, RSTP regularly checks for changes in the network topology. When a connection is lost, RSTP allows the bridges to quickly switch to a redundant path.

**NOTE: RSTP protocol imposes a limit of 40 links between bridges, including IMDs.**

**NOTE: The Vertiv Intelligence Director cannot be used in conjunction with RSTP and redundant network connectivity.**

## 5.2 Network Setup

The Upgradeable IMD has a default IP address for initial setup and access.

### To restore the default IP address and reset all user-account information:

1. Holding the RESET/RESTART button (first pin hole) next to the LCD display for 25 seconds resets the network and user account information.
2. Holding the RESET/RESTART button (first pin hole) next to the LCD display for 10 seconds will power cycle the IMD without changing any user information.

The Network Page, located under the System tab, allows you to assign the network properties manually or use DHCP to connect to your network. Access to the unit requires the IP address to be known. Use of a static IP or a reserved DHCP is recommended. The default address is displayed on the front of the unit.

- **IP Address:** 192.168.123.123
- **Subnet Mask:** 255.255.255.0
- **Gateway:** 192.168.123.1

To access the unit for the first time, you must temporarily change your computer's network settings to match the **192.168.123.xxx** subnet. To setup the unit, connect it to your computer's Ethernet Port, then follow the appropriate instructions for your computer's operating system.


### To set up the network for a Windows operating system:

1. Access the network settings for your operating system.
  - Windows Server 2022 and 2019.
  - Using Microsoft Windows 10, click *Start>Network and Internet>Change Adapter Settings*.
  - Using Microsoft Windows 11, click *Start>Network and Internet>Change Adapter Settings*.
2. Locate the entry under LAN, High Speed Internet or Local Area Connection that corresponds to the Network Card (NIC). Double click on the network adapter's entry in the Network Connections list.

**NOTE: Most computers will have a single Ethernet NIC installed, but a WiFi or cellular data adapter also shows as a NIC in this list. Be sure to choose the correct entry.**

3. Click *Properties* to open the Local Properties window.


Figure 5.11 Local Area Connection Properties

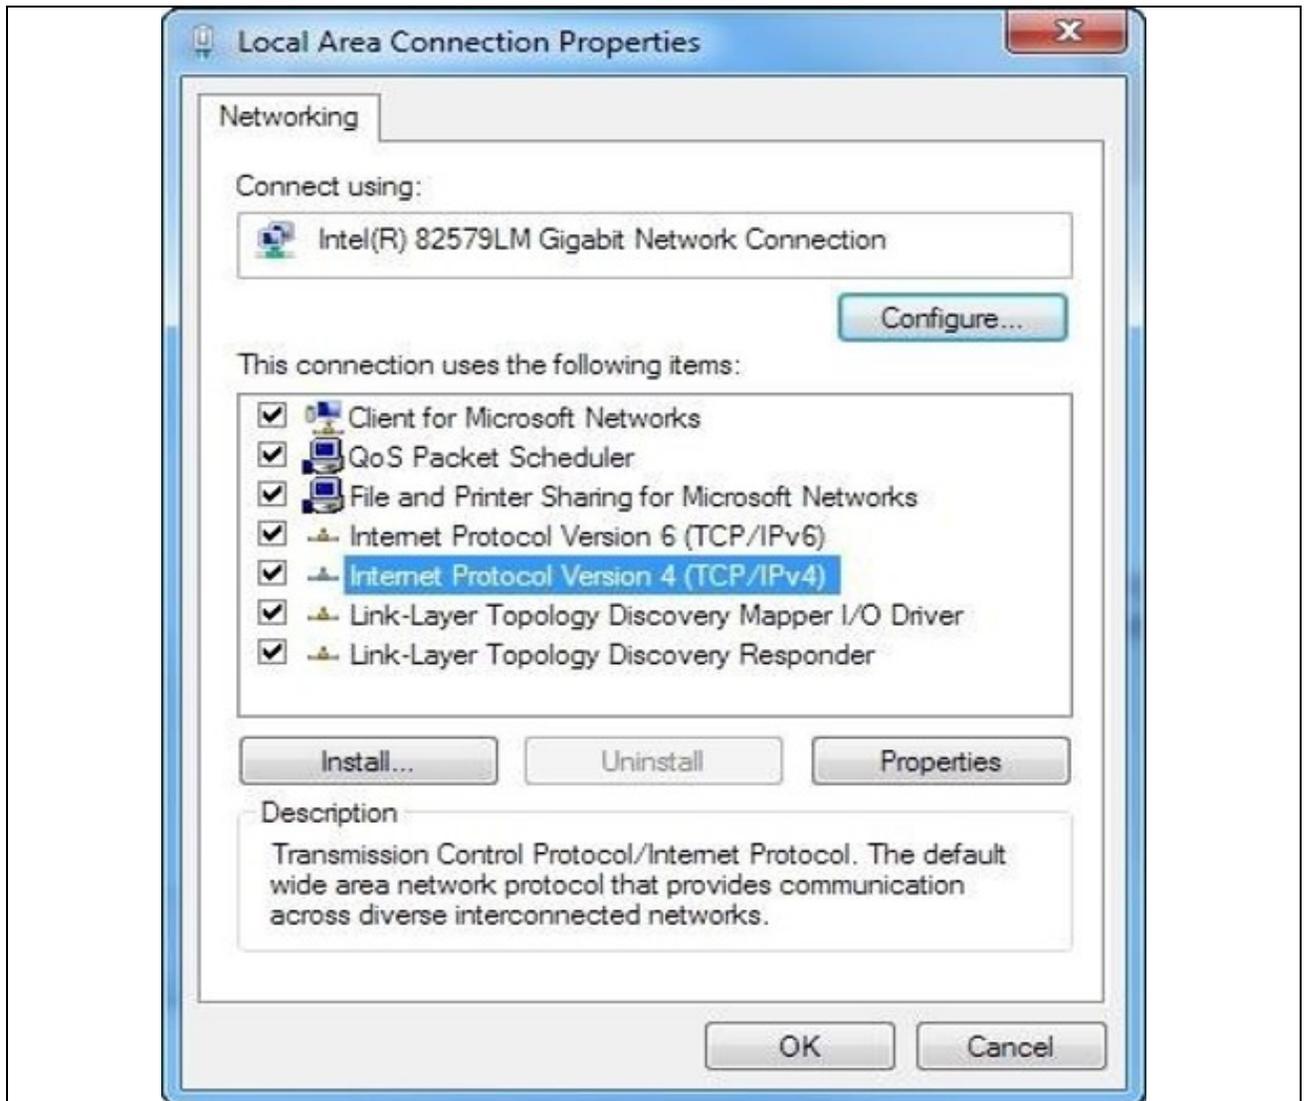

4. Select *Internet Protocol Version 4 (TCP/IPv4)* from the list, and click *Properties*.

**NOTE:** If you see more than one TCP/IP entry, as in the example above, the computer may be configured for IPv6 support as well as IPv4, make sure to select the entry for the IPv4 protocol. Write down the current NIC card settings so you can restore them to normal after you have completed the setup procedure.

Figure 5.12 Internet Protocol Version 4

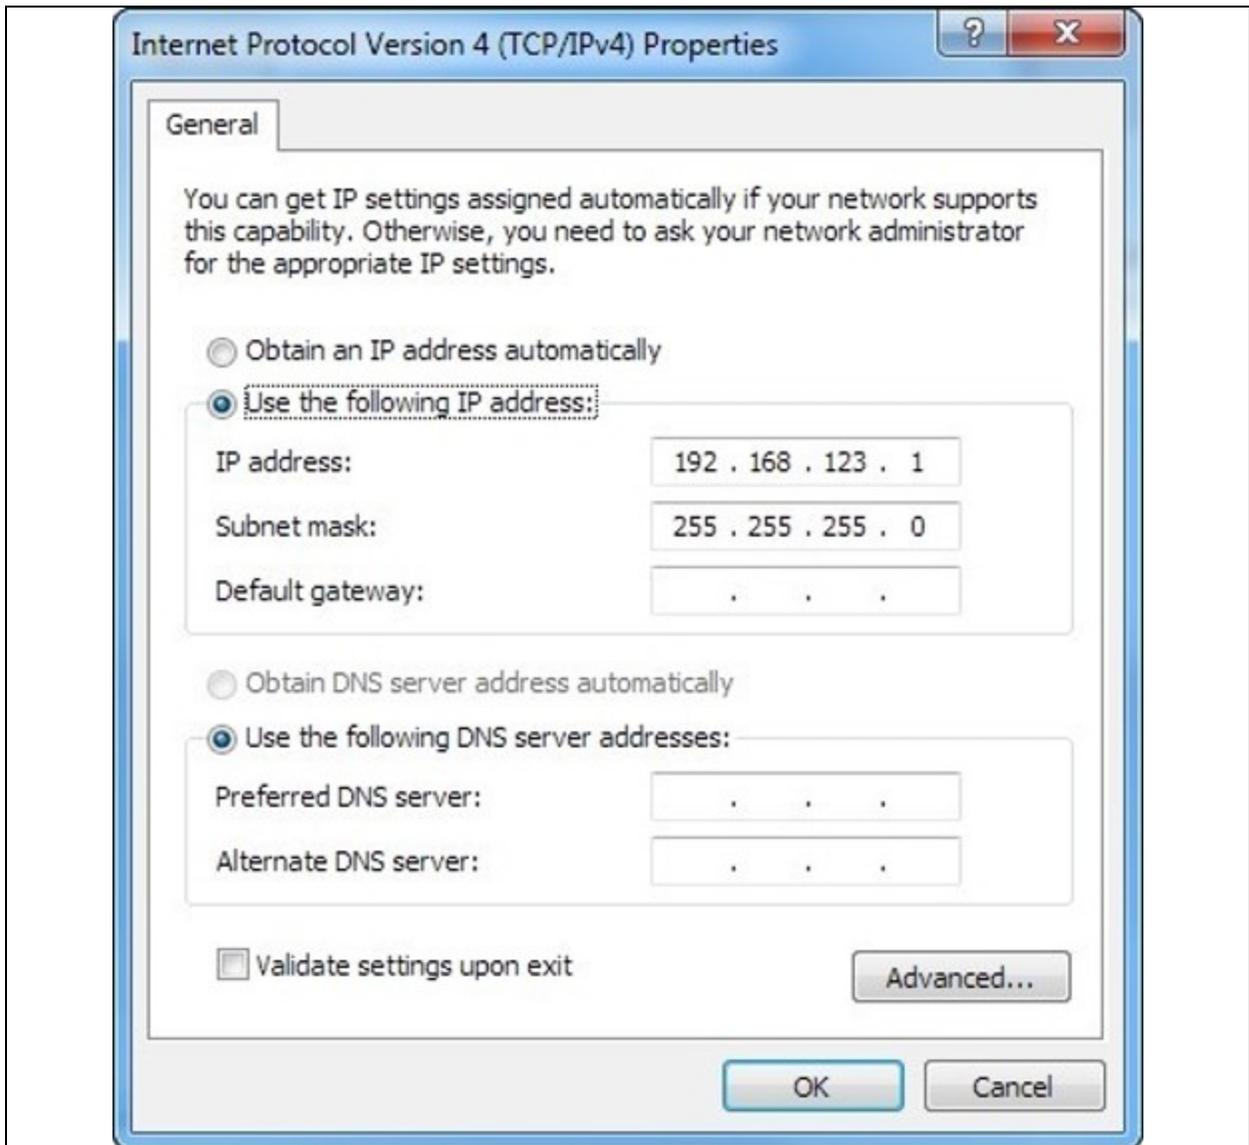

5. Choose *Use the following IP address*, set IP address to **192.168.123.1** and Subnet Mask to **255.255.255.0**. For initial setup, Default Gateway and the DNS Server entries can be left blank. Select OK - OK to close both the Internet Protocol Properties and Local Properties windows.
6. In a web browser, enter **http://192.168.123.123** to access the unit. If you are setting up the unit for the first time, the unit requires you to create an Admin account and password before you can proceed.
7. After the Admin account is created, login to the unit.
8. By default, the default sensors page is displayed. Navigate to the *System tab*, then the *Network Page* to configure the device's network properties. The unit's IP address, Subnet Mask, Gateway and DNS settings can either be assigned manually or acquired via DHCP.
9. Click *Save*.

**NOTE:** After the changes are saved, the browser will no longer be able to reload the web page from the **192.168.123.123** address and displays **Page not Found** or **Host Unavailable** message, this is normal. After you are finished configuring the unit's IP address, repeat the steps above, changing the computer's Ethernet NIC card settings to the ones you wrote down prior to changing them.

To set up the network for a MAC:

1. Click the System Preferences icon on the Dock and choose *Network*.

Figure 5.13 MAC System Preferences



2. Ensure Ethernet is highlighted on the left side of the NIC window. In most cases, there will be one Ethernet entry on a Mac. Write down the current settings so you can restore them to normal after you have completed the setup procedure.
3. Select *Manually* from the Configure IPv4 drop-down list, set IP address to **192.168.123.1** and Subnet Mask to **255.255.255.0** and click *Apply*.

**NOTE: The Router and DNS Server settings can be left blank for this initial setup. In a web browser, enter <http://192.168.123.123> to access the unit. If you are setting up the unit for the first time, the unit requires you to create an Admin account and password before you can proceed.**

4. After the Admin account is created, login to the unit.
5. By default, the default sensors page is displayed. Navigate to the *System* tab, then the *Network* page to configure the device's network properties. The unit's IP Address, Subnet Mask, Gateway and DNS settings can either be assigned manually or acquired via DHCP.
6. Click Save.

**NOTE: After the changes are saved, the browser will no longer be able to reload the web page from the [192.168.123.123](http://192.168.123.123) address and displays **Page not Found** or **Host Unavailable** message; this is normal. After you are finished configuring the unit's IP address, repeat the steps above, changing the computer's Ethernet NIC card settings to the ones you wrote down prior to changing them.**

## 5.3 Web User Interface

**NOTE: Vertiv™ PowerIT is the same product as Vertiv™ Geist™. Please use this manual for either Vertiv™ PowerIT labeled product or Vertiv™ Geist™ labeled product. Graphics with new naming will be updated soon.**

The unit is accessible via a standard, unencrypted HTTP connection as well as an encrypted HTTPS (TLS) connection. Units will default to HTTP redirected to HTTPS unless the admin explicitly enables HTTP.

**NOTE: An administrator account (username and password) must be created when logging in to the device the first time.**

**NOTE: If **Clock not set.** appears at the bottom right of the page, follow procedures in [Time](#) on page 84.**

**NOTE: The data refresh rate on the web interface is 5 seconds. This should not be confused with the continuous energy meter calculations and instantaneous alarm notifications.**

### 5.3.1 Main menu

The Main Menu is located vertically on the far left side. See [Figure 5.14](#) on the facing page for Main Menu.



**WARNING! Do not connect electric heaters, electric heating appliances or other electric appliances which may cause fire, electric shock, injuries when operated unattended.**

Figure 5.14 Main Menu

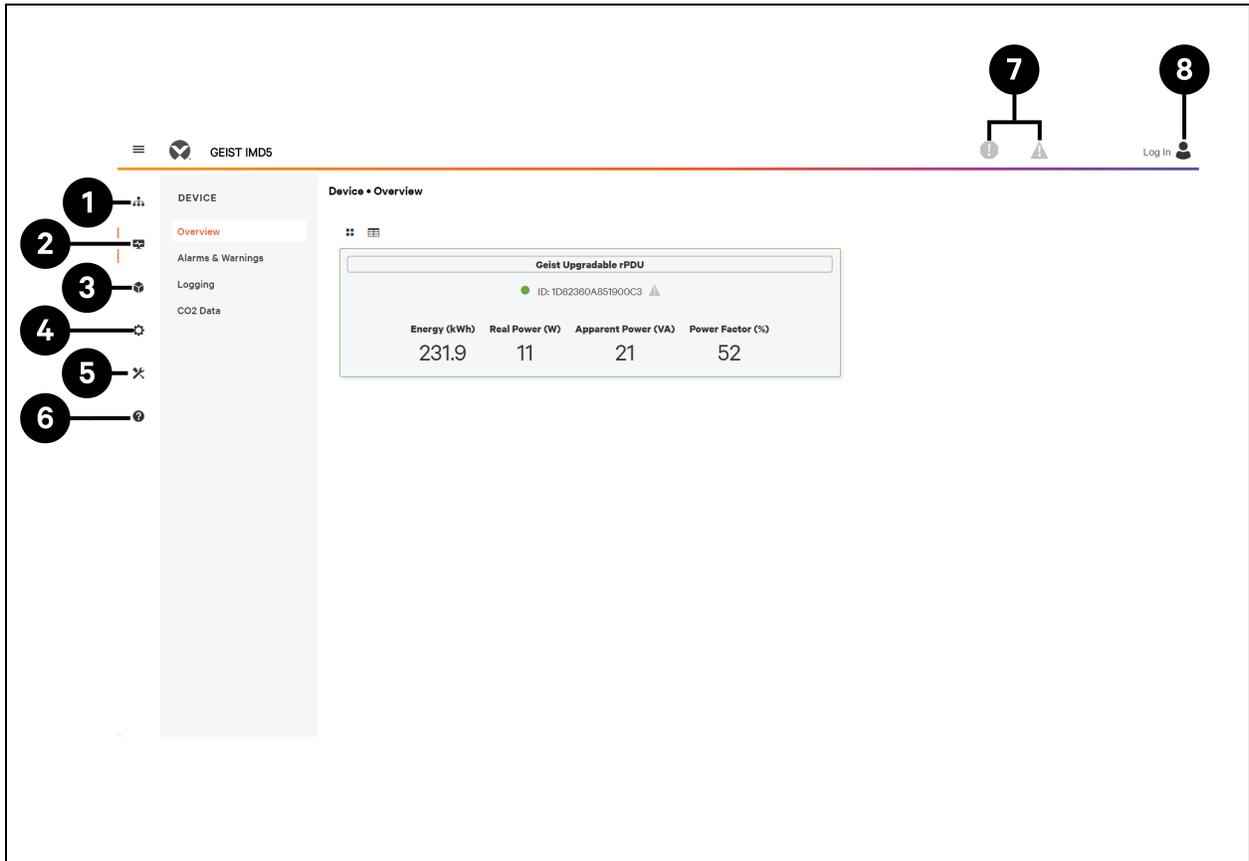


Table 5.7 Main Menu Descriptions

Item	Description
1	Aggregation
2	Device
3	Provisioner
4	System
5	Utilities
6	Help
7	Alarms & Warnings
8	Log In/Log Out

## 5.4 Device Sub Menu

Click the Device Sub Menu to access *Overview*, *Alarms & Warnings*, *Logging* and *CO2 Data* menus.

### 5.4.1 Overview

You must login before making any changes. Only users with control-level or higher authorizations have access to these settings.

Figure 5.15 Device Overview Sub Menu Descriptions

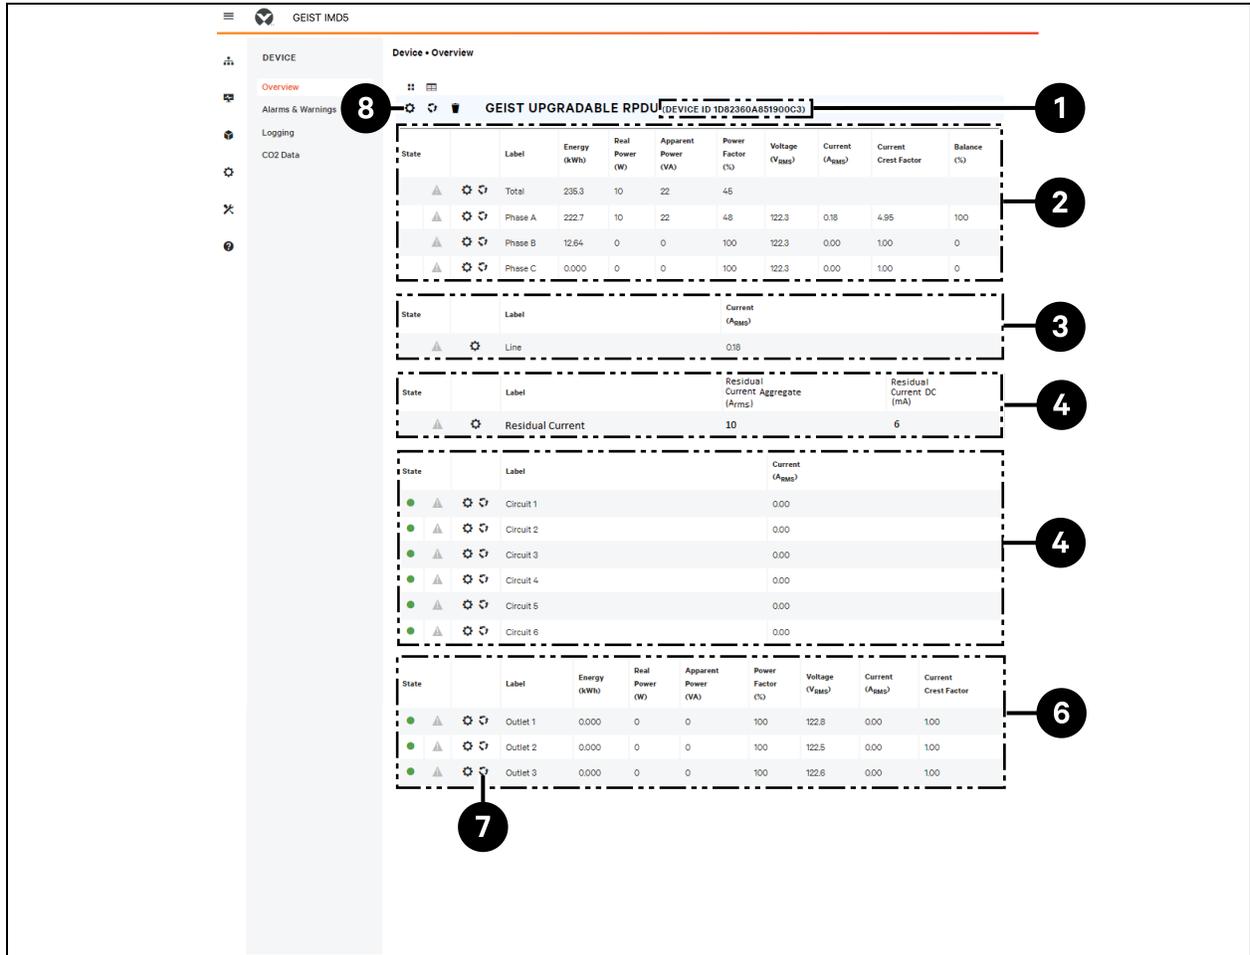


Table 5.8 Device Overview Sub Menu Descriptions

Number	Name	Description
1	Device ID	Unique product identification and cannot be changed. May be required for technical support.
2	Total and Individual Phase Monitor	Displays AC current, voltage, and power statistics for each individual phase and for the total of all phases combined. Current Crest Factor and Phase Balance (%) are also indicated.
3	Line	Displays the current (in Amps RMS) on 3-phase Wye units. This is not shown on single phase and 3-phase Delta units.
4	Residual Current	Only for rPDUs with RCM-B Feature. Displays Residual Current Aggregate (mA) and Residual Current DC (mA). Where applicable, display Residual Current for each Phase.
5	Current Monitor	Displays AC current draw statistics for each individual circuit on the rPDU.


**Table 5.8 Device Overview Sub Menu Descriptions (continued)**

Number	Name	Description
6	Outlet Monitor	Applies to Outlet Monitored/Outlet Switched rPDUs ONLY - Displays AC current, voltage, and power statistics for each circuit and outlet. Current Crest Factor also indicated. (Outlet Level Power Monitoring and Switched Outlet Level Monitoring Only). Displays outlet status. (Outlet Level Monitoring and Switched Outlet Level Monitoring Only).
7	Operation Icon	Applies to Outlet Monitored/Outlet Switched rPDUs ONLY - Modify settings.
8	Configuration Icon	Applies to Outlet Monitored/Outlet Switched rPDUs ONLY - Modify label name.

**To change a device label:**

1. Click the Configuration  icon to change label for the Vertiv™ PowerIT rPDU and change the label. The Name is the rPDU's factory name or model and cannot be changed.
2. Click SAVE.

**Figure 5.16 Changing Device Label**

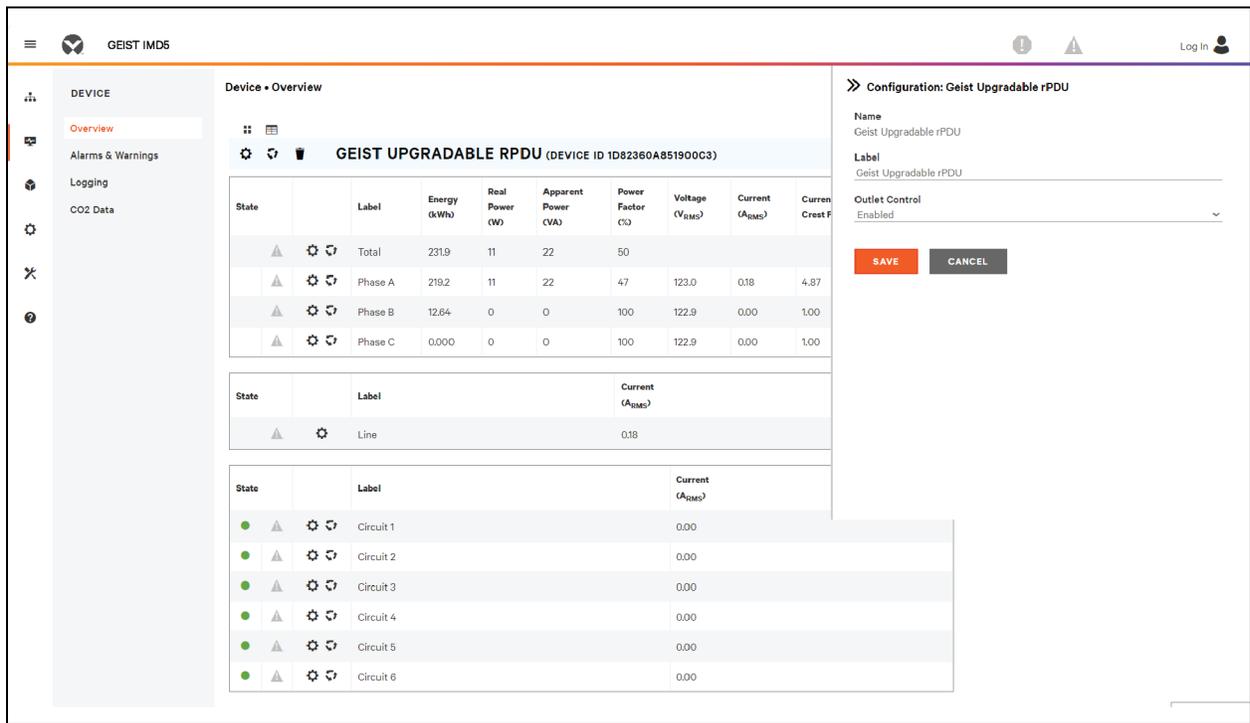

**To change device operation:**

1. Click the Operation  icon.
2. Select the operation to perform:
  - **On/Off:** Turns all outlets On or Off.
  - **Reboot:** For outlets currently On, reboot cycles the outlets Off, then back On after the reboot hold delay. For outlets currently Off, reboot turns the outlets On.
  - **Cancel:** Cancels the current operation if it has not been completed.
  - **Reset Energy:** Resets the total energy measured in kWh.
  - **Restore Defaults:** Restores device settings to their factory default. This includes Labels, Delays and Power-on Actions for the device.


**NOTE: These actions affect the entire device.**

**NOTE: On/Off and Reboot operations apply to Outlet Switched Vertiv™ PowerIT rPDUs only.**

3. For operations involving the state of the outlets, setting Delay to *True* uses the current Delay configuration for each outlet when performing the selected operation.
4. Click SAVE to issue the action.


**NOTE: Power-on action delays refer to the time since the unit was plugged in, not the time since it fully booted. They may execute before the unit fully boots.**

**Figure 5.17 Device Change Operation**

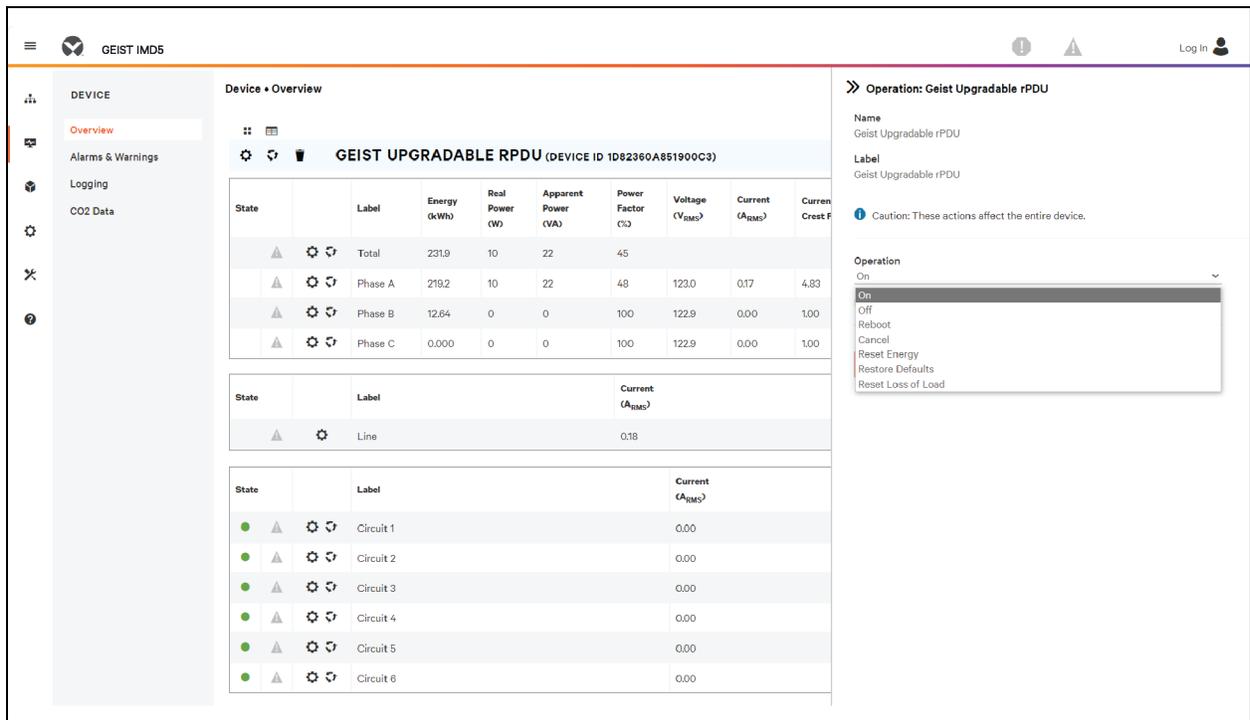

**To change a phase or circuit label:**

1. Click the Configuration  icon for the phase or circuit and change the label. The Name is the physical phase or circuit name and cannot be changed.
2. Click SAVE.

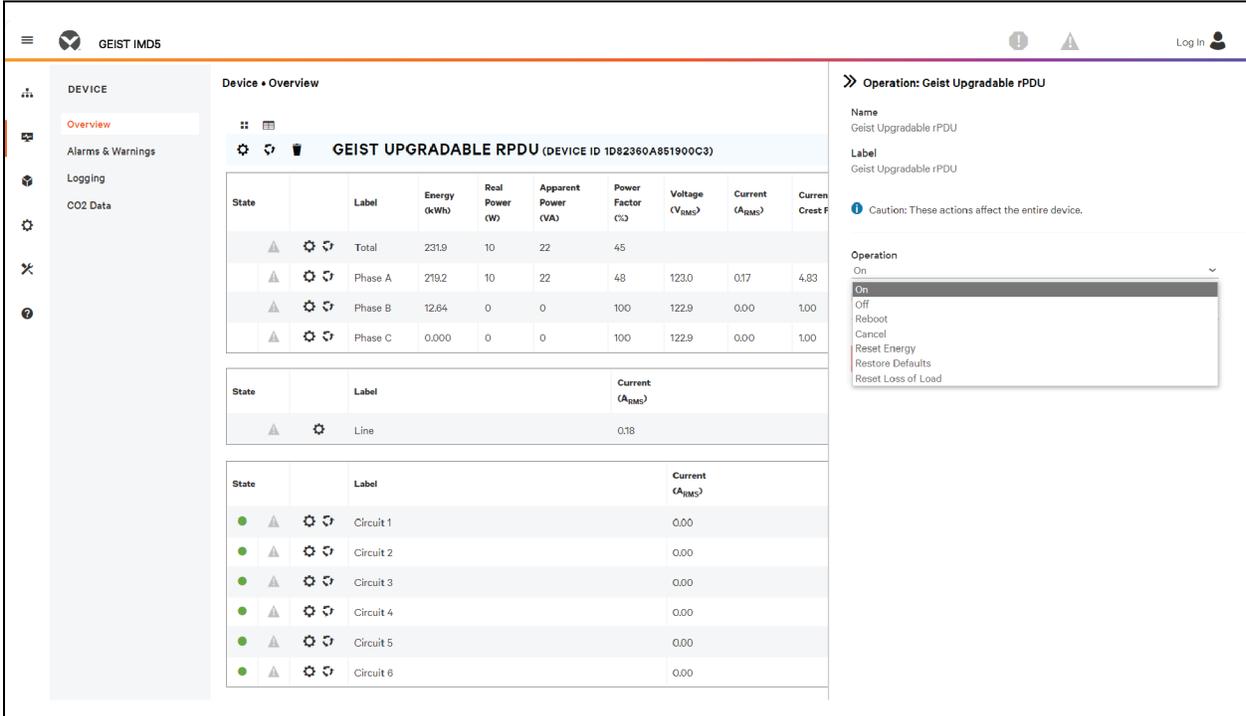**Figure 5.18 Changing Phase or Circuit Label**


**Device • Overview**

**GEIST UPGRADABLE RPDU (DEVICE ID 1D82360A851900C3)**

State	Label	Energy (kWh)	Real Power (kW)	Apparent Power (kVA)	Power Factor (%)	Voltage (VRMS)	Current (ARMS)	Current Crest F
▲	Total	231.9	10	22	45			
▲	Phase A	219.2	10	22	48	123.0	0.17	4.83
▲	Phase B	12.64	0	0	100	122.9	0.00	1.00
▲	Phase C	0.000	0	0	100	122.9	0.00	1.00

State	Label	Current (ARMS)
▲	Line	0.18

State	Label	Current (ARMS)
●	Circuit 1	0.00
●	Circuit 2	0.00
●	Circuit 3	0.00
●	Circuit 4	0.00
●	Circuit 5	0.00
●	Circuit 6	0.00

**Operation: Geist Upgradable rPDU**

Name  
Geist Upgradable rPDU

Label  
Geist Upgradable rPDU

Caution: These actions affect the entire device.


Operation

- On
- Off
- Reboot
- Cancel
- Reset Energy
- Restore Defaults
- Reset Loss of Load

**To change phase operation:**

1. Click the Operation  icon.
2. Select *Reset Energy* to reset the total energy measured in kWh for the selected Defaults phase.
3. Click *SAVE* to issue the action.

Figure 5.19 Changing Phase Operation

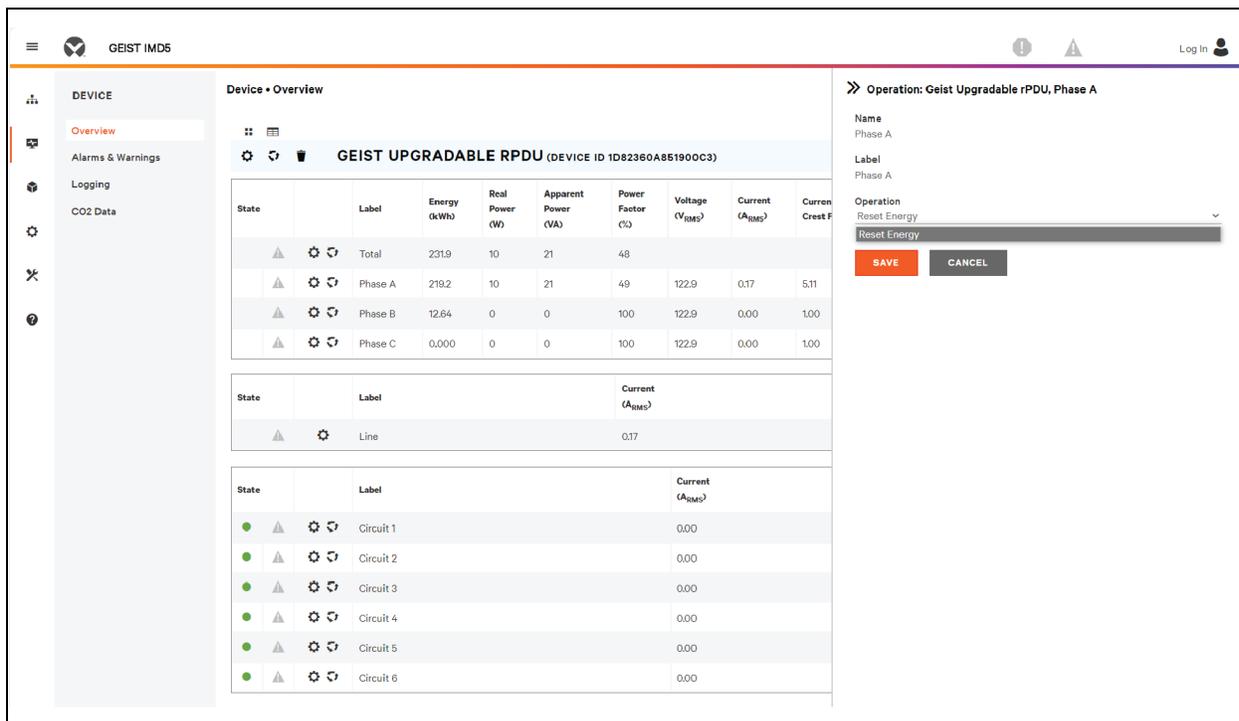

To change circuit operation:

1. Click the Operation  icon.
2. Select *Reset Loss of Load* to reset the Loss of Load alarm.
3. Click *SAVE* to issue the action.

Figure 5.20 Changing Circuit Operation

The screenshot displays the GEIST IMD5 web interface. On the left is a navigation menu with options like Overview, Alarms & Warnings, Logging, and CO2 Data. The main area shows a 'Device Overview' for a 'GEIST UPGRADABLE RPDU'. It contains three tables: one for overall device statistics (Total, Phase A, B, C), one for line current, and one for individual circuit currents (Circuit 1-6). On the right, a configuration panel for 'Operation: Geist Upgradeable rPDU, Circuit 1' is open, showing a dropdown menu for 'Operation' set to 'Reset Loss of Load' and 'SAVE' and 'CANCEL' buttons.

**NOTE:** This step is required when state shows a loss of load alarm and the issue has been resolved. Loss of load alarm is triggered by a sudden drop of current detected by the circuit breaker's current measuring transducer when operating close to the circuit load limit. For the Switched Upgradeable horizontal units, the loss of load alarm is additionally triggered by circuit breaker loss of voltage (regardless of circuit load).

To configure an outlet:

**NOTE:** Applies to Outlet Monitored/Outlet Switched Vertiv™ PowerIT rPDUs only.

1. Click the Outlet Configuration  icon.
2. Change the configurations, as needed.
  - a. Label of the outlet.


**NOTE:** Steps 2b through 2k apply only to switched outlets.

- b. **State:** The outlet's current state (On or Off).
- c. **Mode:** How the outlet will be controlled:
  - **Manual Control:** The outlet state is controlled using the web user interface, SNMP or the API.
  - **Alarm Control (normally off, on when any associated alarm trips):** The outlet state is set normally Off and will be switched On when any outlet alarm event is tripped.
  - **Alarm Control (normally on, off when any associated alarm trips):** The outlet state is set normally On and will be switched Off when any outlet alarm event is tripped.
  - **Alarm Control (normally Off, on when all associated alarm trips):** The outlet state is set normally Off and will be switched On when all outlet alarm events are tripped.

- **Alarm Control (normally on, off when all associated alarm trips):** The outlet state is set normally On and will be switched Off when all outlet alarm events are tripped.
- d. **Pending State:** The state the outlet is currently transitioning to.
- e. **Time To Action:** The time left before the pending action takes place. This is adjusted using Delays.
- f. **On Delay:** The time, in seconds, the unit waits before switching an outlet On.
- g. **Off Delay:** The time, in seconds, the unit waits before switching an outlet Off.
- h. **Reboot Delay:** The time, in seconds, the unit waits before rebooting an outlet.
- i. **Reboot Hold Delay:** The time, in seconds, the unit waits after switching the outlet Off, before switching an outlet back On during a reboot.
- j. **Power-On Action:** Describes the state the outlet will start when powered On (On, Off or Last). By default, the initial setting is **Last** and Outlets are powered ON at the factory.
- k. **Power-On Delay:** The time, in seconds, the unit waits after being powered On before powering On the outlet.

3. Click **SAVE**.

**Figure 5.21 Outlet Configuration**

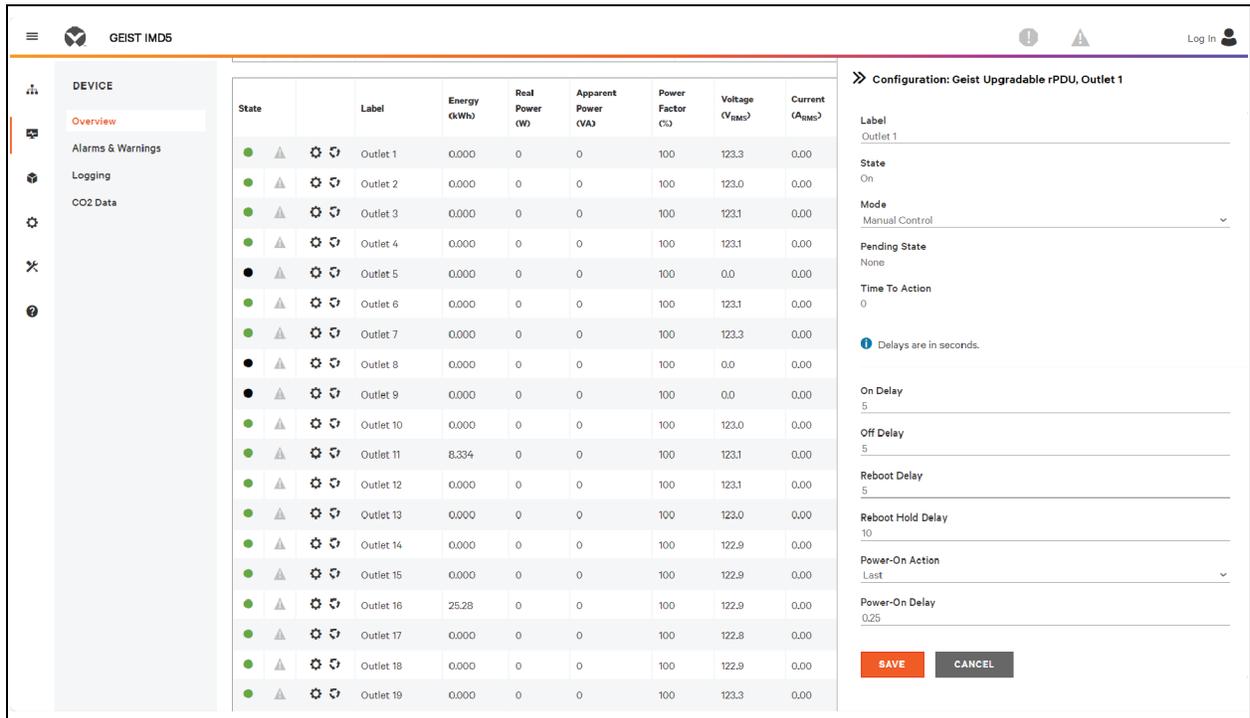

To change outlet operation:

**NOTE: Applies to Outlet Monitored / Outlet Switched Vertiv™ PowerIT rPDUs only.**

1. Click the desired Outlet Operation  icon.
2. Select the operation to perform:
  - **On/Off:** Turns the selected outlet On or Off.
  - **Reboot:** For outlets currently On, reboot cycles the outlets off, then back On after the reboot hold delay. For outlets currently Off, reboot turns the outlets On.

- **Cancel:** Cancels the current operation if it has not been completed.
  - **Reset Energy:** Resets the total energy measured in kWh for the selected outlet.
3. For operations involving the state of the outlets, setting Delay to *True* uses the current Delay configuration for each outlet when performing the selected operation.
  4. Select **SAVE** to issue the action.

Figure 5.22 Changing Outlet Operation

The screenshot displays the GEIST IMD5 web interface. On the left is a navigation menu with options: Overview, Alarms & Warnings, Logging, and CO2 Data. The main area shows a table of 19 outlets with columns for State, Label, Energy (kWh), Real Power (W), Apparent Power (VA), Power Factor (%), Voltage (Vrms), and Current (Arms). The right-hand side features a configuration panel for 'Operation: Geist Upgradable rPDU, Outlet 1' with fields for Name, Label, State, Pending State, Time To Action, Operation, and Delay, along with SAVE and CANCEL buttons.

State	Label	Energy (kWh)	Real Power (W)	Apparent Power (VA)	Power Factor (%)	Voltage (V <sub>rms</sub> )	Current (A <sub>rms</sub> )
● ▲ ⚙️ ↻	Outlet 1	0.000	0	0	100	123.4	0.00
● ▲ ⚙️ ↻	Outlet 2	0.000	0	0	100	123.2	0.00
● ▲ ⚙️ ↻	Outlet 3	0.000	0	0	100	123.2	0.00
● ▲ ⚙️ ↻	Outlet 4	0.000	0	0	100	123.3	0.00
● ▲ ⚙️ ↻	Outlet 5	0.000	0	0	100	0.0	0.00
● ▲ ⚙️ ↻	Outlet 6	0.000	0	0	100	123.3	0.00
● ▲ ⚙️ ↻	Outlet 7	0.000	0	0	100	123.4	0.00
● ▲ ⚙️ ↻	Outlet 8	0.000	0	0	100	0.0	0.00
● ▲ ⚙️ ↻	Outlet 9	0.000	0	0	100	0.0	0.00
● ▲ ⚙️ ↻	Outlet 10	0.000	0	0	100	123.2	0.00
● ▲ ⚙️ ↻	Outlet 11	8.334	0	0	100	123.2	0.00
● ▲ ⚙️ ↻	Outlet 12	0.000	0	0	100	123.2	0.00
● ▲ ⚙️ ↻	Outlet 13	0.000	0	0	100	123.1	0.00
● ▲ ⚙️ ↻	Outlet 14	0.000	0	0	100	123.0	0.00
● ▲ ⚙️ ↻	Outlet 15	0.000	0	0	100	123.0	0.00
● ▲ ⚙️ ↻	Outlet 16	25.28	0	0	100	122.9	0.00
● ▲ ⚙️ ↻	Outlet 17	0.000	0	0	100	122.8	0.00
● ▲ ⚙️ ↻	Outlet 18	0.000	0	0	100	122.9	0.00
● ▲ ⚙️ ↻	Outlet 19	0.000	0	0	100	123.3	0.00

## 5.4.2 Alarms & Warnings

The Alarms & Warnings page allows you to establish alarm or warning conditions (events) for each power and circuit reading. Events are triggered when a measurement exceeds a user-defined threshold, either going above the threshold (high-trip) or below it (low-trip). Events are displayed in different sections, based on the device or measurement the event is associated with. Each event can have one or more actions to be taken when the event occurs.

Figure 5.23 Alarms & Warnings Page

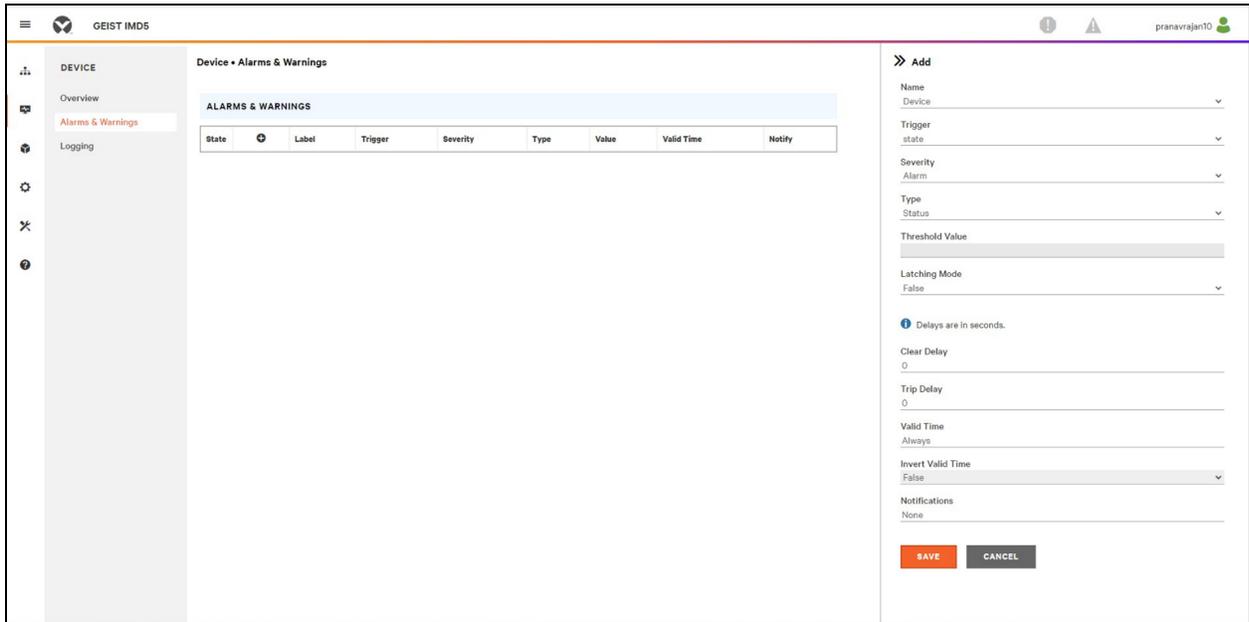


Table 5.9 Alarms & Warnings Descriptions

Number	Description	Symbol	Description
1	Status of each event.		Warning symbol. Event is displayed in orange.
			Alarm symbol. Alarm is displayed in red.
			Acknowledged event symbol. Symbol remains until the condition measured returns to normal.
2	Add/Delete/Modify alarms and warnings.		Add new alarms and warnings.
			Modify existing alarms and warnings.
			Delete existing alarms and warnings.
3	Notify user of tripped Events and request acknowledgment.	N/A	Empty, if there is no alert condition.
			When a warning or alarm event occurs, you can click on this symbol to acknowledge the event and stop the unit from sending any more notifications about it. <b>NOTE: Clicking this symbol does not clear the warning or alarm event; it just stops the notifications from repeating.</b>
4	Displays the conditions for the alarms and warnings settings.		

**To add a new Alarm or Warning Event:**

1. Click the *Add/Modify Alarms and Warnings* button.
2. Set the desired conditions for this event as follows:
  - a. From the drop-down lists, select the name of the phase or circuit, the trigger measurement, the severity and the type.

**NOTE: High trips if the measurement goes above the threshold and low trips if the measurement goes below the threshold.**

- b. Enter the desired Threshold Value (any number between -999.0 through 999.0).
- c. Enter the desired Clear Delay time in seconds. Any value other than 0 means once this event is tripped, the measurement must return to normal for this many seconds before the event will clear and reset. Clear Delay can be up to 14,400 seconds (4 hours).
- d. Enter the desired Trip Delay time in seconds. Any value other than 0 means that the measurement must exceed the threshold for this many seconds before the Event will be tripped. Trip Delay can be up to 14,400 seconds (4 hours).
- e. Latching Mode, if enabled, this event and its associated actions remain active until the event is acknowledged, even if the measurement subsequently returns to normal.
- f. To specify where the alert notifications are sent when this alarm or warning event occurs, click the Add icon to create a new action.
- g. Select the desired options from the drop-down menu:
  - Target is the email address or SNMP manager where the notifications are sent when the event is tripped. For more information on configuring a target email address, see [Email](#) on page 86.
  - Or, when an outlet number is selected as the target, the outlet state switches when an event is tripped and remains in the switched state until the event resets or is acknowledged. For this option, the outlet mode must be configured for Alarm Control, see [Alarms & Warnings](#) on page 53.


**NOTE: Target Delays and Repeats are shared across all alarms. If multiple delay or repeat values are needed for specific targets, each one must be added to the target list and then the appropriate Enabled box must be checked on each alarm.**

**NOTE: Applies to Outlet Monitored / Outlet Switched Vertiv™ PowerIT rPDUs only.**

- Delay determines how long this Event must remain tripped before this Action's first notification is sent. This is different from the Trip Delay above. Trip Delay determines how long the threshold value has to be exceeded before the Event itself is tripped. This delay determines how long the Event must remain tripped before this Action occurs. Delay can be up to 14,400 seconds (4 hours). A Delay of 0 will send the notification immediately.
  - Repeat determines whether multiple notifications will be sent for this Event Action. Repeat notifications are sent at the specified intervals until the Event is acknowledged or until the Event is cleared and reset. The Repeat interval can be up to 14,400 seconds (4 hours). A Repeat of 0 disables this feature and only one notification will be sent.
3. Click *SAVE* to save this notification action.

**NOTE: More than one action can be set for an alarm or warning. To add multiple actions, just click the Add icon again and set each one as desired. Each alert can have up to 32 Actions associated with it.**

Figure 5.24 Adding Alarms & Warnings Window

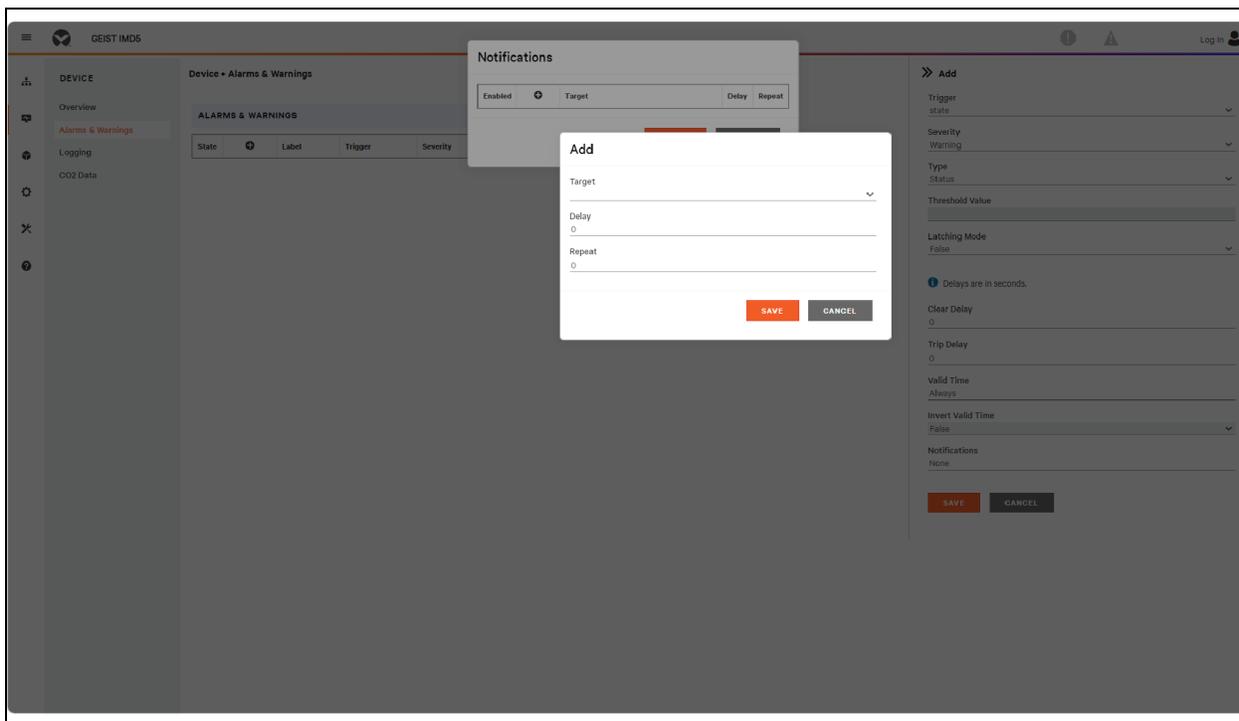

**To change an existing alarm or warning event:**

1. Click the Modify icon next to the alarm or warning event you wish to change.
2. Modify the settings as needed and click **SAVE**.
3. After an action is added, it has a checkbox in the enabled column at the far left. By default, when an action is added it is unchecked (disabled). Click the *checkbox* to enable it. This allows you to selectively turn different actions On and Off for testing.

**Figure 5.25 Changing Alarms & Warning Window**

The screenshot shows the GEIST IMDS interface. On the left is a navigation menu with options: Overview, Alarms & Warnings (selected), Logging, and CO2 Data. The main area is titled 'Device • Alarms & Warnings' and contains a table of 'ALARMS & WARNINGS'.

State	Label	Trigger	Severity	Type	Value	Valid Time	Notify
	Phase A	Voltage	Alarm	High	212	Always	[1]
	Outlet 2	Current	Alarm	High	15	Always	[0]
	Total	Real Power	Alarm	High	7200	Always	[0]
	Outlet 48	Current	Alarm	High	15	Always	[1]

The right-hand panel is titled 'Modify Phase A Voltage' and contains the following configuration options:

- Name: Phase A
- Trigger: Voltage
- Severity: Alarm
- Type: High
- Threshold Value: 212
- Latching Mode: False
- Delays are in seconds.
  - Clear Delay: 1
  - Trip Delay: 0
  - Valid Time: Always
  - Invert Valid Time: False
- Notifications: test@test.com (0,0)

At the bottom of the panel are **SAVE** and **CANCEL** buttons.

**To delete an existing alarm or warning event:**

1. Click the Delete icon next to the alarm or warning event you wish to remove.
2. Click **DELETE** and **SAVE** to confirm.

**Figure 5.26 Deleting Alarms & Warning Event**

The screenshot shows the GEIST IMDS interface. On the left is a navigation menu with options: Overview, Alarms & Warnings (selected), Logging, and CO2 Data. The main area is titled 'Device • Alarms & Warnings' and contains the same table of 'ALARMS & WARNINGS' as in Figure 5.25.

The right-hand panel is titled 'Delete Phase A Voltage' and contains the following configuration options:

- Are you sure?
- DELETE** and **CANCEL** buttons.

### 5.4.3 Logging

The Logging page allows you to access the historical data recorded by the Vertiv™ PowerIT rPDU by selecting the desired sensors and time range to be logged. The Logging page permits selecting all or selecting none.

To select or deselect the measurement value:

1. Click the Device icon and click on the Logging sub menu.
2. From Logging page, click *Select All* to select the measurement value and click *Select None* to deselect the measurement value.

Figure 5.27 Logging Page

The screenshot shows the 'Device + Logging' page in the GEIST IMDS interface. It is divided into two main sections: 'DATA LOG' and 'LOGGING'.

**DATA LOG Section:**

- 1:** A dropdown menu for 'Download the data log' is set to '\_JSON'. Below it is a red 'SUBMIT' button.
- 2:** A warning message states 'Warning: Changing the interval clears the log.' Below it, 'Log Interval (minutes)' is set to '15', with a red 'SAVE' button.
- 3:** A warning message states 'Log data will be permanently deleted.' Below it is a red 'CLEAR THE LOG' button.

**LOGGING Section:**

- A warning message states 'Click a measurement value to select or deselect.' Below it is a red 'SAVE' button.
- The device is identified as 'GEIST UPGRADABLE RPDU (DEVICE ID: FE39402B990200C3)'. There are two buttons: 'Select All' (highlighted) and 'Select None'.
- 4:** A table showing overall device metrics:

Label	Energy (kWh)	Real Power (W)	Apparent Power (VA)	Power Factor (%)	Voltage (V <sub>RMS</sub> )	Current (A <sub>RMS</sub> )	Current Crest Factor	Balance (%)
Phase A	89.884	4	9	48	125.1	0.07	4.07	100

- Below this is a table for 'Circuit 1' with a 'Current (A<sub>RMS</sub>)' of 0.00.
- 5:** A table showing individual outlet metrics:

Label	Energy (kWh)	Real Power (W)	Apparent Power (VA)	Power Factor (%)	Voltage (V <sub>RMS</sub> )	Current (A <sub>RMS</sub> )	Current Crest Factor
Outlet 1	0.047	0	0	100	120.7	0.00	1.00
Outlet 2	1.386	0	0	100	120.7	0.00	1.00
Outlet 3	0.001	0	0	100	120.7	0.00	1.00
Outlet 4	0.023	0	0	100	120.7	0.00	1.00
Outlet 5	0.000	0	0	100	120.7	0.00	1.00
Outlet 6	0.087	0	0	100	120.6	0.00	1.00

- At the bottom of the logging configuration area is a red 'SAVE' button.

**Table 5.10 Logging Page Descriptions**

Item	Name	Description
1	Download the data log	Click the drop-down menu and select one of the options: JSON for the JSON format. CSV for the .csv format in spreadsheet software. Click <i>SUBMIT</i> button to download the data log.
2	Log interval	The frequency at which data is written to the log file. The logging interval can be 1 to 600 minutes; the default setting is 15 minutes.  <b>WARNING! Log data will be permanently deleted.</b>
3	Clear the log	Delete the log file.  <b>WARNING! Log data will be permanently deleted.</b>
4	Select All/Select None	Click <i>Select All</i> to select the measurement value and click <i>Select None</i> to deselect the measurement value.
5	Logging	Click the measurement value to select or deselect desired logging parameters. By default, all measurements are selected. Click <i>SAVE</i> to save changes.

**NOTE:** The maximum loggable time frame is determined by number of measurements being logged and the interval at which data is written to the log file.

### 5.4.4 CO2 Data

Figure 5.28 CO2 Home Page

The screenshot displays the 'CO2 Data' section of a web interface for a GEIST UPGRADABLE RPDU. The interface includes a sidebar with navigation options like Overview, Alarms & Warnings, Logging, and CO2 Data. The main content area shows the device name and ID, followed by two tables of CO2 data.

**Device • CO2 Data**

**CO2 DATA**


**GEIST UPGRADABLE RPDU (DEVICE ID D792850A851900C3)**

Label	Accumulated CO2 (kg)	Instantaneous CO2 (kg/h)
Phase A	0.826	0.002

Label	Accumulated CO2 (kg)	Instantaneous CO2 (kg/h)
Outlet 1	0.000	0.000
Socket B	0.000	0.000
Outlet 3	0.000	0.000
Outlet 4	0.000	0.000
Outlet 5	0.000	0.000
Outlet 6	0.000	0.000
Outlet 7	0.000	0.000
Outlet 8	0.000	0.000
Outlet 9	0.000	0.000
Outlet 10	0.000	0.000
Outlet 11	0.000	0.000
Outlet 12	0.403	0.000

Figure 5.29 System Tab of CO2

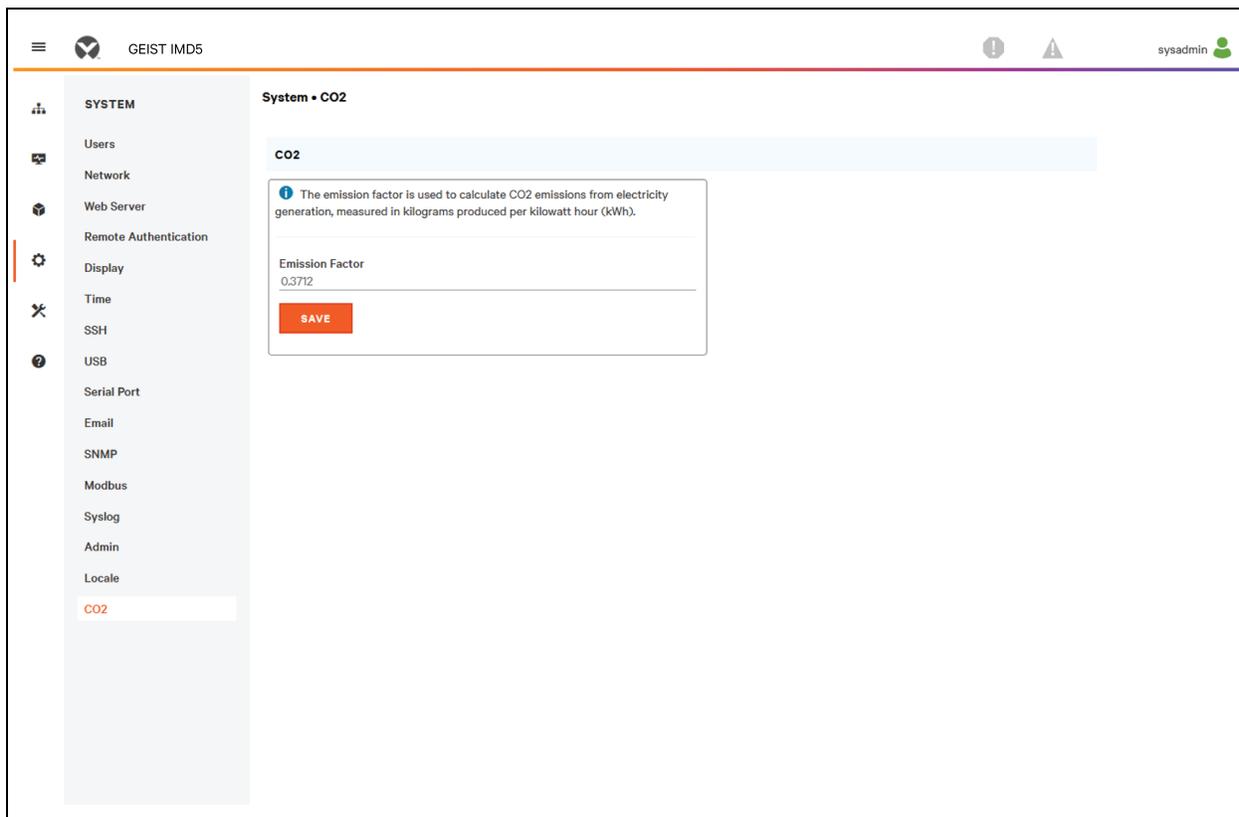

**NOTE:** There are three pages associated with CO2 page. The first page is the CO2 data page under Device (**Figure 5.28** on the previous page), which shows accumulated and instantaneous calculations for the phases and outlets. The second page is CO2 page under System where you set the Emission Factor to calculate CO2 per kWh. The default CO2 Emission Factor will be set to 0.3172. The third page is on the help-info page; The Lifetime CO2 is based on the Lifetime Energy. If a user does a reset on the energy usage on a PDU or a specific outlet, the value will return to 0. However, the Lifetime Energy of that component will not get reset to 0.

## 5.5 Provisioner Sub Menu


The Provisioner sub menu allows the user to discover locally connected Vertiv™ PowerIT rPDUs. The user can update their firmware and configure them by uploading a configuration settings file.

The Provisioner sub menu provides the ability to configure device settings (example, alarms) and system settings. This functionality can provision:

- IMD-5M running 6.x.x Firmware.
- rPDUs running 5.x.x firmware (IMD models 3E, 03E, 3E-S and 03E-S).
- Factory fresh or previously configured Vertiv™ PowerIT rPDUs with 6.1.0.
- Rack PDUs connected directly to the local network or connected as part of a Vertiv Intelligence Director (aggregation) network.
- All or selected discovered Vertiv™ PowerIT rPDUs.

**NOTE:** You must be logged in as Administrator-level user to utilize the Provisioner. IPV6 must be enabled on the Vertiv™ PowerIT rPDUs to be discovered. It is possible to configure most items in the System user interface menu. Other settings such as sensor settings and alarms cannot be configured with this version of the provisioning tool.


Figure 5.30 Provisioner Sub Menu Page

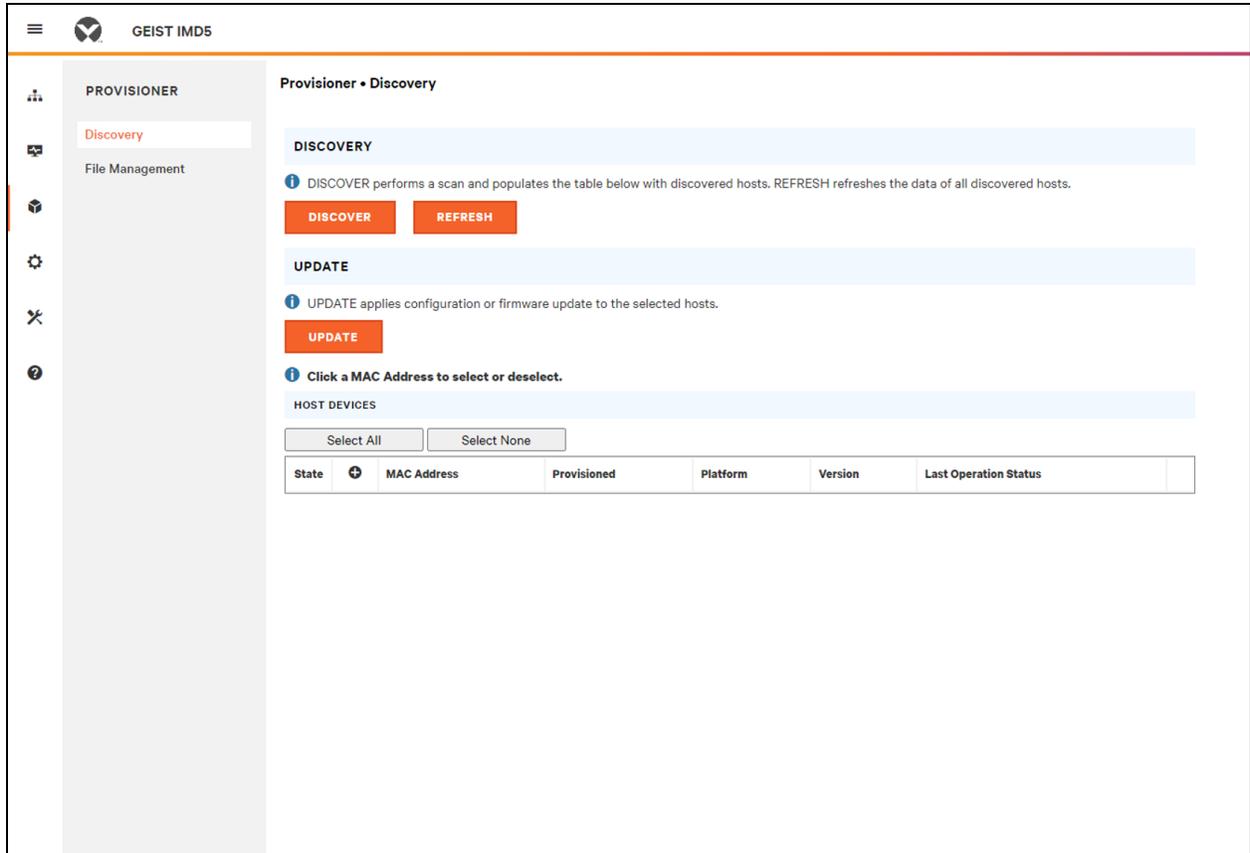

### 5.5.1 Discovery

1. Click on *DISCOVER* to identify locally connected Vertiv™ PowerIT rPDUs.
2. Click all the Vertiv™ PowerIT rPDUs in the listing that you would like to update firmware and/or configuration. Those units selected will be highlighted in green. You may also click the *Select All* to update all Vertiv™ PowerIT rPDUs in listed.
3. Click on *UPDATE* to update all selected Vertiv™ PowerIT rPDUs with firmware file and/or configuration file.

Figure 5.31 Discovery

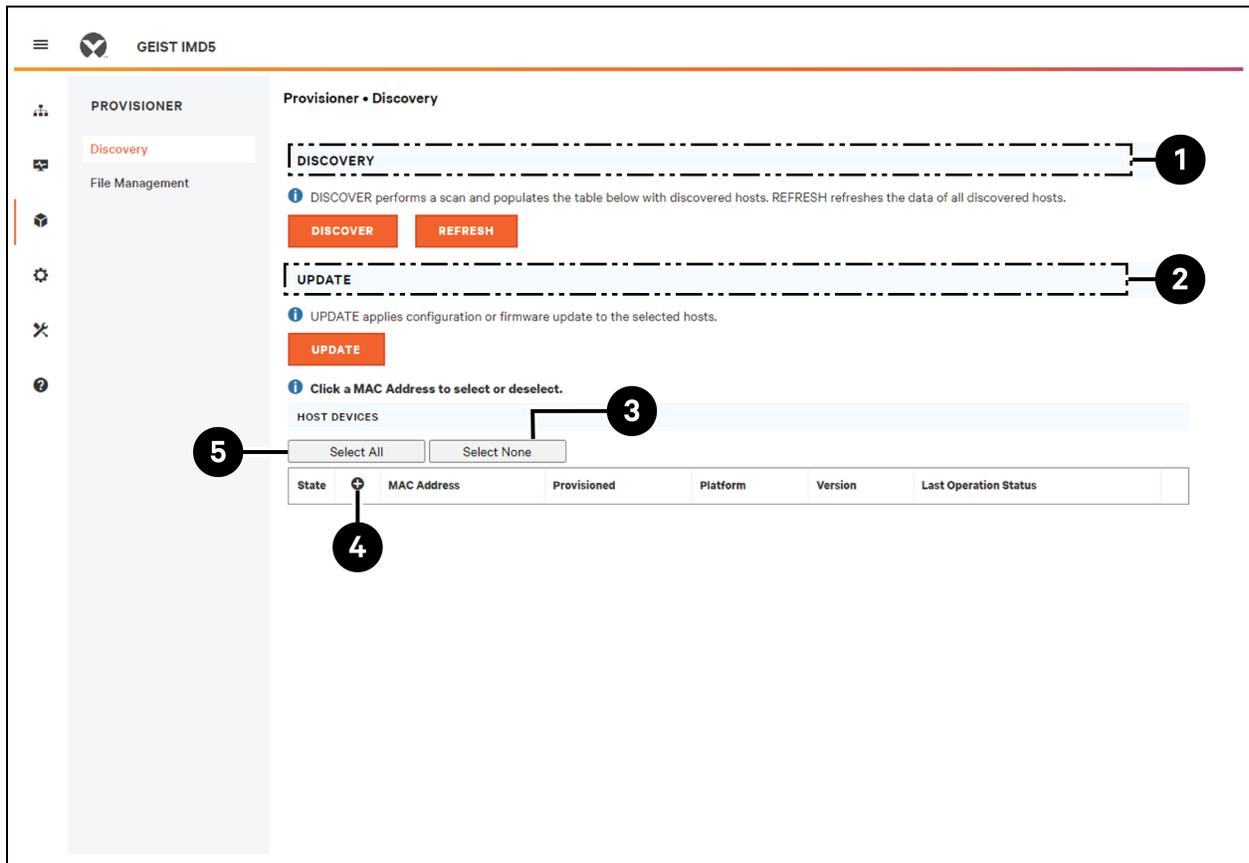

Number	Name	Description
1	Discover	Identifies local and network connected rack PDUs
2	Update	Updates firmware and/or configuration of selected rPDUs
3	Select None	Select none to unselect all selections
4	Add MAC address	Allows manually entered rPDUs by MAC address
5	Select All	Selects all connected rPDUs

**NOTE:** You must load the firmware and configuration files before performing this step in the File Management TAB.

## 5.5.2 File management


### Firmware Files:

1. Click *SELECT UPLOAD FILE* and select the **.firmware file** from the Open window.
2. Click *SUBMIT*. Firmware file will be listed.

### Configuration Files:

1. Click *SELECT UPLOAD FILE* and select the **.config file** from the Open window.
2. Click *SUBMIT*. Configuration file will be listed.

Figure 5.32 File Management Page

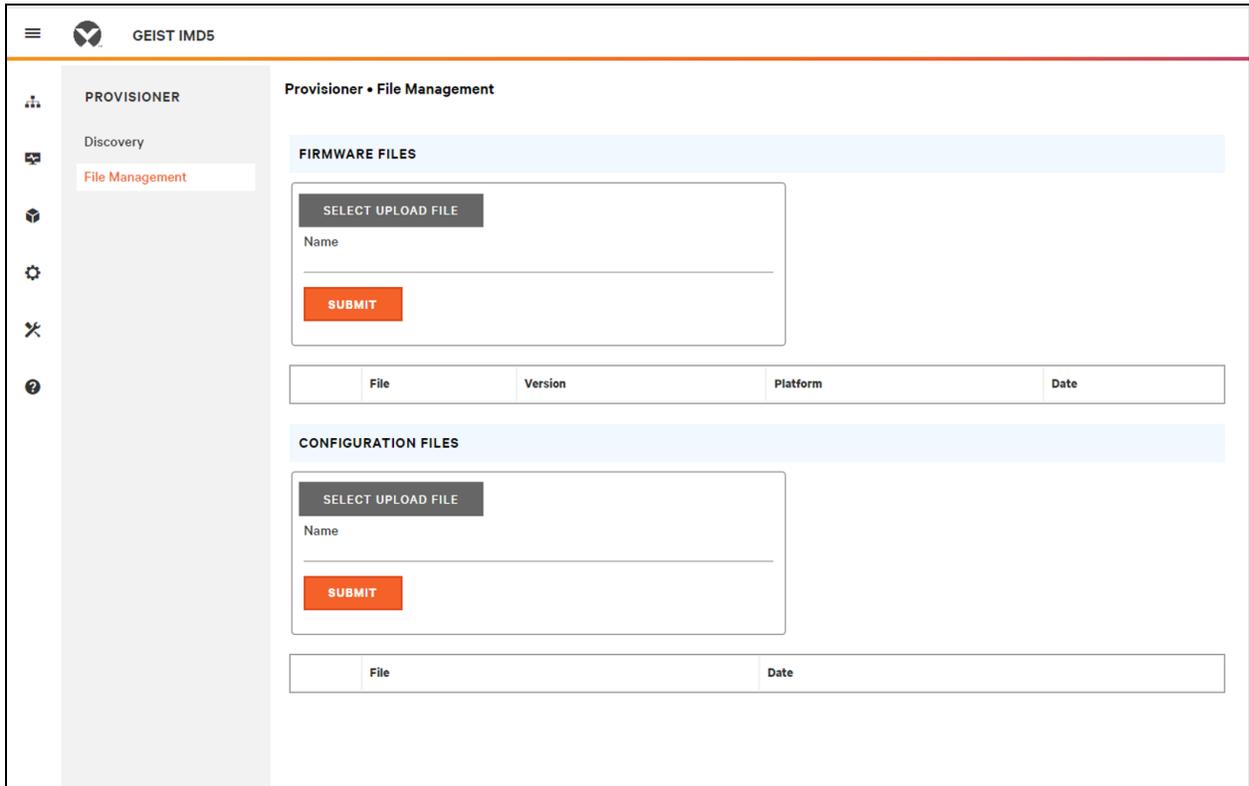

See [Provisioner - Format of the configuration settings file](#) on page 123 for examples of configuration setting files used by the Provisioner and the necessary format for the file.

## 5.6 System Sub Menu

**NOTE:** You must be logged in as Administrator to modify settings in the System tab.

### 5.6.1 Users

The Users page in the System menu allows you to manage or restrict access to the unit's features by creating accounts for different users.

**NOTE: Web/SSH/CLI account lockout policy: An account is locked for 30 minutes when 10 sequential unsuccessful login attempts are made within 60 minutes. This can be edited with the latest firmware version.**

Scope allows an Administrator-level account to restrict Users to the visibility of specified Outlet information.

Figure 5.33 User Page

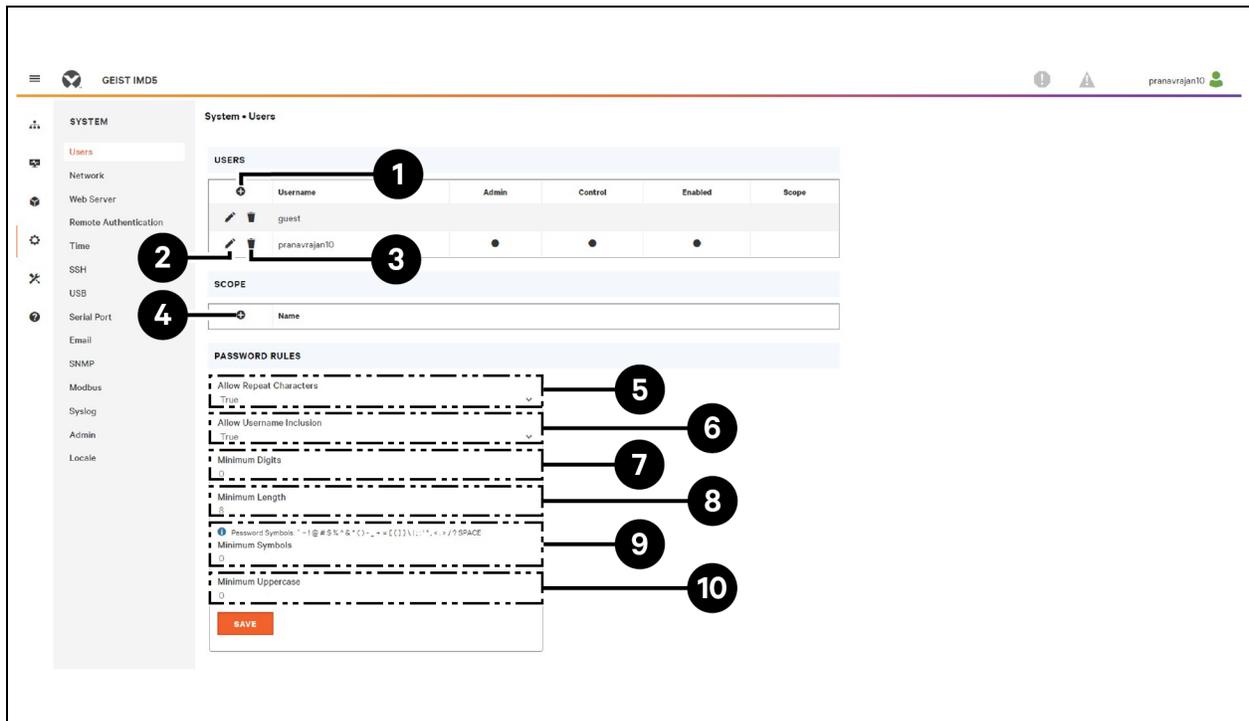


Table 5.11 User Page Descriptions

Number	Descriptions
1	Add new user account
2	Modify user account
3	Delete user account
4	Add user scope: Only visible when logged in as an Administrator*
5	Allow Repeat Characters: restrict the use of more than 2 repeat characters (default false)*
6	Allow Username Inclusion: restrict the inclusion of the user name in the password (default false)*
7	Minimum Digits: enter the minimum numerical digit characters (default 0)*
8	Minimum Length: enter the minimum number of password characters (default 8, minimum 6)*
9	Minimum Symbols: enter the minimum symbol characters (default 0)*
10	Minimum Uppercase: enter the minimum uppercase characters (default 0)*

**NOTE:** \*Only visible when logged in as an Administrator.

**NOTE:** Only an Administrator-level account can add, modify or delete users as well as add, modify or delete scopes. Control-level and View-Only accounts can change their own passwords using the Modify User icon, but cannot add, delete or modify other accounts. The Guest account cannot add, delete or modify any account, not even itself.

**To add or modify a user account:**

1. Click the Add or Modify User icon.
2. Create or modify the account information as needed.
  - a. **Username:** The name of the account. User names may be up to 24 characters long, are case-sensitive and may not contain spaces or any of these prohibited characters: \$&` :<>[ ] [ ]"+%@/ ; =?\^!~.,

**NOTE: A username cannot be changed after the account is created.**

- b. **Administrator:** If set to *True*, this account has Administrator level access to the unit and can change any setting.
  - c. **Control:** If set to *True*, this account has Control-level access. Setting Administrator to *True* will automatically set Control to *True* as well. Setting this to *False* makes the account an Enabled account, which is view-only.
  - d. **Scope:** If a user scope has been created, select applicable scope for the account. See step [To add or modify a user scope](#): on the facing page.
  - e. **New Password:** Account password may be up to 24 characters long, are case-sensitive and may not contain spaces.
  - f. **Account Status:** Set the account to *Enabled* or *Disabled*. Disabling an account prevents it from being used to log in, but does not delete it from the account list.
3. Click **SAVE**.

**User Account Types**

- **Administrator:** Administrator accounts (accounts with both administrator and control authority set to *True*, as above) have full control over all available functions and settings on the device, including the ability to modify system settings and add, modify or delete other users accounts.
- **Control:** Control accounts (accounts with only control set to *True*) have control over all settings pertaining to the device's sensors. They can add, modify or delete alarms and warning events and notification actions and can change the names or labels of the device and its sensors. Control accounts cannot modify system settings or make changes to other users accounts.
- **View-Only:** If both administrator and control are set to *False*, the account is a View-Only account. The only changes, a View-Only account is permitted to make are changing its own account's password and changing the preferred language for its own account. View-Only accounts cannot change any device or system settings.
- **Guest:** Any user that views the unit's web page without logging in is automatically viewing the unit as Guest. By default, the Guest account is a View-only account and cannot make changes to any settings. This account does not allow changes to names, labels, alarm events and notifications. The Guest account cannot be deleted but can be disabled which would require the user to log in for viewing system status.

**To change a user password:**

1. Log in to your account.
2. Click the Modify User icon.
3. Click on Username in the top right corner of the page.
4. Enter a new password and verify new password by re-entering in Verify Password field.
5. Click **SAVE**.

Figure 5.34 Change User Password Page

**>> Modify**

Username

Administrator  
True

Control  
True

Scope  
--

New Password

Verify Password

Account Status  
Enabled

Language Preference  
English

SSH Public Key

	Label	SSH Public Key
+		

**SAVE** **CANCEL**

**To add or modify a user scope:**

1. Click the Add or Modify Scope icon. Refer **Figure 5.35** below.
2. Create or modify the scope information as needed.
  - a. **Label:** Enter the desired name of the selected scope.
  - b. **Remote Authentication Attribute:** Used for all remote authentication types.
  - c. Click applicable Outlets for a specified User. (Highlight in Green)
3. Click **OK** to save changes.

Figure 5.35 Add Scope

SCOPE	
+	Name

**Password rules and account policy settings**

**NOTE:** A user will be logged out automatically after 10 minutes of inactivity.

## 5.6.2 Network

The unit's network configuration is set on the *Network tab* of the System menu. Settings pertaining to the unit's network connection are:

- **Hostname:** The hostname may be used as a method for device identification on the network.
- **Protocol:** Click on the IPv6 drop-down menu, select *Enabled* or *Disabled* and click on *Save*.
- **Interfaces:** Used to configure the IP address of the Vertiv™ PowerIT rPDU, enable/disable DHCP and to view Link State, Speed and Uptime. The device supports up to eight user-configured IP address entries.
- **Ports:** Used to view and/or modify the following Ethernet Port settings - Label, Interface, RSTP Role, RSTP status, STP State, Link State, Speed, Uptime and Enable/Disable.
- **IP Address:** Used to add or modify the IP Addresses.
- **Routes:** Displays configured routes and is where you will set your Gateway address for the Vertiv™ PowerIT rPDU. Default routes are distinguished by a *destination* of **0.0.0.0** or **::**, with a Prefix of **0** and Interface of **all**. Only one default route can exist for IPv4 and one for IPv6.
- **DNS:** Allows the unit to resolve hostnames for email, **NTP** and **SNMP** servers.
- **RSTP:** Used for to view and modify the state of RSTP, mode, Bridge priority, Max Hops, Hello time Maximum age (Max) and forward delay.

Figure 5.36 Network Configuration Page

**System • Network**

**HOSTNAME**

Hostname

SAVE

**PROTOCOL**

IPv6  
Enabled

SAVE

**INTERFACES**

Label	MAC Address	DHCP	Link State	Speed	Uptime
Bridge 0	00:02:99:25:40:39	Enabled	Up	--	333197

**PORT**

Label	Interface	RSTP Role	STP State	Link State	Speed	Uptime	Enabled
Port 1	Bridge 0	Unknown	Forwarding	Up	1Gb/s	333197	Enabled
Port 0	Bridge 0	Unknown	Disabled	Down	--	431849	Enabled

**IP ADDRESS**

IP Address	Prefix
192.168.123.123	24
169.254.161.199	16
fe80::202:99ff:fe25:4039	64

**ROUTES**

Destination	Prefix	Gateway	Interface
-------------	--------	---------	-----------

**DNS**

DNS Server Address
8.8.8.8
8.8.4.4

**RSTP**

Enable/Disabled

Mode  
RSTP

Bridge Priority  
24576

Max Hops  
40

Hello Time  
2

Max Age  
40

Forward Delay  
21


SAVE

**To edit the interface parameters:**

1. Click the Modify icon.
2. Modify the desired fields.
  - a. **Label:** Change the desired name of the selected interface.
  - b. **Enable:** Enable/Disable the selected interface. If only one interface is available, disabling the interface restricts access to the device requiring a network reset.
  - c. **DHCP:** Enable/Disable DHCP on the selected interface.
3. Click SAVE.

**NOTE:** Any changes made to the network interface settings take effect once the Save button is clicked. If you have changed the IP address, it will appear as if the unit is no longer responding because the browser will not be able to reload the web page. Close the browser window, type the new IP address into the browser's address bar and the unit will be accessible.

**Figure 5.37 Interface Parameters**

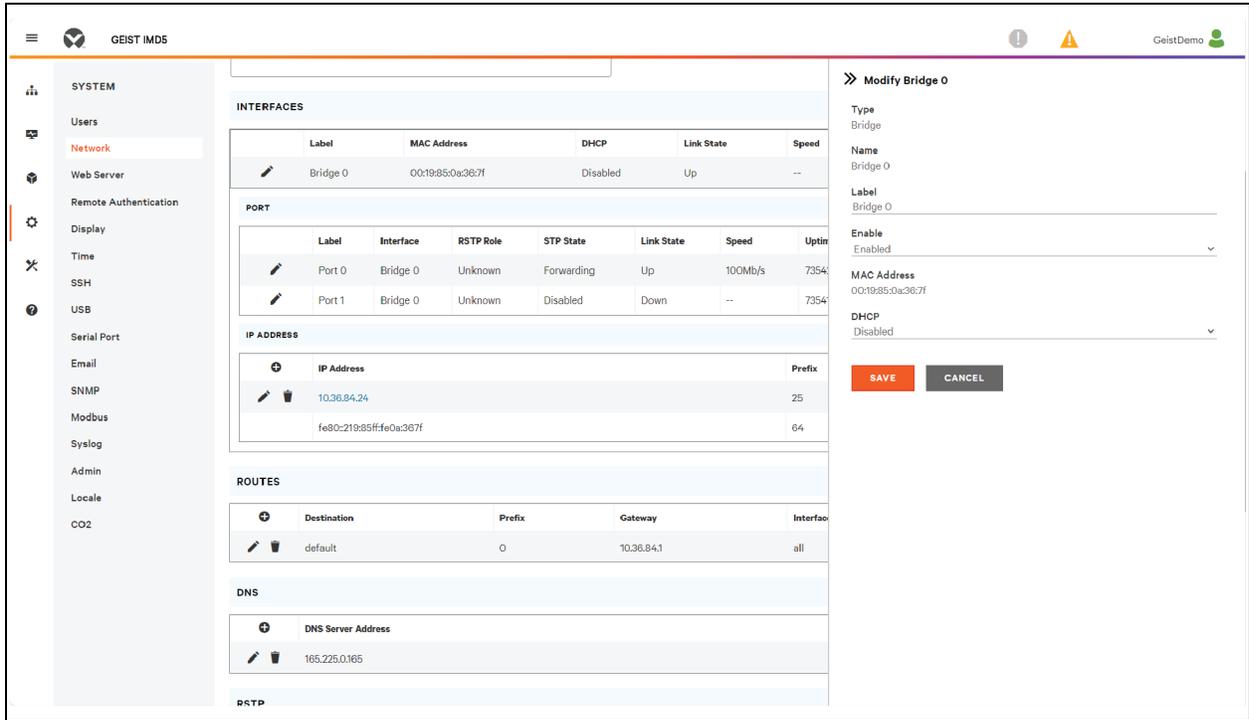

**To add an interface for a wireless USB adapter:**

1. Insert the wireless USB adapter into the USB port. (The rPDU will be inaccessible for a few seconds while the network stack reconfigures itself.)
2. After the adapter is auto detected, a Wi-Fi interface will appear.
3. Click the Modify icon. Select the applicable SSID from the Detected SSIDs drop-down menu.

**NOTE:** See [TP-Link Wireless USB Adapters](#) on page 118 for listing of TP-Link wireless.

**To add a new IP Address:**

1. Click the Add icon.
2. Enter the IPv4 or IPv6 address and Prefix/Subnet Mask into appropriate fields. Up to eight IP addresses can be statically assigned.
3. Click SAVE.

Figure 5.38 Add New IP Address

The screenshot shows the GEIST IMDS web interface. On the left is a navigation menu with categories like SYSTEM, Users, Network, Web Server, Remote Authentication, Display, Time, SSH, USB, Serial Port, Email, SNMP, Modbus, Syslog, Admin, Locale, and CO2. The main content area is divided into several sections:

- INTERFACES**: A table with columns Label, MAC Address, DHCP, Link State, and Speed. It shows one entry: Bridge 0 with MAC 00:19:85:0a:36:7f, DHCP Disabled, and Link State Up.
- PORT**: A table with columns Label, Interface, RSTP Role, STP State, Link State, Speed, and Uptime. It shows two entries: Port 0 (Bridge 0, Unknown, Forwarding, Up, 100Mb/s, 7609) and Port 1 (Bridge 0, Unknown, Disabled, Down, --, 7609).
- IP ADDRESS**: A table with columns IP Address and Prefix. It shows two entries: 10.36.84.24 (Prefix 25) and fe80::219:85ff:fe0a:367f (Prefix 64).
- ROUTES**: A table with columns Destination, Prefix, Gateway, and Interface. It shows one entry: default (Prefix 0, Gateway 10.36.84.1, Interface all).
- DNS**: A table with columns DNS Server Address. It shows one entry: 165.225.0.165.

On the right side, an 'Add' dialog box is open, showing fields for 'IP Address' and 'Prefix', and buttons for 'SAVE' and 'CANCEL'.

**To modify an existing IP address:**

1. Click the Modify icon.
2. Edit the IP address and Prefix/Subnet Mask fields as needed.
3. Click **SAVE**.

Figure 5.39 Modifying IP Address

The screenshot shows the GEIST IMDS web interface. On the left is a navigation menu with categories like SYSTEM, Users, Network, Web Server, Remote Authentication, Display, Time, SSH, USB, Serial Port, Email, SNMP, Modbus, Syslog, Admin, Locale, and CO2. The main content area is divided into several sections:

- INTERFACES:** A table with columns Label, MAC Address, DHCP, Link State, and Speed. It shows one entry: Bridge 0 with MAC 00:19:85:0a:36:7f, DHCP Disabled, Link State Up, and Speed --.
- PORT:** A table with columns Label, Interface, RSTP Role, STP State, Link State, Speed, and Uptime. It shows two entries: Port 0 (Bridged mode, Forwarding STP State, Up Link State, 100Mb/s Speed, 7809 Uptime) and Port 1 (Independent mode, Disabled STP State, Down Link State, -- Speed, 7809 Uptime).
- IP ADDRESS:** A table with columns IP Address and Prefix. It shows two entries: 10.36.84.24 with Prefix 25, and fe80::219:85ff:fe0a:367f with Prefix 64.
- ROUTES:** A table with columns Destination, Prefix, Gateway, and Interface. It shows one entry: default with Prefix 0, Gateway 10.36.84.1, and Interface all.
- DNS:** A table with columns DNS Server Address. It shows one entry: 165.225.0.165.

On the right side, a modal dialog titled 'Modify 10.36.84.24' is open. It contains input fields for 'IP Address' (10.36.84.24) and 'Prefix' (25), and 'SAVE' and 'CANCEL' buttons.

**To modify port settings:**

1. Click the Modify icon.
2. Enter the appropriate information.
  - a. Change port label if desired.
  - b. Select either Bridged/Independent Mode.
  - c. Enable/Disable port.
  - d. Assign STP State. This designates this interface's contribution to the root path cost when it serves as the root port.
3. Click SAVE.

Figure 5.40 Modifying Port Setting

The screenshot displays the GEIST IMDS web interface. The sidebar on the left contains a menu with categories like SYSTEM, Users, Network, Web Server, Remote Authentication, Display, Time, SSH, USB, Serial Port, Email, SNMP, Modbus, Syslog, Admin, Locale, and CO2. The main content area is divided into several sections: INTERFACES, PORT, IP ADDRESS, ROUTES, DNS, and RSTP. The 'Modify Port 0' panel on the right shows configuration options for Type (Port), Name (Port 0), Label (Port 0), Mode (Bridged), Enable (Enabled), RSTP Role (Unknown), STP State (Forwarding), and STP Cost (0). There are 'SAVE' and 'CANCEL' buttons at the bottom of this panel.

Label	MAC Address	DHCP	Link State	Speed
Bridge 0	00:19:85:0a:36:7f	Disabled	Up	--

Label	Interface	RSTP Role	STP State	Link State	Speed	Uptime
Port 0	Bridge 0	Unknown	Forwarding	Up	100Mb/s	76115
Port 1	Bridge 0	Unknown	Disabled	Down	--	76114

IP Address	Prefix
10.36.84.24	25
fe80::219:85:ff:fe0a:367f	64

Destination	Prefix	Gateway	Interface
default	0	10.36.84.1	all

DNS Server Address
165.225.0.165

**To add a new route:**

1. Click the Add icon.
2. Enter the appropriate information.
  - a. Destination IP address for desired route.
  - b. Enter *Prefix* for the desired route.
  - c. Enter the Gateway IP address.
  - d. Select the *Interface* that route applies.
3. Click **SAVE**.

Figure 5.41 Adding Route

The screenshot shows the GEIST IMDS web interface with the 'Network' section selected in the left sidebar. The main content area is divided into several sections:

- INTERFACES:** A table with columns: Label, MAC Address, DHCP, Link State, Speed. One entry is visible: Bridge 0, 0C:19:85:0a:36:7f, Disabled, Up, --.
- PORT:** A table with columns: Label, Interface, RSTP Role, STP State, Link State, Speed, Uptime. Two entries are visible: Port 0 (Bridge 0, Unknown, Forwarding, Up, 100Mb/s, 7612s) and Port 1 (Bridge 0, Unknown, Disabled, Down, --, 7612s).
- IP ADDRESS:** A table with columns: IP Address, Prefix. Two entries are visible: 10.36.84.24 (Prefix 25) and fe80:c219:85ff:fe0a:367f (Prefix 64).
- ROUTES:** A table with columns: Destination, Prefix, Gateway, Interface. One entry is visible: default (Prefix 0, Gateway 10.36.84.1, Interface all).
- DNS:** A table with columns: DNS Server Address. One entry is visible: 165.225.0.165.
- RSTP:** A section header with no data visible.

On the right side, the 'Add' form is open, showing the following fields:

- Destination:
- Prefix:
- Gateway:
- Interface:

At the bottom of the form are 'SAVE' and 'CANCEL' buttons.

**To modify an existing route:**

1. Click the Modify icon.
2. Edit the desired fields.
3. Click *SAVE*.

**Figure 5.42 Modifying Route**

The screenshot displays the GEIST IMDS web interface. On the left is a sidebar menu with categories: SYSTEM, Users, Network (highlighted), Web Server, Remote Authentication, Display, Time, SSH, USB, Serial Port, Email, SNMP, Modbus, Syslog, Admin, Locale, and CO2. The main content area is titled 'INTERFACES' and contains several tables and sections:

- INTERFACES:** A table with columns: Label, MAC Address, DHCP, Link State, Speed. It shows one entry: Bridge 0 with MAC 0c:19:85:0a:36:7f, DHCP Disabled, Link State Up, and Speed --.
- PORT:** A table with columns: Label, Interface, RSTP Role, STP State, Link State, Speed, Uptime. It shows two entries: Port 0 (Bridge 0, Unknown, Forwarding, Up, 100Mb/s, 7613s) and Port 1 (Bridge 0, Unknown, Disabled, Down, --, 7613s).
- IP ADDRESS:** A table with columns: IP Address, Prefix. It shows two entries: 10.36.84.24 (Prefix 25) and fe80::219:85:ff:fe0a:367f (Prefix 64).
- ROUTES:** A table with columns: Destination, Prefix, Gateway, Interface. It shows one entry: default (Prefix 0, Gateway 10.36.84.1, Interface all).
- DNS:** A section with a 'DNS Server Address' table containing one entry: 165.225.0.165.

On the right side, a 'Modify 0.0.0.0' panel is open, showing the following configuration:


- Destination: 0.0.0.0
- Prefix: 0
- Gateway: 10.36.84.1
- Interface: all

At the bottom of the 'Modify 0.0.0.0' panel are 'SAVE' and 'CANCEL' buttons.

**To add a new DNS Server Address:**

1. Click the Add icon.
2. Enter the IP of the desired DNS server. Up to two DNS servers can be added.
3. Click *SAVE*.


Figure 5.43 Adding DNS Server Address

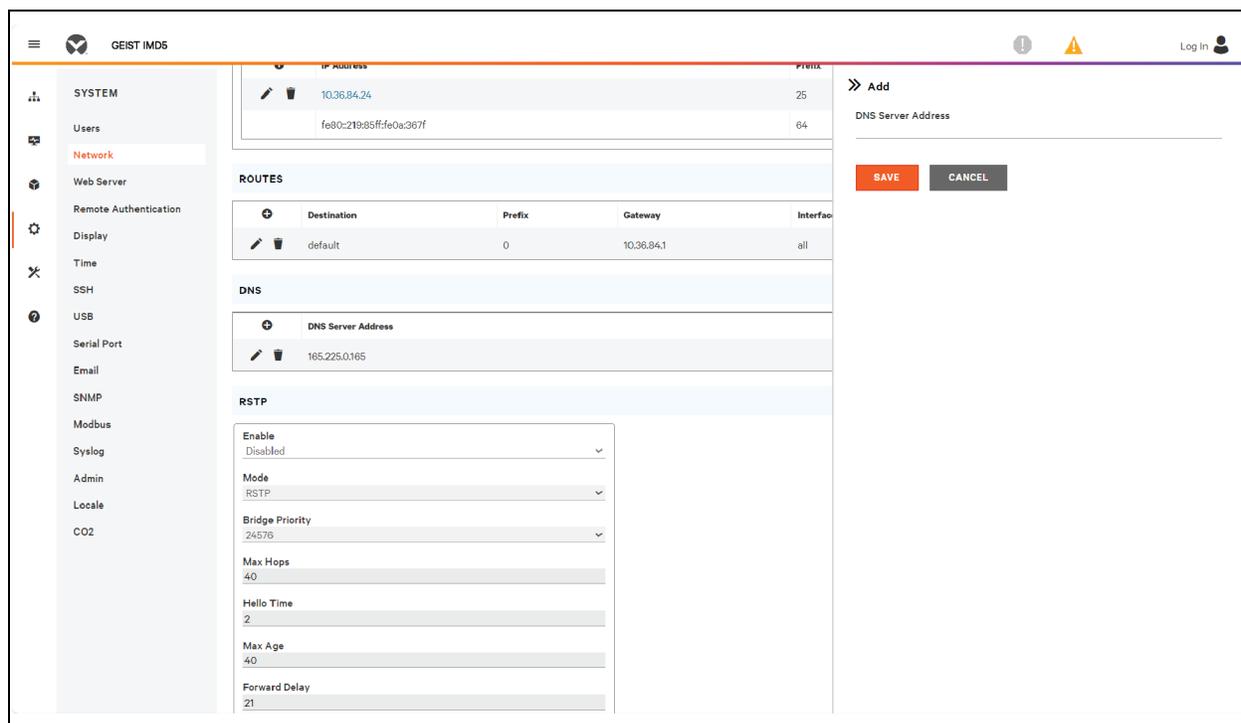

**To modify an existing DNS Server address:**

1. Click the Modify icon.
2. Edit the DNS Server Address field as required.
3. Click *SAVE*.


Figure 5.44 Modifying DNS Server Address

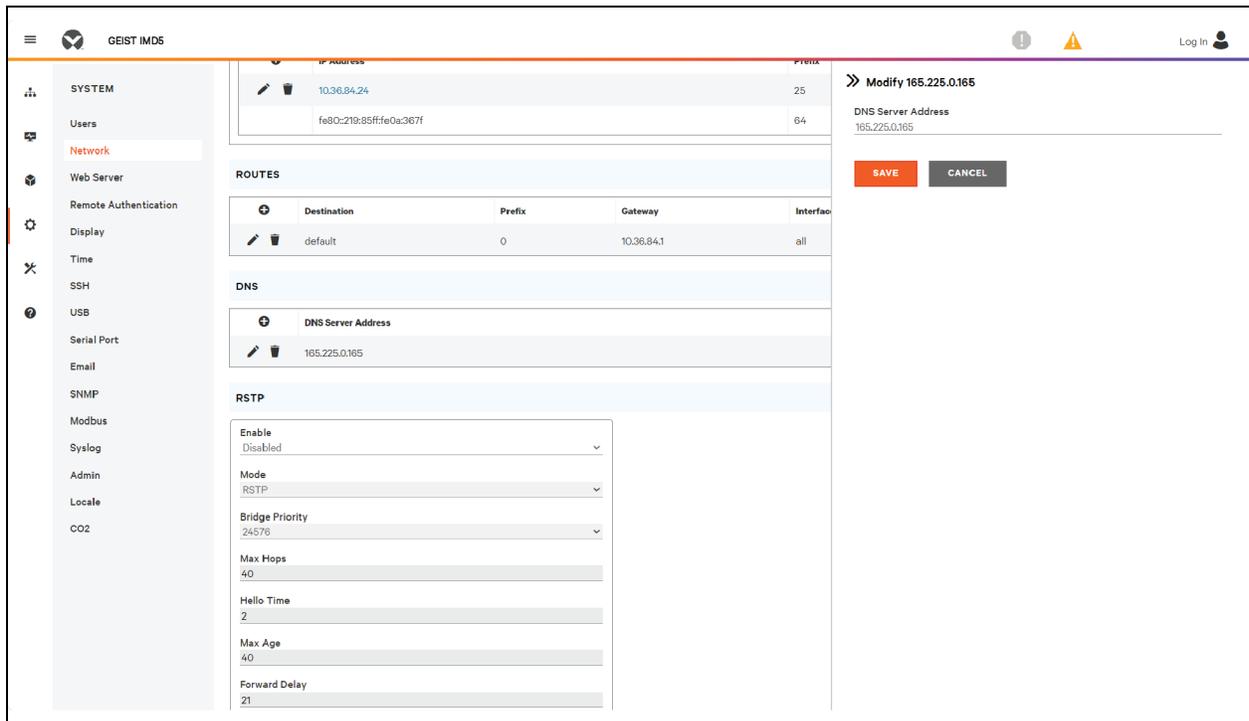

#### To change RSTP settings:

1. Change the settings, as desired.
  - a. **Enable:** Enable or Disable RSTP protocol.
  - b. **Mode:** RSTP mode supports falling back to STP when necessary.
  - c. **Bridge Priority:** Click the drop-down menu, select the appropriate value and click Save.
  - d. **Max Hops:** Used when mode enabled to RSTP.
  - e. **Hello Time:** The interval, in seconds, between periodic transmissions of configuration messages by designated ports.
  - f. **Max Age:** The maximum age, in seconds, of the information transmitted by this interface, when it serves as the root bridge. Set at 2 seconds.
  - g. **Forward Delay:** The delay, in seconds, used by bridges to transition the root bridge and designated ports into forwarding mode. Set at 21 seconds.
2. Click **SAVE**.

Figure 5.45 Changing RSTP Setting

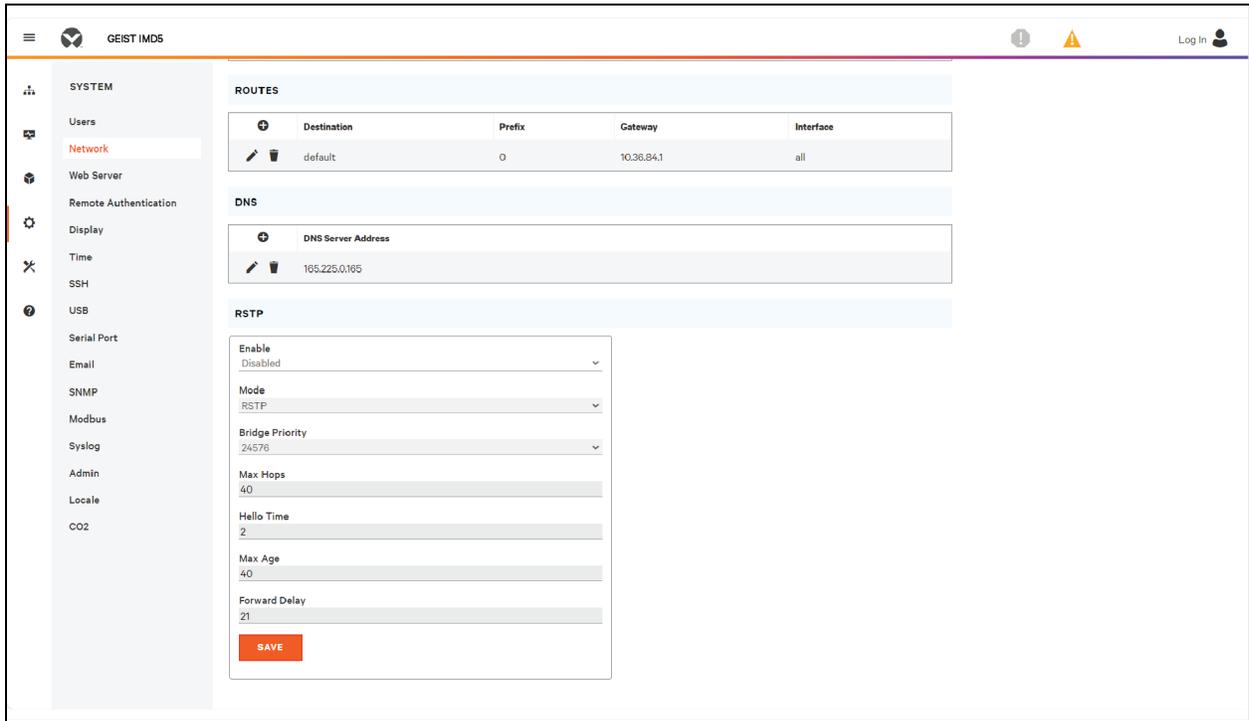

### 5.6.3 Web server


The unit's Web Server configuration can be updated on the Web Server tab of the System menu.

- **HTTP Interface:** Enabled or redirected to HTTPS, whilst the HTTPS interface can be enabled or disabled. When the HTTP interface is redirected to HTTPS and the HTTPS interface is disabled, the HTTP interface will be effectively disabled too.

**NOTE:** Note it is not possible to disable HTTP, HTTPS and SSH protocols at the same time.

- **HTTP/HTTPS Server Port:** Allows you to change the TCP ports that the HTTP and HTTPS services listen to for incoming connections. The defaults are Port 80 for HTTP and Port 443 for HTTPS.

Figure 5.46 HTTP Configuration Page

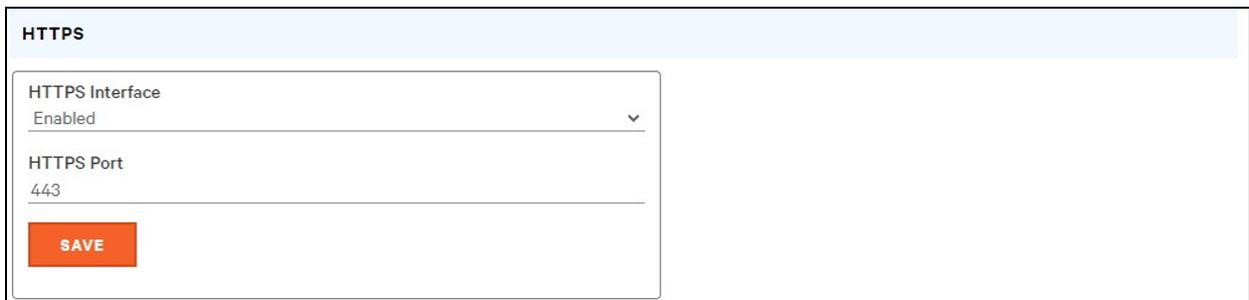

- **SSL Certificate:** Allows you to upload your own signed SSL Certificate file to replace the default one. The certificate can be either self-signed or signed from a Certification Authority. SSL Certificate must be in either PEM or PFX (PKCS12) format.

Figure 5.47 SSL Certificate

- **PEM Format:**
  - The public certificate and private key must reside in the same file.
  - The certificate must follow standard x.509.
  - The private key must be generated with either the RSA algorithm or the ECDSA algorithm. It must be in *PEM* format.
    - 2048-bit RSA or smaller is not supported.
    - P-384 is the supported key size for ECDSA.
  - The *PEM RSA* private key may be password-secured.
- **PFX Format:** Support is also available for the PKCS12 standard (*pfx*), which is a binary encrypted combination of a *PEM* public certificate and its *PEM* private key. When generating a *PFX* certificate you are prompted for an optional password.

## 5.6.4 Remote authentication

The Remote Authentication page allows you to designate one of three authentication protocols for remote access to the device. By default, the device uses the local database to authenticate users. Remote authentication allows the device to authenticate a user with a remote server. If remote authentication fails, then it will revert to local authentication.

### To change Remote Authentication settings:

1. Select the required mode from the drop-down menu.
  - **Disabled:** Local Authentication.
  - **LDAP:** Lightweight Directory Access Protocol.
  - **TACACS+:** Terminal Access Controller Access Control System Plus.
  - **RADIUS:** Remote Authentication Dial-In User Service.
2. Click *SAVE*.

### LDAP

The Lightweight Directory Access Protocol (LDAP) can be set up through this menu.

**NOTE: Knowledge of your LDAP server settings is required to set up the Vertiv™ PowerIT rPDU device for this remote authentication protocol. If you are not familiar with these settings, consult your LDAP server administrator.**

Configuration for remote authentication using LDAP.

- **LDAP Server Address:** Specify the host address for LDAP. The *HOST* can be an IPv4 address, an IPv6 address in brackets (Such as `[2001:0DB8:AC10:FE01::]`) or a hostname.
- **LDAP Server Port:** Used to set the LDAP port number. The default port for LDAP is 389 - use for Security Type *None* or *StartTLS*. Use 636 for Security Type *SSL*.
- **LDAP Mode:** From the drop-down menu, select *Active Directory* or **OpenLDAP**. See [An Example of Configuring LDAP for Active Directory Credentials](#) on page 147.
- **Security Type:** From the drop-down menu, select *None*, *SSL* or *StartTLS*.
- **Bind DN:** Distinguished Name used to bind to the directory server. Blank string for Bind DN and Password implies anonymous bind.
- **Bind Password:** Password used to bind to the directory server.
- **Base DN:** DN to use for the search base.

The remaining fields come from the NIS schema, defined in RFC2307. They are used to authenticate users in LDAP. Leaving them blank will use the default value.

- **User Filter:** LDAP filter for selecting users.
- **"uid" Mapping:** Name of the server attribute that corresponds to the *uid* attribute in the schema.
- **"uidNumber" Mapping:** Name of the server attribute that corresponds to the *uidNumber* attribute in the schema.
- **Group Filter:** LDAP filter for selecting groups.
- **"gid" Mapping:** Name of the server attribute that corresponds to the *gid* attribute in the schema.
- **"memberUid" Mapping:** Name of the server attribute that corresponds to the *memberUid* attribute in the schema.

**NOTE: Users must populate uidNumber. A null or missing value will cause a valid login to fail. The user's uidNumber must be 1000 or greater. A value lower than 1000 will cause a valid login to fail.**

- **Enabled Group:** Users in this group have view-only privileges as described in the Users section of this manual.
- **Control Group:** Users in this group have control privileges as described in the Users section of this manual.
- **Admin Group:** Users in this group have admin privileges as described in the Users section of this manual. LDAP users do not count toward the minimum number of required admin users.

Click **SAVE**.

The Enabled Group, Control Group and Admin Group fields tell how to map groups to user permissions. A user must belong to one of these groups to access the device. If a user belongs to more than one group, then the group with the highest permission is used.

Figure 5.48 LDAP Menu

The screenshot shows a web-based configuration interface for LDAP. The title 'LDAP' is at the top. Below it, there are several sections of configuration options:

- LDAP Server Address**: A text input field.
- LDAP Server Port**: A text input field with the value '389'.
- LDAP Mode**: A dropdown menu with 'Active Directory' selected.
- Security Type**: A dropdown menu with 'None' selected.
- Bind DN**: A text input field.
- Bind Password**: A text input field.
- Verify Password**: A text input field.
- Base DN**: A text input field.
- User Filter**: A text input field with the value '(objectClass=posixAccount)'.
- 'uid' Mapping**: A text input field with the value 'uid'.
- 'uidNumber' Mapping**: A text input field with the value 'uidNumber'.
- Group Filter**: A text input field with the value '(objectClass=posixGroup)'.
- 'gid' Mapping**: A text input field with the value 'gidNumber'.
- 'memberUid' Mapping**: A text input field with the value 'memberOf'.
- Enabled Group**: A text input field with the value 'enabled'.
- Control Group**: A text input field with the value 'control'.
- Admin Group**: A text input field with the value 'admin'.

At the bottom of the form is a red button labeled 'SAVE'.

## TACACS+

The Terminal Access Controller Access-Control Plus Protocol (TACACS+) can be set up through this menu.

**NOTE: Knowledge of your TACACS+ server settings is required to set up the Vertiv™ PowerIT rPDU device for this remote authentication protocol. If you are not familiar with these settings, consult TACACS+ server administrator.**

Configuration for remote authentication using TACACS+.

Figure 5.49 TACACS+ Menu

The screenshot shows a configuration window for TACACS+. The window has a light blue header with the text 'TACACS+'. Below the header is a white form area with several input fields, each with a label and a horizontal line for text entry. The labels are: 'Primary Authentication Server', 'Alternate Authentication Server', 'Primary Accounting Server', 'Alternate Accounting Server', 'Shared Secret (Password)', 'Verify Password', 'Service' (with a dropdown arrow and 'PPP' selected), 'Admin Attribute', 'Control Attribute', and 'Enabled Attribute'. At the bottom left of the form is a red rectangular button with the word 'SAVE' in white capital letters.

- **Primary Authentication Server:** The primary authentication/authorization server, which can be an IPv4 address, an IPv6 address in square brackets (Such as [2001:0DB8:AC10:FE01::]) or a host name. The Primary Authentication Server is used for both authentication and authorization. This AA server address/host name is required.
- **Alternate Authentication Server:** The alternate authentication/authorization server, which can be an IPv4 address, an IPv6 address in square brackets or a host name. The Secondary Authentication Server is used for both authentication and authorization.
- **Primary Accounting Server:** The primary accounting server, which can be an IPv4 address, an IPv6 address in square brackets or a host name. The Primary Accounting Server is optional. If configured, the server is notified when a user is authorized.
- **Alternate Accounting Server:** The alternate accounting server, which can be an IPv4 address, an IPv6 address in square brackets or a host name. The Secondary Accounting Server is optional. If configured, the server is notified when a user is authorized.
- **Shared Secret (Password):** Enter a secret word or passphrase in the Shared Secret field (applies to both primary and secondary authentication and accounting servers).
- **Service:** The value to use for the service field in TACACS+ requests. Valid options are *PPP* and *raccess*.
- **Admin Attribute:** A user with this attribute will have *admin* privileges as described in the Users section of this manual. TACACS+ users do not count toward minimum number of required admin users.
- **Control Attribute:** Users with this attribute will have control privileges as described in the Users section of this manual.

- **Enabled Attribute:** Users with this attribute will have view-only privileges as described in the Users section of this manual.

Click **SAVE**.

**NOTE:** The Attribute-Value Pairs (AVPs) returned by the server during authentication/authorization determine the user permissions. The Group Attribute field tells the system which AVP contains the user's access group. If the AVP value matches the Admin Group field, then the user has Admin (full) access. If the AVP value matches the Control Group field, the user has control access. If the AVP matches the Enabled Group field, the user has view-only access. If no matches are found, then the user will not have access to the unit. A blank Group field will not match any AVP.

## RADIUS

The Remote Authentication Dial-In User Service Protocol (RADIUS) can be set up through this menu.

**NOTE:** Knowledge of RADIUS server settings is required to set up the Vertiv™ PowerIT rPDU device for this remote authentication protocol. If you are not familiar with these settings, consult your RADIUS server administrator.

Configuration for remote authentication using RADIUS.

**Figure 5.50 RADIUS Menu**

The screenshot shows a web-based configuration interface for RADIUS. The title bar is light blue and contains the word "RADIUS". Below the title bar is a white form with a thin border. The form contains the following fields from top to bottom: "Primary Authentication Server", "Alternate Authentication Server", "Shared Secret (Password)", "Verify Password", "Group Attribute filter-id", "Admin Group", "Control Group", and "Enabled Group". Each field has a horizontal line below it for text entry. At the bottom left of the form is a red rectangular button with the word "SAVE" in white capital letters.

- **Primary Authentication Server:** Enter the IP address of the primary authentication/authorization/accounting server. The Primary Authentication Server can be an IPv4 address, an IPv6 address in square brackets (Such as *[2001:0DB8:AC10:FE01::]*) or a host name. The Primary Authentication Server is used for authentication, authorization and accounting. This AA server is required.

- **Alternate Authentication Server:** If applicable, enter the IP address of the alternate authentication/authorization/accounting server. The Alternate Authentication Server can be an IPv4 address, an IPv6 address in square brackets or a host name. The Secondary Authentication Server is used for authentication, authorization and accounting.
- **Shared Secret (Password):** Enter a secret word or passphrase in the Shared Secret field (applies to both primary and secondary authentication and accounting servers).
- **Group Attribute:** Identifies the Attribute-Value Pair (AVP) that tells which access group the user belongs to. Valid values are *filter-id* and *management-privilege-level*.
- **Admin Group:** A user belonging to this group has Admin privileges as described in the Users section of the manual.
- **Control Group:** A user belonging to this group has Control privileges as described in the Users section of the manual.
- **Enabled Group:** A user belonging to this group has **Enabled** view-only privileges as described in the Users section of the manual.

Click **SAVE**.

**NOTE: The Attribute-Value Pairs (AVPs) returned by the server during authentication / authorization determine the user permissions. The Group Attribute field tells the system which AVP contains the user’s access group. If the AVP value matches the Admin Group field, then the user has Admin (full) Access. If the AVP value matches the Control Group field, the user has Control Access. If the AVP matches the Enabled Group field, the user has view-only access. If no matches are found, then the user will not have access to the unit. A blank Group field will not match any AVP.**

### 5.6.5 Time

The unit's time and date are set on this page.

**Figure 5.51 Time Configuration Page**

The screenshot shows a configuration page titled "TIME". It contains several input fields and a "SAVE" button. The fields are:
 

- Mode:** A dropdown menu currently set to "Manual".
- Date-Time (YYYY-MM-DD hh:mm:ss):** A text field containing "2023-11-20 10:59:53".
- Time Zone:** A dropdown menu currently set to "America/Chicago".
- Primary NTP Server:** A text field containing "0.pool.ntp.org".
- Alternate NTP Server:** A text field containing "1.pool.ntp.org".

 At the bottom of the form is an orange "SAVE" button.

Two modes are available:

- **Network Time Protocol (NTP):** Synchronizes the unit's time and date to the specified time zone using listed NTP Servers. NTP servers can be reconfigured.
- **Manual:** In this mode, the date and time must be typed as indicated on the left of the field.

## 5.6.6 SSH

The SSH menu allows you to configure settings for SSH access to the device.

Figure 5.52 SSH Configuration Page

- **SSH Access:** Enables or disables access via SSH.
- **SSH Port:** Allows you to change the port that the SSH service listens to for incoming connections. The default is Port 22.

**NOTE:** An SSH user will be logged out automatically after 10 minutes of inactivity.

## 5.6.7 USB

To enable or disable the USB port:

1. Select Enable or Disable from drop-down menu.
2. Click *SAVE* button.

When USB port is enabled, the attached USB devices are displayed on the web interface.

**NOTE:** The USB device must be formatted as FAT32.

If a valid USB storage device is detected and historic data is being logged, this data is also stored in a file on the USB storage drive. If it does not already exist, a file called **log-1.csv** is created under a **log** directory at the top level of the file system. If log files already exist, the one with the highest number identifier in the title is used as a starting point. Every log period, new data is appended to this file in the same format as the CSV retrieval. If data points are created or removed relative to the ones listed in the CSV header, a new file is created named with the next sequential number. If the file system becomes full, this logging will cease.

Figure 5.53 USB


### 5.6.8 Serial port

**NOTE:** Serial connection does not support flow control.

The Serial Port menu allows configuring settings for the serial port, enabling or disabling the port and setting the baud rate.

1. Click on the Serial Port drop-down menu, select *Enabled/Disabled*.
2. Click on Baud Rate drop-down menu, select *Baud Rate* value.
3. Click on *SAVE*.

Figure 5.54 System drop-down, Menu – Serial Port

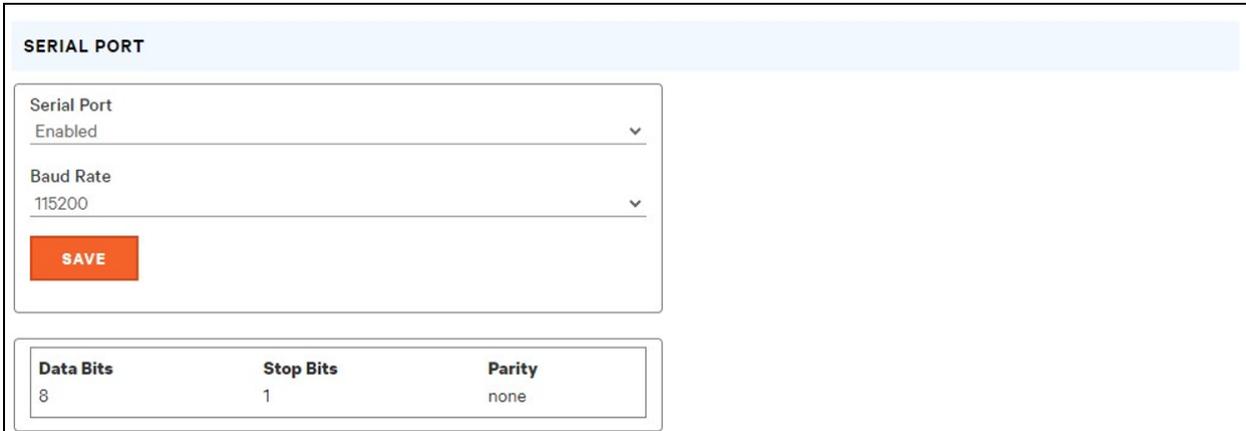

SERIAL PORT		
Serial Port	Enabled	
Baud Rate	115200	
<b>SAVE</b>		
<b>Data Bits</b>	<b>Stop Bits</b>	<b>Parity</b>
8	1	none

### 5.6.9 Email

The unit is capable of sending email notifications to up to ten (10) email addresses when an alarm or warning event occurs.

Figure 5.55 Email Configuration Page

**System • Email**

**EMAIL**

**1** Leave Username and Password blank for relay-only (no authentication).

SMTP Server

Port  
25

"From" Email Address

Username

Password

Verify Password

**SAVE**

**1** +

**3** Target Email Address

**2** **4** username@server.com

Table 5.12 Email Configuration Page Descriptions

Item	Description
1	Add new target email address.
2	Modify existing target email address.
3	Delete existing target email address.
4	Send test email.

To send emails, the unit must be configured to access the mail server, as follows:

- **SMTP Server:** The name or IP address of a suitable SMTP or ESMTP server.
- **Port:** The TCP port that the SMTP Server uses to provide mail services. Typical values would be Port 25 for an unencrypted connection or 465 and 587 for a TLS/SSL-encrypted connection, but these may vary depending on the mail server's configuration.
- **From Email Address:** The address that the unit's emails appear to come from. Many hosted email services, such as Gmail, require this to be the email account of a valid user.
- **Username and Password:** The login credentials for the email server. If your server does not require authentication (open relay), these can be left blank.

Microsoft Exchange servers must be set to allow SMTP relay from the IP address of the unit. In addition, the Exchange server must be set to allow Basic Authentication, so the unit is able to log in with the AUTH LOGIN method of sending its login credentials. Other methods, such as AUTH PLAIN and AUTH MD5 are not supported.

**To add or modify a target email address:**

1. Click the Add or Modify icon.
2. Enter the email address and then click Save.

**To delete a target email address:**

1. Click the Delete icon next to the address you wish to delete.
2. Click *Delete* on the pop-up window to confirm.

**To send a test email:**

1. Click the Test email icon next to the address you wish to test.
2. A pop-up window indicates the test email is being sent, click *OK* to dismiss the pop-up.

## 5.6.10 SNMP

Simple Network Management Protocol (SNMP) can be used to monitor the unit's measurements and status. SNMP V1, V2c and V3 are supported. In addition, alarm traps can be sent to up to ten IP addresses.

Click on **ZIP** to download the *mib.zip* file containing both the MIB file and the CSV-formatted spreadsheet.

The SNMP-V1/V2c and SNMP-V3 Service can be enabled or disabled independently. The service listens for data-read requests on Port 161, which is the usual default for SNMP services; this can also be changed.

The Management Information Base (MIB) can be downloaded from the unit, via the ZIP link at the top of the web page. Clicking this link, downloads a **.Zip** archive containing both the MIB file and a CSV format spreadsheet describing the available OIDs in a human-readable form to assist you in setting up your SNMP manager to read data from the unit.

Figure 5.56 SNMP Configuration Page

**SNMP**

Download the MIB  
[mib.zip](#)

SNMP-V1/V2c Service  
Disabled ▼

SNMP-V3 Service  
Disabled ▼

Port  
161

SAVE

Figure 5.57 SNMP Users Configuration Page

USERS				
	Type	Name	Authentication	Privacy
	V1/V2c Read Community	public	—	—
	V1/V2c Write Community	private	—	—
	V1/V2c Trap Community	private	—	—
	V3 Read		None	None
	V3 Read/Write		None	None
	V3 Trap		None	None

The Users section allows you to configure the various Read, Write and Trap communities for SNMP services. You can also configure the authentication types and encryption methods used for the SNMP V3 if desired. Click the Modify icon to change settings.

Traps allow defining the SNMP types that you wish to be sent and the IP addresses of recipients.

**To configure a Trap Destination:**

1. Locate the *Traps* section of the SNMP page and click the Add icon.
2. Enter the IP Address where the trap should be sent in the Host field.
3. Change the port number if required.
4. Select the trap version to be used (V1, V2c or V3) and click *SAVE*.

A test trap may be sent by clicking on the Test icon next to the Host IP address. You can also update/change the Trap settings. Click the Modify icon next to the Host IP address.

**Figure 5.58 Trap**

TRAPS			
	Host	Port	Version
			
  	192.168.123.111	162	2c

### 5.6.11 Modbus

Modbus TCP communication protocol can be used to monitor the unit's measurements and status. It also allows the user to adjust the unit's settings.

The register map can be downloaded from the unit, via the ZIP link at the top of the web page. Clicking this link, downloads a .zip archive containing a CSV format spreadsheet describing the Modbus mapping in a human-readable form to assist you in setting up your Modbus manager to read/write data to the unit.

The Modbus communication protocol can be enabled or disabled. Modbus access to the unit can be either *Read* or *Read/Write*. Data-read or data-write requests are made on Port 502, which is the usual default for Modbus protocol; this port can also be changed.

**Figure 5.59 Modbus**

MODBUS
Download the Register Map <a href="#">modbus.zip</a>
Modbus Disabled 
Access Read 
Port 502


## 5.6.12 SYSLOG

Syslog data can be captured remotely but must first be set up and enabled via the SYSLOG page.

Figure 5.60 SYSLOG

**NOTE:** This function is primarily useful for diagnostic purposes and should normally be left disabled unless advised to enable it by Vertiv™ technical support for troubleshooting a specific issue.

The use of the Download the Event Log CSV button requires the user to have admin access.

## 5.6.13 Admin

The Admin page allows the administrator of the device to save their contact information along with the device description and location. Once the information is saved by an administrator, other (non-administrator) users can view it. Also, the System Label can be modified on this page. This label is typically shown in the title bar of the web browser's window and/or on the browser tabs currently viewing the device.

## 5.6.14 Locale

The Locale page sets the default language and temperature units for the device. These settings will become the default viewing options for the device, although individual users can change these options for their own accounts. The guest account will only be able to view the device with the options set here.

## 5.7 Utilities Sub Menu

The Utilities sub menu in the System menu provides the ability to restore defaults, reboot the communication system and perform firmware updates.

### 5.7.1 Configuration Backup and Restore

Save current configuration settings and restore previous configuration settings as needed.

**Table 5.13 Backup and Restore Options**

Option	Description
Download Configuration Backup File	Downloads do not require user authentication. The name of the downloaded file is <b>backup_XXX.bin</b> where XXX represents a string representation of the MAC address for the <b>Ethernet</b> interface of the unit without the : characters.
Backup File	Uploads the configuration backup file. This requires user authentication and the user must have administrator privileges. A backup file can only be used to load configuration on units with the same model number.

**To save current configuration settings:**

1. Select *Download Configuration Backup File*.
2. Click *BIN*.

**NOTE: Saving configuration does not require user authentication.**


**To restore a previous configuration setting:**

1. Click *Backup File*.
2. Click *SELECT UPLOAD FILE*.
3. Select the Backup File.
4. Click *RESTORE*.

**NOTE: Restoring configurations requires user authentication and the user must have administrator privileges.**

**NOTE: A backup file can only be used to load configuration on units with the same model number.**

**Figure 5.61 Configuration Backup and Restore Overview**

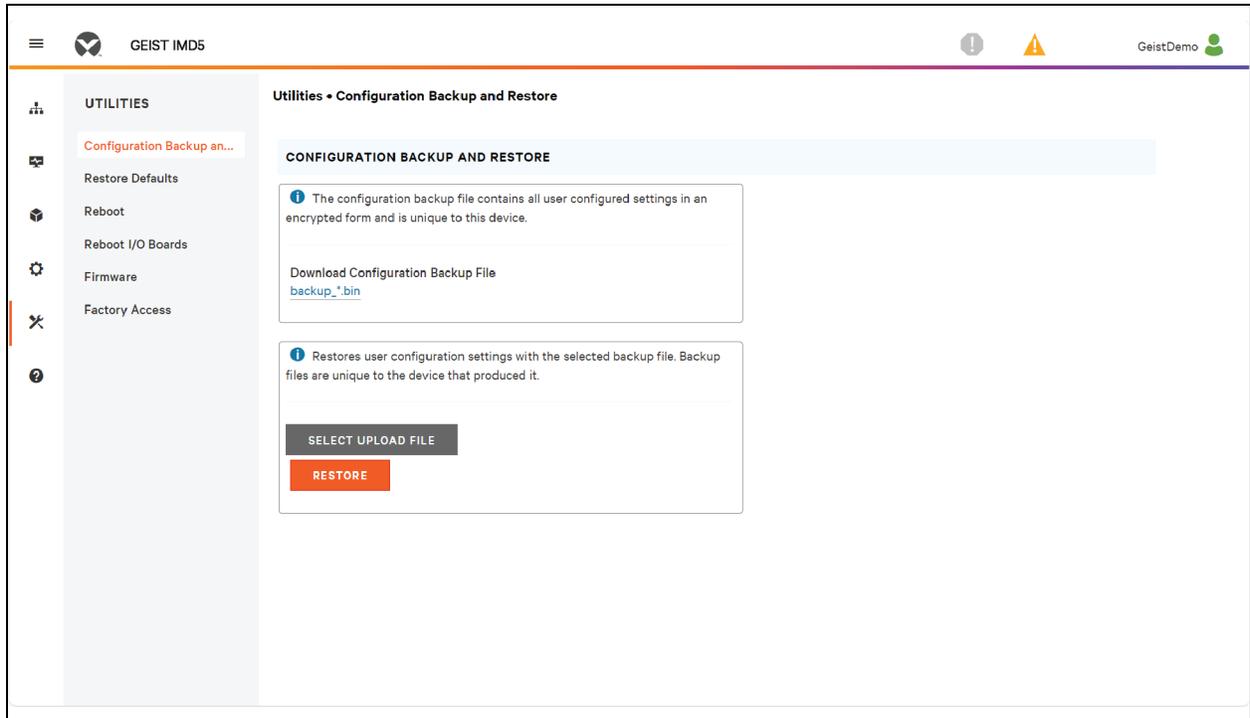

## 5.7.2 Restore defaults

Restore the default settings.


**Table 5.14 Restore Default Options**

Option	Description
All Settings	Resets all configuration on /conf, /alarm, and /dev to factory defaults. Will also clear the event log, data log, and execute the delete command on any devices with a state of <b>unavailable</b> . This will cause portions of the system to reinitialize. It will return success and then be followed by a short period where access to the system will be unavailable.
All Settings, Except Networks And Users	As the <b>defaults</b> option above but does not reset /conf/network, /conf/http, /conf/datalog, /auth, or /conf/ldap and does not clear the event log or data log. This will cause portions of the system to reinitialize. It will return success and then be followed by a short period where access to the system will be unavailable.

To restore default settings:

1. Select from either *All Settings* or *All Settings, Except Networks And Users* from the drop-down menu.
2. Click *SUBMIT*.

**Figure 5.62 Restore Defaults Overview**

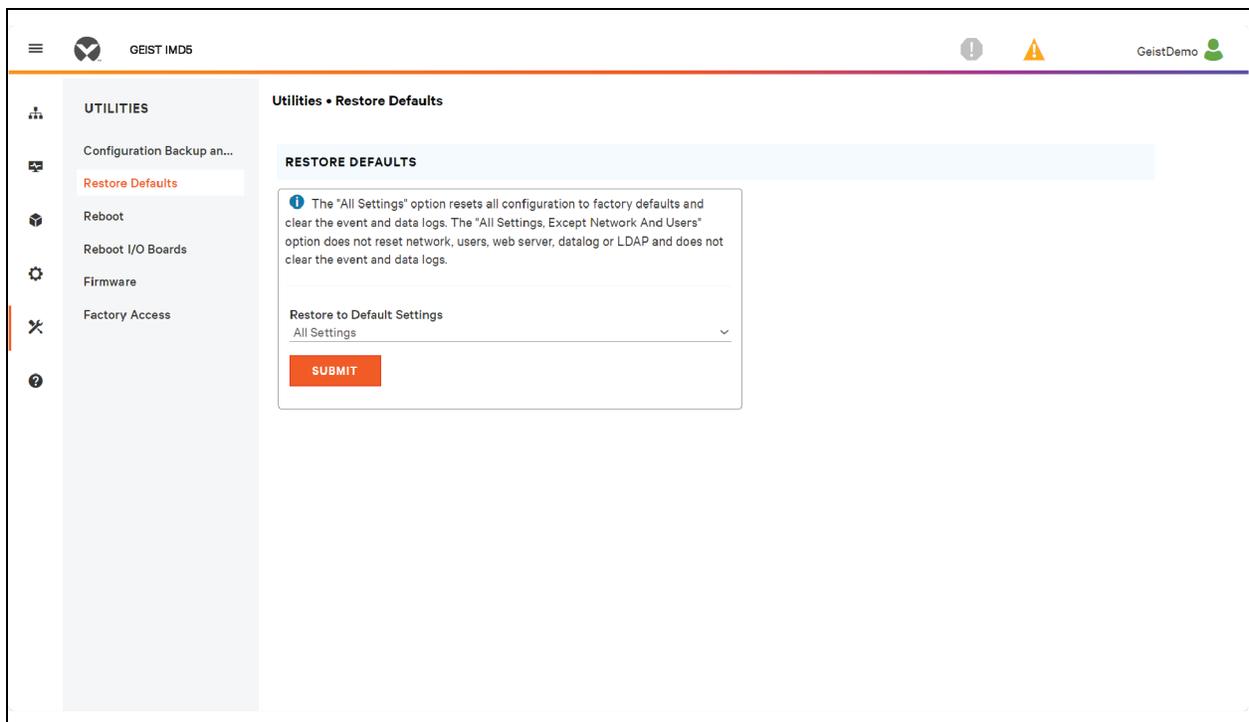


## 5.7.3 Reboot

Reboots the operating system. Resets the IMD processor causing the IMD to reboot.

Click *REBOOT* to reboot the operating system.

**NOTE: The power to connected devices is not affected.**

Figure 5.63 Reboot Overview

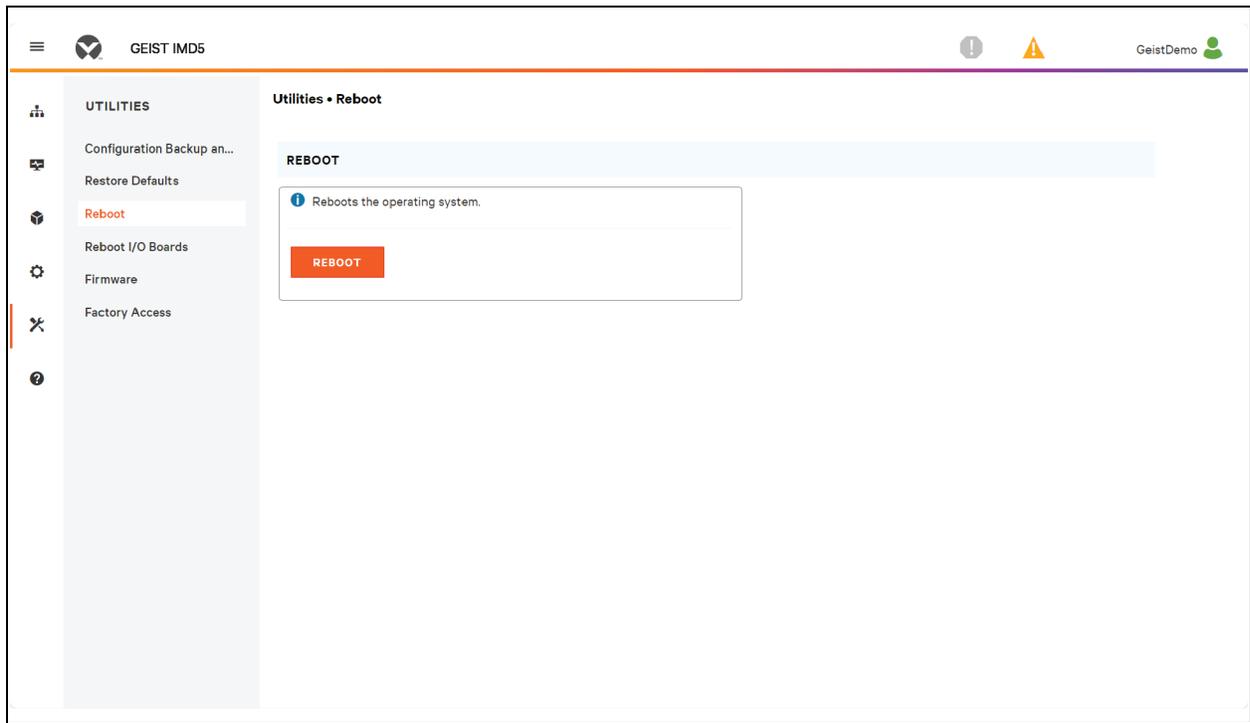


### 5.7.4 Reboot I/O Boards

If the Vertiv™ PowerIT rPDU is not responding or not displaying all values, rebooting the internal boards will reinitialize the system. This will reset the processors on the internal input board and the outlet boards causing them to restart.

Click *REBOOT* to reboot the internal system boards.

**NOTE:** The power to connected devices is not affected.

Figure 5.64 Reboot I/O Boards Overview

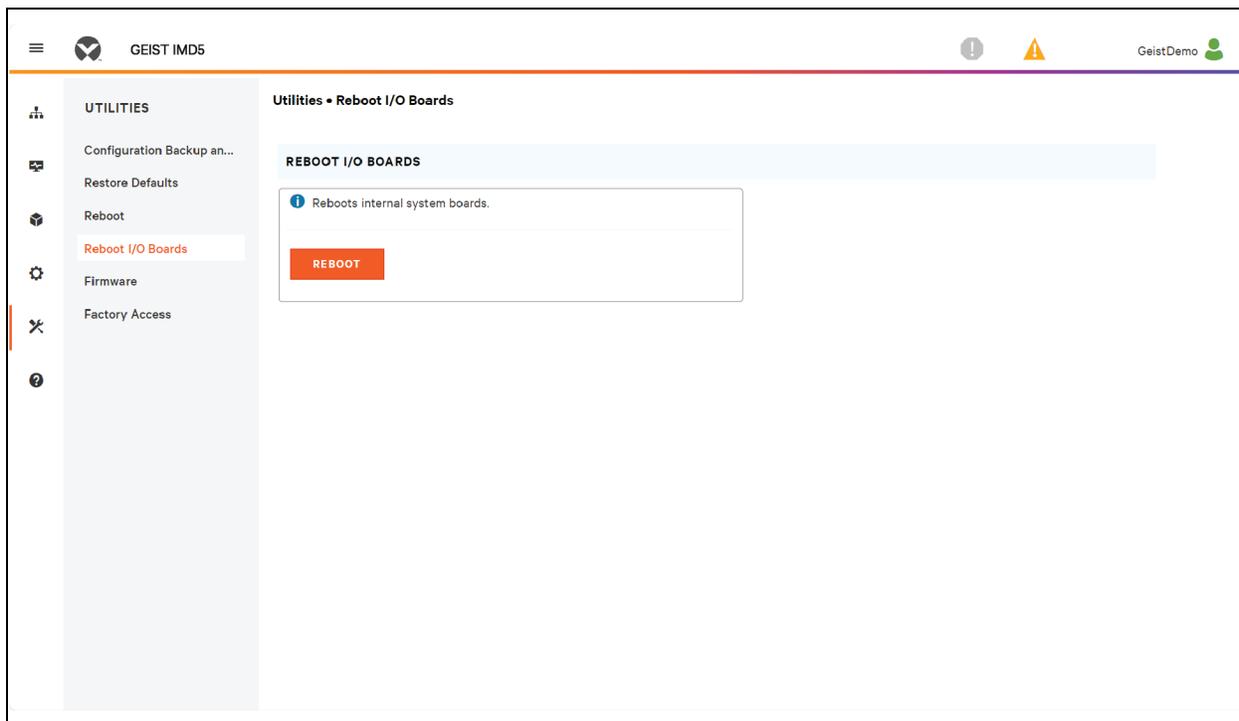

## 5.7.5 Firmware Updates

Uploads a firmware file that updates the system. This action requires user authentication and the user must have administrator privileges. Firmware updates typically comes in a **.zip** archive file containing several files including the firmware package itself, a copy of the SNMP MIB, a readme text file explaining how to install the firmware and various other support files as needed. Be sure to unzip the archive and follow the included instructions.

### To update Firmware via Firmware Package File:


1. Click *SELECT UPLOAD FILE* and select the **.firmware** file from the *Open* window.
2. Click *SUBMIT*.
3. If an issue is discovered (the unit is not behaving correctly) after the firmware has been successfully installed, click *REVERT FIRMWARE*.

### To update Firmware via a USB flash drive:

1. Download the latest firmware from <https://www.vertiv.com/en-us/support/software-download/power-distribution/geist-upgradeable-series-v5-firmware/> and unzip the folder.
2. Get a USB flash drive and format it as FAT32.
3. Create a directory on the USB flash drive called *FIRMWARE* (does not need to be uppercase).
4. Open the unzipped firmware folder and copy the **.firmware** file.
5. Paste this file into the *FIRMWARE* folder on the flash drive.
6. Plug the USB flash drive into the PDU.

During the update, the IMD will stop scrolling data. After the update is complete, a boot message will appear on the display. After reboot is complete, the IMD will resume scrolling data on the display.

Figure 5.65 Firmware Overview

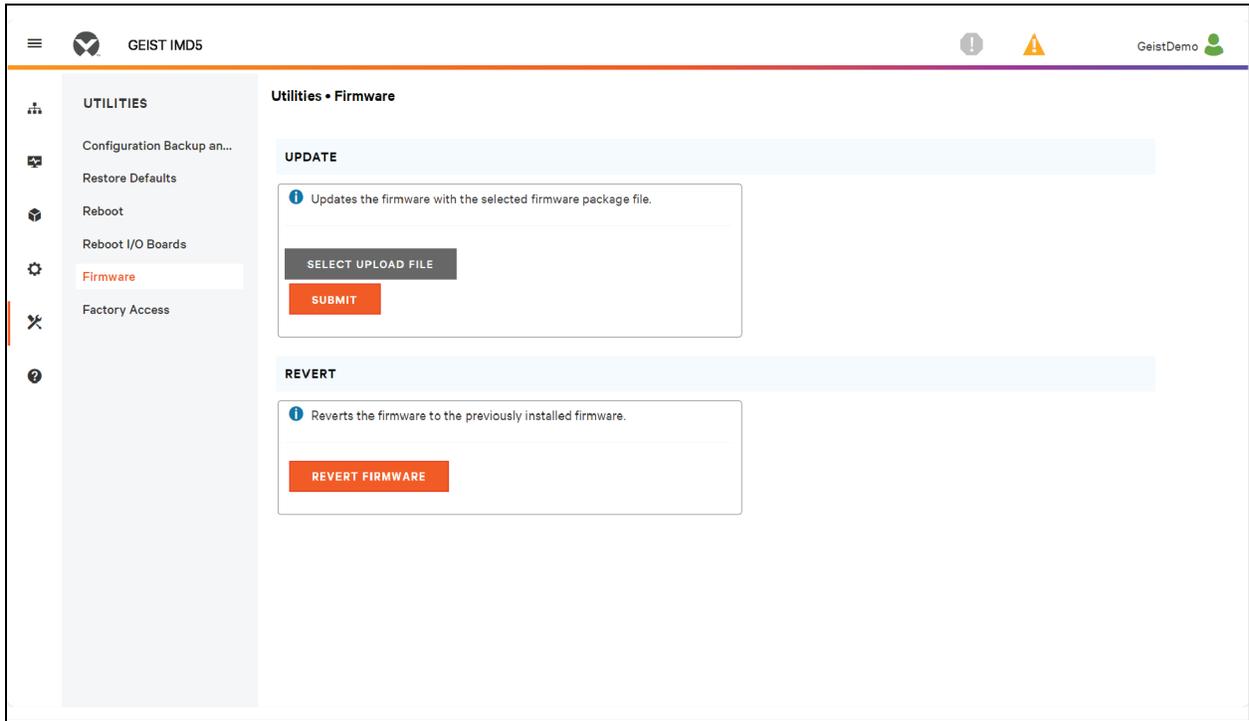

### 5.7.6 Factory Access

Factory Access Provides information for technical support.

Table 5.15 Factory Access Options

Option	Description
Download Factory Support Package	Downloads an encrypted diagnostic package that can be sent to technical support personnel.
Factory Access	Allows factory access to unit over SSH (for debugging purposes).

**To download a factory support package:**


1. Click *Download Factory Support Package*.
2. Click *ENC*.

**To enable/disable factory access:**

1. Select either *Enable* or *Disable* from the drop-down menu.
2. Click *SUBMIT*.

**NOTE:** This requires user authentication and the user must have administrator privileges.

Figure 5.66 Factory Access Overview

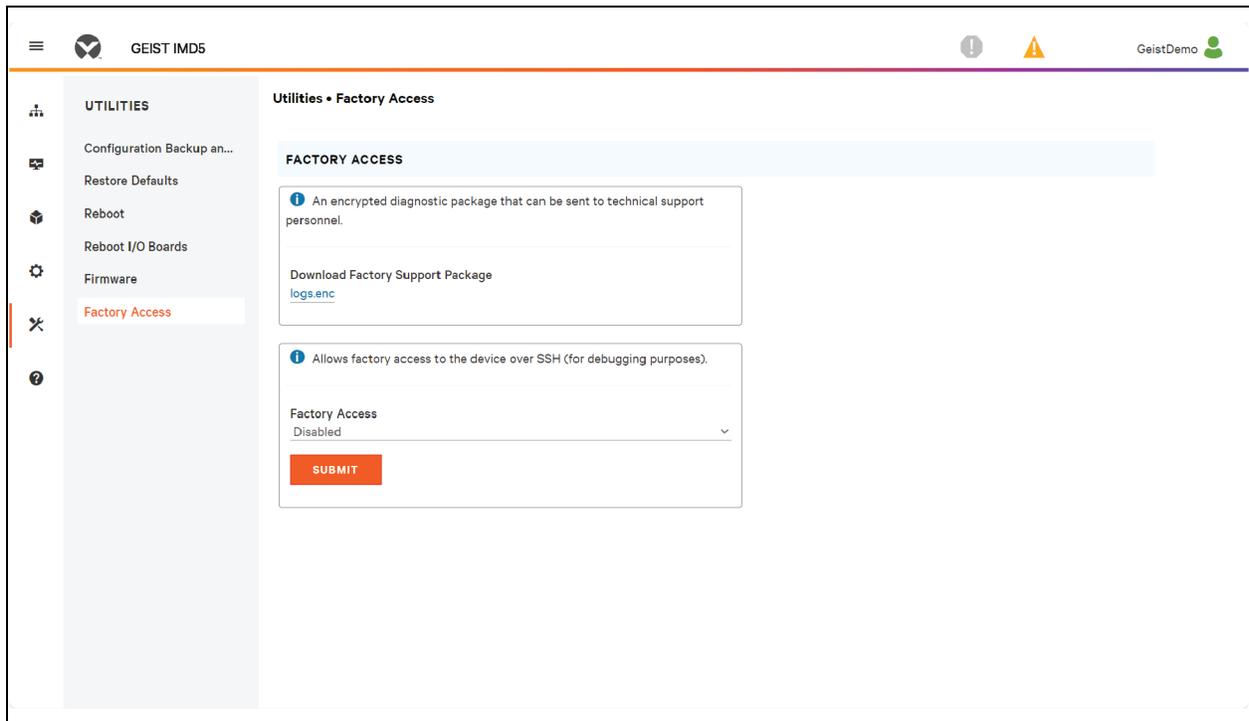


## 5.8 Help Sub Menu

### Info Page

The Info Page displays the unit's current configuration information, including the device name and ID, the type of IMD installed, the unit's current firmware versions and network information. Manufacturer support information is also here.

Figure 5.67 Info Page

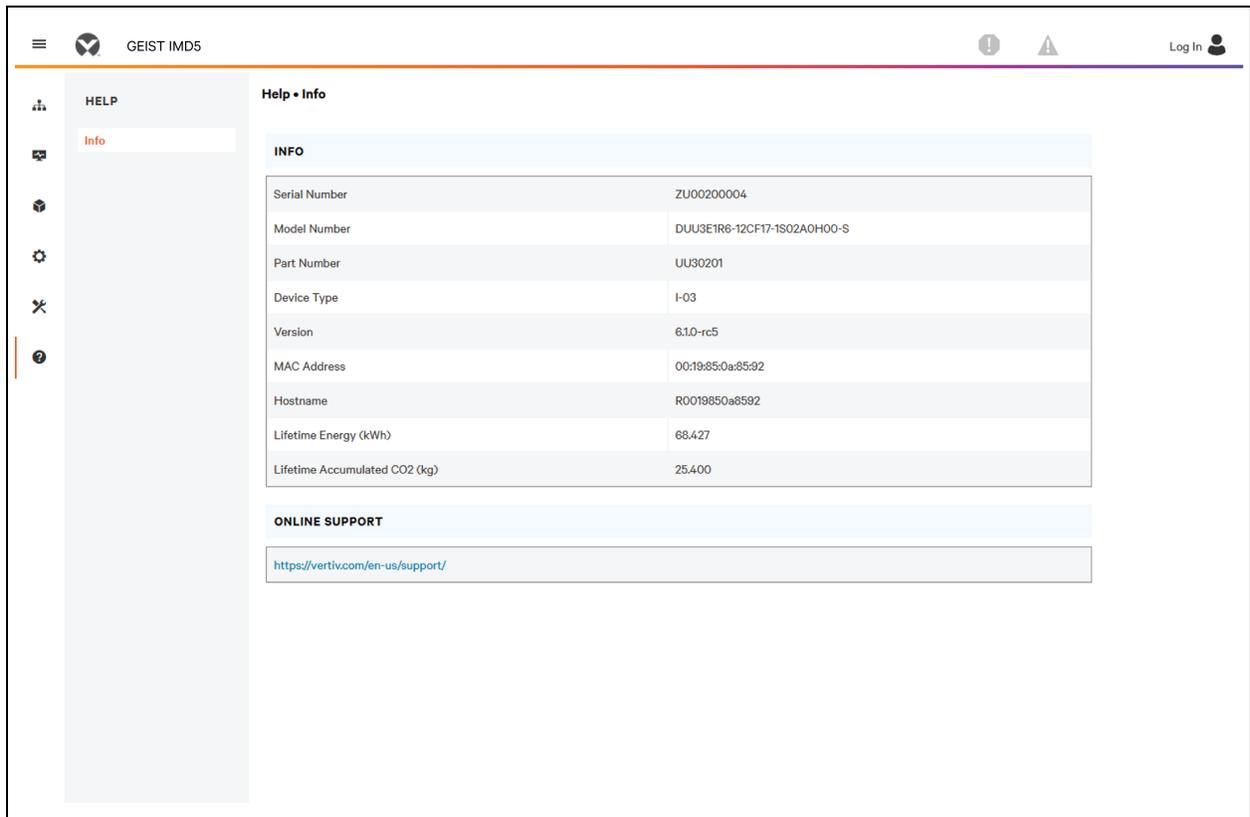

## 6 Vertiv™ Intelligence Director

Vertiv Intelligence Director brings a single, unified viewing layer for small deployments of the Vertiv™ PowerIT rPDUs, Vertiv™ UPSs, environmental sensors and Vertiv™ PowerIT rPDU outlets. When deployed, Vertiv Intelligence Director offers enhanced functionality, using the Vertiv™ PowerIT rPDU not as a stand-alone device but as a gateway to understand the broader device ecosystem in which it is installed.

### 6.1 Aggregation

The initial element of Vertiv Intelligence Director, available with Vertiv™ PowerIT rPDUs running firmware 5.3.0 or later, is called aggregation. This single element allows you to:

- Use aggregation to reduce IP address count, aggregate data from multiple rack PDUs, and enable management of rack PDU outlet groups.
- Rack PDUs are connected using an Ethernet daisy chain as in the daisy-chaining example above.
- The head of the chain rack PDU is configured as the array manager.
- The array device network can include network switches.
- A single IP address assigned to the array manager can be used to access up to 50 devices (the array manager and 49 array devices).
- Array device network settings are automatically configured.
- Array devices are accessed using the array manager IP address and a port number. The port number can be obtained by navigating the *Device>List page* and hovering over the device.
- Users can define groups of devices. Example, representing racks.
- The array manager generates aggregated measurements like total group power and total power, including averages, minimums, and maximums.
- Fault tolerant daisy chaining is not permitted when using Vertiv Intelligence Director.

Figure 6.1 Aggregation Tab


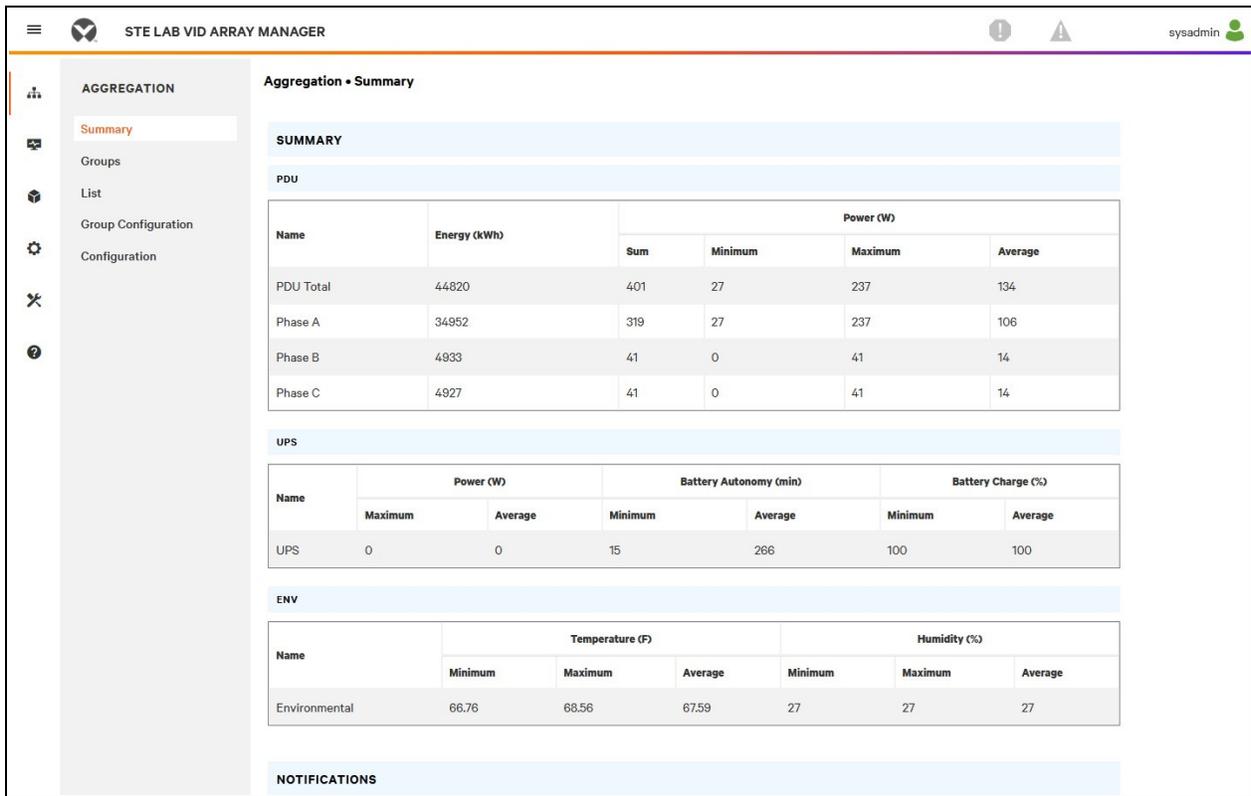


Figure 6.2 Aggregation

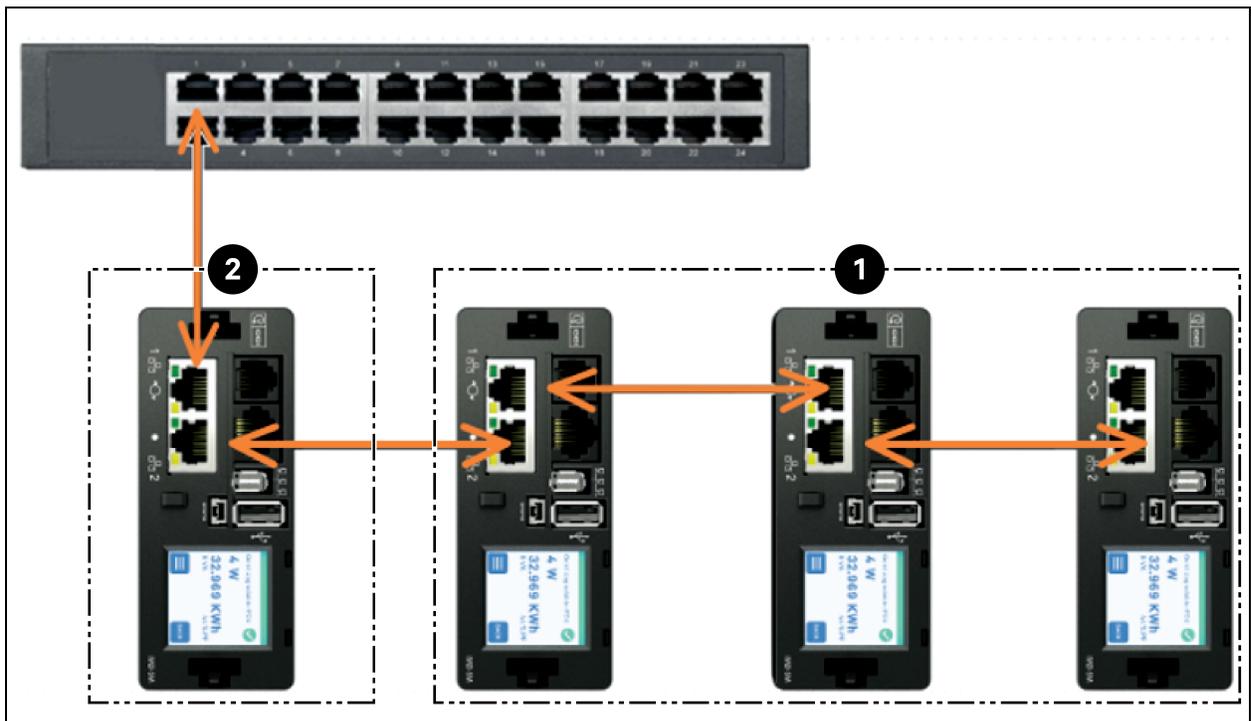

Item	Description
1	Array device
2	Array manager

An additional element of Vertiv Intelligence Director, available with Vertiv™ PowerIT rPDUs running firmware 5.7.0 or later, is Rack PDU Outlet Grouping. This element allows you to:


- Create groups of Vertiv™ PowerIT rPDU outlets spanning one or more Vertiv™ PowerIT rPDUs.
- Report on total power and energy for the outlet group (with Vertiv™ PowerIT rPDUs that report per outlet measurements).
- Provide the ability for power off, power on or power cycle the group of outlets with a single command (with Vertiv™ PowerIT rPDUs that support outlet switching).

With firmware 5.10.1 or later, full visibility of Vertiv Intelligence Director (Aggregated) devices is available through SSH and serial port CLIs.

## 6.2 Array Manager

Aggregation requires the designation of an array manager, deployed with rack PDUs equipped with IMD model 5M running firmware version 6.3.0 or newer or IMD models 3E, 03E, 3E-S, 03E-S, 3E-G or 03E-G which are currently running firmware versions 5.3.0 and newer (though the latest firmware version is strongly recommended). The IMD of the array manager facilitates and configures the device network, the interconnected array of Vertiv™ PowerIT rPDUs, Vertiv™ UPSs, Vertiv™ cooling, environmental sensors, and Vertiv™ PowerIT rPDU outlets, while aggregating select data points from these devices. It also interacts with the management network for monitoring and management of itself and its array devices.

**Figure 6.3 Sample Configuration**

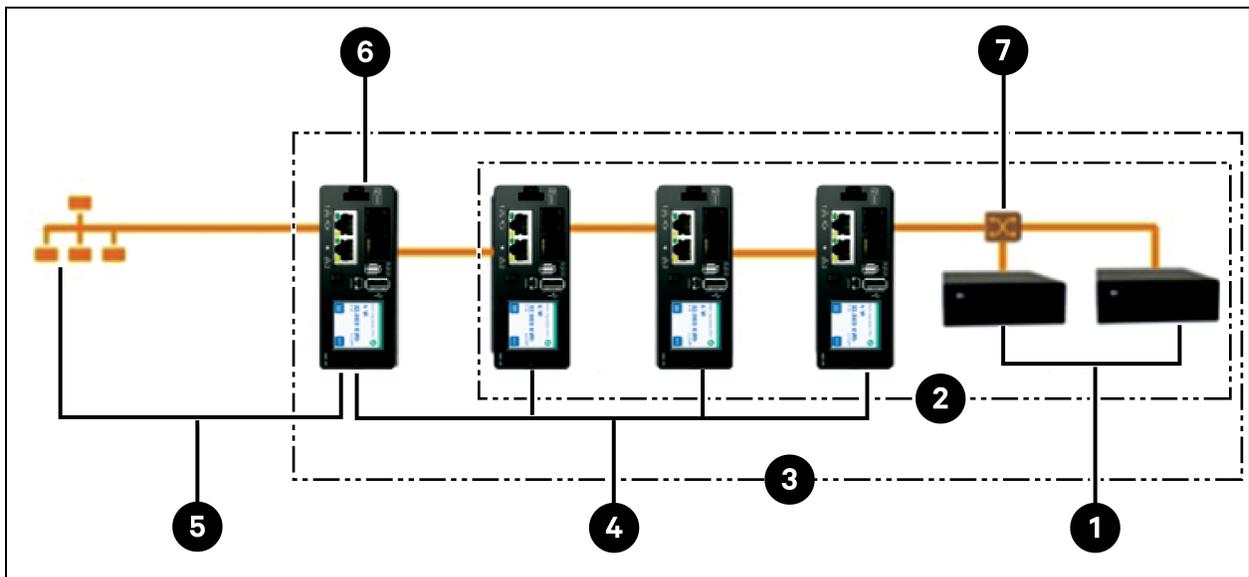

Item	Description
1	Vertiv™ Liebert® GXT4
2	Downstream devices
3	Device network
4	Array devices (PowerIT rPDUs)
5	Management network
6	Array manager (PowerIT rPDU)
7	Ethernet switch

It is no longer possible to onboard new IMD-02x rack PDUs when using an array manager running firmware 6.3.0 or newer.

## 6.3 Network Configuration

In the initial release of aggregation, array devices are defined as Vertiv™ PowerIT rPDUs within the Vertiv™ PowerIT Monitored and Switched product platforms (3E, 03E, 3E-S, 03E-S, 3E-G, 03E-G and 5M) as well as Vertiv™ MPH2™ and Vertiv™ MPX™ rack PDUs, Vertiv™ Liebert® GXT4, Vertiv™ Liebert® GXT5, Vertiv™ Liebert® PSI5, Vertiv™ Liebert® EXM, Vertiv™ Liebert® APM and Vertiv™ Liebert® ITA2 UPS, Vertiv™ Liebert® CRV Row Cooling and USB-connected Vertiv™ Liebert® VRC cooling. Each array manager can support up to 49 array devices, so the number of managers depends on the overall size of the installation and the preferred network architecture.

The array manager must be commissioned before it is connected to the primary management network or to the array device network. This commissioning is typically accomplished using a laptop or local machine connected directly to Port 1 on the IMD.

After local connectivity is established, you can commission the array manager.

### To commission the array manager:

1. Browse to *System>Locale*. Select the appropriate Default Language and Temperature Units from the drop-down menus. These settings are pushed to the array devices in its network.
2. Browse to *System>Network*. In Protocol IPv6, choose *Enabled* from the drop-down menu.
3. Browse to *Aggregation>Configuration* Change the settings as desired.
  - a. **Aggregation:** Choose *Enabled* from the drop-down menu.
  - b. **Array device Username:** Defines the username to be configured on all array devices.
  - c. **Array device Password:** Defines the password to be configured on all array devices.
    - Enter the new password, verify the password and click *Submit*. When configuring aggregation, ensure the Managed Device Password meets all array device password complexity rules. Unless changed by the user, these require a minimum password length of 8 characters with rPDUs running 5.9.0 or later firmware.
4. Click *Submit*.

After aggregation is enabled on the array manager, configure the remaining array manager settings. Connect the array manager to management network (Port 1) on the IMD and the device network (Port 2).

**NOTE: The array manager has a built-in DHCP network to assign addresses to its array devices. This DHCP network uses 192.168.123 / 192.168.124 addresses and they cannot be used for the management network.**

## Array devices

In the initial release of aggregation, array devices are defined as Vertiv™ PowerIT rPDUs within the Vertiv™ PowerIT Switched and Monitored product platforms as well as Vertiv™ MPH2™ and Vertiv™ MPX™ rack PDUs, Vertiv™ Liebert® GXT4, Vertiv™ Liebert® GXT5, Vertiv™ Liebert® PSI5, Vertiv™ Liebert® EXM, Vertiv™ Liebert® APM, and Vertiv™ Liebert® ITA2 UPS, Vertiv™ Liebert® CRV Row Cooling and USB-connected Vertiv™ Liebert® VRC cooling. All Vertiv™ PowerIT rPDUs (IMD models 02, 02E) must be running firmware Version 3.4 or later; Vertiv™ PowerIT rPDUs (3E, 03E, 3E-S, 03E-S, 3E-G, 03E-G) and R-Series rack PDUs must be running firmware version 5.3.0 or later. These array devices from the previous sentence cannot be onboarded with 6.3.0 or newer firmware array controllers. In all cases, it is strongly recommended that all rPDUs are updated to the latest available firmware version. If the Vertiv™ PowerIT rPDUs are newly ordered and have never been configured, they are ready for aggregation out-of-the-box. If the Vertiv™ PowerIT rPDUs have been deployed in a computing environment and commissioned with local LAN settings and user accounts, each Vertiv™ PowerIT rPDU must be reset to its factory defaults using the *Utilities>Restore Defaults*. Select *All Settings* and click *Submit*. The array manager will then push the configuration data to the array devices.

### To set up a new installation with one array manager:

1. Install array devices in racks and power-on the racks.
2. Daisy-chain the array devices to each other where appropriate using ports labeled 1 and 2 on the IMD.
  - If using daisy chained rPDU connections, ensure no daisy-chain is longer than 20 rPDUs.
  - Array devices may be networked using daisy chained connections, star connections, or a combination of both.
3. Install the array manager in a rack. Using a laptop or a local machine, connect to Port 1 to configure aggregation.
4. Connect the array manager to the management network using Port 1.
5. Connect the array manager to the array device network using Port 2.

### To set up an existing installation with one array manager:


**NOTE:** Use the following instructions if existing Vertiv™ PowerIT rPDUs are connected in a daisy-chain.

1. Designate an array manager and disconnect it from the management network.
2. Reset all the array device to factory default settings. The physical Ethernet connections in the daisy-chain can remain the same; however, if previously connected in a looped configuration, the final Vertiv™ PowerIT rPDU in the chain should be disconnected from the network switch.
3. Enable aggregation on the array manager.
4. Connect the array manager to the management network using Port 1.
5. Connect the array manager to the array network using Port 2.

## Multiple Array Managers

For installations with multiple array managers, keep in mind that each device network must operate as a stand-alone, isolated network. Consider a 200 rPDU example, represented in the **Figure 6.4** on the next page. This installation would require a minimum of four array managers, each operating its own stand-alone the device network. Each array manager is visible on the management network and acts as a DHCP server for its array devices. A user on the management network can navigate through each array manager to reach the interface of an array device. Other considerations may affect the quantity of array managers. If you have a row network architecture, you may prefer one array manager at the start of each row, as opposed to an array manager that traverses several rows. Depending on how these 200 cabinets are divided into rows, you may have more than four array managers. When the configuration is decided, follow the appropriate process for aggregation.

Figure 6.4 Sample Network Configuration

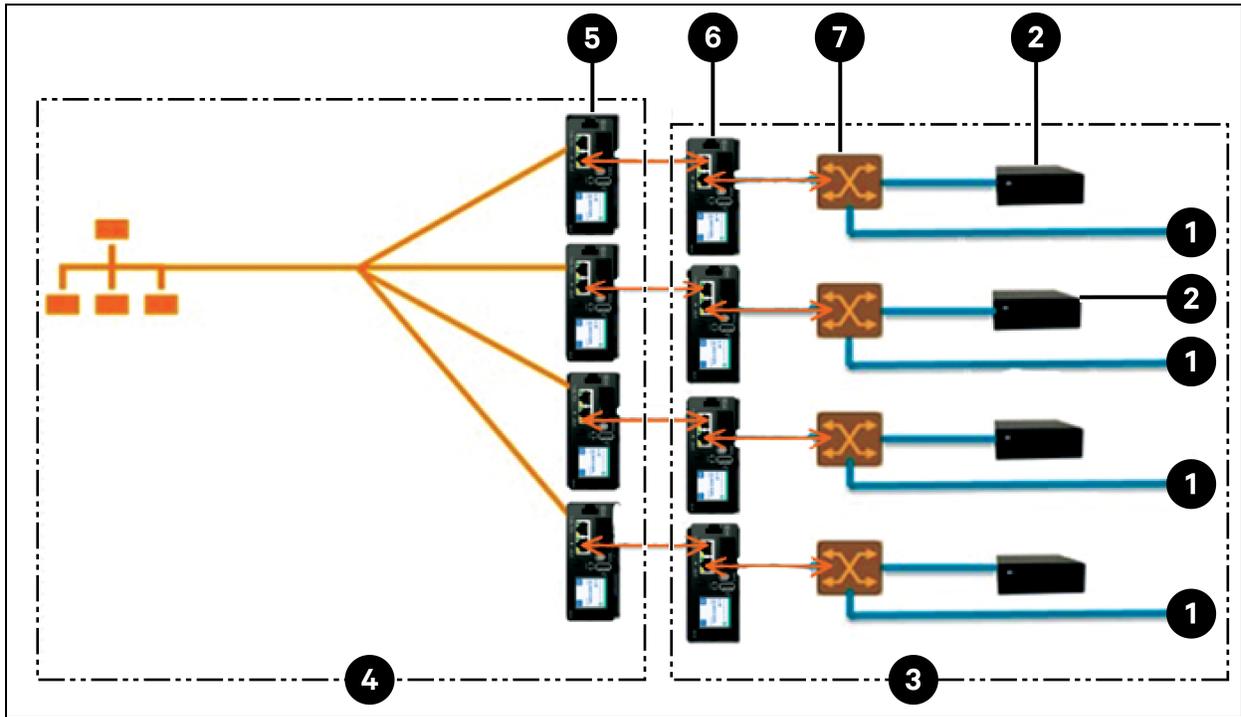

Item	Description
1	Other devices
2	UPS
3	Device network
4	Management network
5	Array managers (PowerIT rPDUs)
6	Array devices (PowerIT rPDUs)
7	Ethernet switch

**NOTE:** A device network Ethernet switch will only be required when connecting more than one single network port device to the end of a rPDU daisy chain or when not using daisy chained connections.

## 6.4 Views

When communication is established between the array manager and array devices, several views are automatically populated in the user interface. The new views under the Device tab in the top navigation bar are:

- Summary
- Groups
- List
- Group Configuration
- Configuration

## 6.4.1 Summary

The Summary view aggregates data from all array devices, presenting a concise outline of relevant power, environmental, and alarm details.

Figure 6.5 Summary Tab

**Aggregation • Summary**

**SUMMARY**

**PDU**

Name	Energy (kWh)	Power (W)			
		Sum	Minimum	Maximum	Average
PDU Total	44820	401	27	237	134
Phase A	34952	319	27	237	106
Phase B	4933	41	0	41	14
Phase C	4927	41	0	41	14

**UPS**

Name	Power (W)		Battery Autonomy (min)		Battery Charge (%)	
	Maximum	Average	Minimum	Average	Minimum	Average
UPS	0	0	15	266	100	100

**ENV**

Name	Temperature (F)			Humidity (%)		
	Minimum	Maximum	Average	Minimum	Maximum	Average
Environmental	66.76	68.56	67.59	27	27	27

**NOTIFICATIONS**

## Rack PDUs

The Vertiv™ PowerIT rPDU network is summarized by the following data points:

- **Energy (kWh):** The total Vertiv™ PowerIT rPDU energy within the device network.
- **Power (W) Sum:** The total Vertiv™ PowerIT rPDU power load within the device network.
- **Power (W) Minimum:** The lowest group Vertiv™ PowerIT rPDU power load within the device network.
- **Power (W) Maximum:** The highest group Vertiv™ PowerIT rPDU power load within the device network.
- **Power (W) Average:** The average group Vertiv™ PowerIT rPDU power load within the device network.

**NOTE:** These readings are repeated per phase (shown when only 3-phase Vertiv™ PowerIT rPDUs present).

## UPS

The UPS network is summarized by the following data points:

- **Power (W) Maximum:** The highest group UPS power load within the device network.
- **Power (W) Average:** The average group UPS power load within the device network.
- **Battery Autonomy (min) Minimum:** The lowest UPS battery run time within the device network.
- **Battery Autonomy (min) Average:** The average UPS battery run time within the device network.
- **Battery Charge (%) Minimum:** The lowest UPS battery charge within the device network.
- **Battery Charge (%) Average:** The average UPS battery charge within the device network.

## Environmental (ENV) Sensors

The Environmental category is summarized by the following data points:

**NOTE: Humidity values will be blank when temperature-only sensors are used.**

- **Temperature (F) Minimum:** The lowest temperature within the device network.
- **Temperature (F) Maximum:** The highest temperature within the device network.
- **Temperature (F) Average:** The average temperature within the device network.
- **Humidity (%) Minimum:** The lowest humidity within the device network.
- **Humidity (%) Maximum:** The highest humidity within the device network.
- **Humidity (%) Average:** The average humidity within the device network.

## Thermal Cooling

- **Fan Speed (%) Minimum:** The lowest thermal device fan speed within the device network.
- **Fan Speed (%) Maximum:** The highest thermal device fan speed within the device network.
- **Fan Speed (%) Average:** The average thermal device fan speed within the device network.
- **Temperature (F) Minimum:** The lowest thermal device temperature within the device network.
- **Temperature (F) Maximum:** The highest thermal device temperature within the device network.
- **Temperature (F) Average:** The average thermal device temperature within the device network.
- **Capacity (%) Minimum:** The lowest thermal device capacity within the device network.
- **Capacity (%) Maximum:** The highest thermal device capacity within the device network.
- **Capacity (%) Average:** The average thermal device capacity within the device network.

## Notifications

Notifications shows outstanding alarms from devices in the device network.

## 6.4.2 Groups

After the groups are established within the Group Configuration, the Groups view summarizes power and environmental data.

Figure 6.6 Groups Tab

The screenshot shows the 'Groups' tab in the STE LAB VID ARRAY MANAGER. The sidebar on the left contains navigation options: Summary, Groups (highlighted), List, Group Configuration, and Configuration. The main content area is titled 'Aggregation • Groups' and displays three data tables.

**GROUP W**

Name	Energy (kWh)	Power (W)			
		Sum	Minimum	Maximum	Average
PDU Total	3657	28	28	28	28
Phase A	3657	28	28	28	28
Phase B	0.000	0	0	0	0
Phase C	0.000	0	0	0	0

**GROUP K7**

Name	Energy (kWh)	Power (W)			
		Sum	Minimum	Maximum	Average
Outlet	1858	82	0	82	16

**UPS**

Name	Power (W)		Battery Autonomy (min)		Battery Charge (%)	
	Maximum	Average	Minimum	Average	Minimum	Average
UPS	0	0	440	440	100	100

**GROUP K7**

Name	Energy (kWh)	Power (W)			
		Sum	Minimum	Maximum	Average

The available data points are:

### Group rPDU

- **Energy (kWh):** The total Vertiv™ PowerIT rPDU energy within the group.
- **Power (W) Sum:** The total Vertiv™ PowerIT rPDU power load within the group.
- **Power (W) Minimum:** The lowest Vertiv™ PowerIT rPDU power load within the group.
- **Power (W) Maximum:** The highest Vertiv™ PowerIT rPDU power load within the group.
- **Power (W) Average:** The average Vertiv™ PowerIT rPDU power load within the group.

**NOTE:** These readings are repeated per phase (shown when only 3-phase rPDUs present).

### Group rPDU Outlet

- **Energy (kWh):** The total Vertiv™ PowerIT rPDU Outlet energy within the group.
- **Power (W) Sum:** The total Vertiv™ PowerIT rPDU Outlet power load within the group.
- **Power (W) Minimum:** The lowest Vertiv™ PowerIT rPDU Outlet power load within the group.
- **Power (W) Maximum:** The highest Vertiv™ PowerIT rPDU Outlet power load within the group.
- **Power (W) Average:** The average Vertiv™ PowerIT rPDU Outlet power load within the group.

These readings repeat for each group of Vertiv™ PowerIT rPDU outlets present in the group when at least one monitored outlet is present. If a combination of outlet monitored and non-outlet monitored rack PDUs are present in the group, the readings will be the total of the outlet monitored rack PDUs only.

These readings repeated for each phase (shown when only 3-phase PDUs present).

**NOTE: The energy readings reflect the sum of outlet energy readings and resetting each outlet energy reading will also reset the total energy for the outlet group.**

The Operation  icon is shown for each group that includes at least one rack PDU outlet with switching capability.

#### To change outlet group operation:

1. Click the Operation icon.
2. Select the operation to perform (applies to only switching capable Rack PDU outlets assigned to the group):
  - **On/Off:** Turns all outlets On or Off.
  - **Reboot:** For outlets currently On, reboot cycles the outlets Off, then back On after the reboot hold delay.  
For outlets currently Off, reboot turns the outlets On.
  - **Cancel:** Cancels the current operation if it has not been completed.
3. For operations involving the state of the outlets, setting Delay to True uses the current Delay configuration for each outlet.
4. Select *Submit* to issue the action.

### Group UPS

- **Power (W) Maximum:** The highest UPS power load within the group.
- **Power (W) Average:** The average UPS power load within the group.
- **Battery Autonomy (min) Minimum:** The lowest UPS battery run time within the group.
- **Battery Autonomy (min) Average:** The average UPS battery run time within the group.
- **Battery Charge (%) Minimum:** The lowest UPS battery charge within the group.
- **Battery Charge (%) Average:** The average UPS battery charge for the group.

### Group Environmental

- **Temperature (F) Minimum:** The lowest temperature within the group.
- **Temperature (F) Maximum:** The highest temperature within the group.
- **Temperature (F) Average:** The average temperature within the group.
- **Humidity (%) Minimum:** The lowest humidity within the group.
- **Humidity (%) Maximum:** The highest humidity within the group.
- **Humidity (%) Average:** The average humidity within the group.

### Group Thermal Cooling

- **Fan Speed (%) Minimum:** The lowest thermal device fan speed within the group.
- **Fan Speed (%) Maximum:** The highest thermal device fan speed within the group.
- **Fan Speed (%) Average:** The average thermal device fan speed within the group.
- **Temperature (F) Minimum:** The lowest thermal device temperature within the group.
- **Temperature (F) Maximum:** The highest thermal device temperature within the group.
- **Temperature (F) Average:** The average thermal device temperature within the group.
- **Capacity (%) Minimum:** The lowest thermal device capacity within the group.

- **Capacity (%) Maximum:** The highest thermal device capacity within the group.
- **Capacity (%) Average:** The average thermal device capacity within the group.

### 6.4.3 List

The List view presents an inventory of all devices within the array manager's Device network.

Figure 6.7 List Tab

The screenshot shows the 'STE LAB VID ARRAY MANAGER' interface. The left sidebar contains navigation options: AGGREGATION, Summary, Groups, List (selected), Group Configuration, and Configuration. The main content area is titled 'Aggregation • List' and displays two tables: 'PDU' and 'UPS'.

**PDU Table:**

State	Name	Group	Host	Energy (kWh)	Power (W)
●	GU2 I03 VID Secondary 130	Group W	00:19:85:f0:38:1f	3657	27
●	GU2 I03 VID Secondary 101	Unassigned	00:19:85:f0:21:a3	14784	123
●	Austin Lab MPH2 PDU	Group K7	00:02:99:1d:44:ac	7.6	0.0
●	GU2 I03 VID Secondary 082	Unassigned	00:19:85:f0:21:90	3024	14
●	GU2 I03 VID Secondary 195	Unassigned	00:19:85:f0:0e:7e	3147	22
●	GU2 I03 VID Secondary 035	Unassigned	00:19:85:f0:0d:27	3276	16
●	GU2 I03 VID Secondary 171	Unassigned	00:19:85:f0:0d:af	4425	36
●	Geist Upgradable rPDU	Unassigned	00:19:85:f0:12:dd	2161	91
●	GU2 I03 VID Secondary 054	Unassigned	00:19:85:f0:21:74	2250	6
●	GU2 I03 VID Secondary 022	Group K7	00:19:85:f0:21:54	4173	33
●	GU2 I03 VID Secondary 036	Group K7	00:19:85:f0:21:61	3910	30

**UPS Table:**

State	Name	Group	Host	Input	Output	Battery		
				Voltage (VAC)	Source	Status	Autonomy (min)	Charge (%)
●	PSI5 Unity 78.0.0	Group W	00:02:99:26:af:52	118.4	Normal	Normal	440	100

The inventory is subdivided into the following categories:

#### Rack PDUs

All Vertiv™ PowerIT rPDUs in the device network roll into this category and present the following data points:

- **State:** The status of the Vertiv™ PowerIT rPDU. Status is either normal or unavailable (loss of connectivity).
- **Name:** Vertiv™ PowerIT rPDU label. Clicking on the name opens a browser tab for device access.
- **Group:** The group name. If there is no user created group, the group name is Unassigned.
- **Energy:** Vertiv™ PowerIT rPDU energy.
- **Power:** Total Vertiv™ PowerIT rPDU power load.

#### UPS

All UPS devices in the device network roll into this category and present the following data points:

- **State:** The status of the UPS. Status is either normal or unavailable (loss of connectivity).

- **Name:** UPS label. Clicking on the name opens a browser tab for device access.
- **Group:** The group name. If there is no user-created group, the group name is Unassigned.
- **Input Voltage:** UPS input voltage.
- **Output Source:** The UPS operating mode, which can be: Normal, Bypass, Battery, Booster, Reducer, Off, or Other.
- **Status:** The battery status, which can be: Normal, Low, Depleted, or Unknown.
- **Battery Autonomy:** UPS battery run time.
- **Charge:** UPS battery charge.

## Environmental (ENV) Sensors

All Environmental Sensors in the device network roll into this category and present the following data points:

- **State:** The status of the Sensor. Status is either normal or unavailable (loss of connectivity).
- **Name:** Sensor label. Clicking on the name opens a browser tab for device access.
- **Group:** The group name. If there is no user-created group, the group name is Unassigned.
- **Device:** Displays the sensor parent Vertiv™ PowerIT rPDU label and MAC address.
- **Temperature (F):** Temperature reading (main temperature only with GT3HD sensors).
- **Humidity (%):** Humidity reading. This field is blank if only SRT temperature sensors are deployed.

Environmental sensors, report their values through the MIB of the Vertiv™ PowerIT rPDUs to which they are connected. They are not stand-alone sensors with their own IP addresses. In this release, the only valid sensors are Vertiv™ PowerIT rPDU-connected Vertiv™ PowerIT SRT, GTHD or GTHD3 sensors.

**NOTE: The label of any device can be customized by logging into the device and editing through the Configuration icon.**

**NOTE: To delete a device which has been removed from the network, select the Trash icon next to the device. Selecting Delete icon deletes the device and any Environmental Sensors connected to it.**


## Thermal Cooling

- **State:** The status of the cooling. Status is either Normal or Unavailable (loss of connectivity).
- **Name:** Thermal cooling device label. Clicking on the name opens a browser tab for device access.
- **Group:** The group name. If there is no user created group, the group is Unassigned.
- **Host:** MAC address.
- **Fan Speed (%):** Thermal device fan speed.
- **Temperature (F):** Thermal device temperature.
- **Capacity (%):** Thermal device capacity.

### 6.4.4 Group Configuration

On the Group Configuration page, you can define groups of devices for data aggregation and analytic purposes. A group often refers to a unit of measure within a computing environment that includes multiple array devices, such as a rack with two Vertiv™ PowerIT rPDUs, UPS devices and environmental sensors or a row that includes multiple racks.

Figure 6.8 Group Configuration

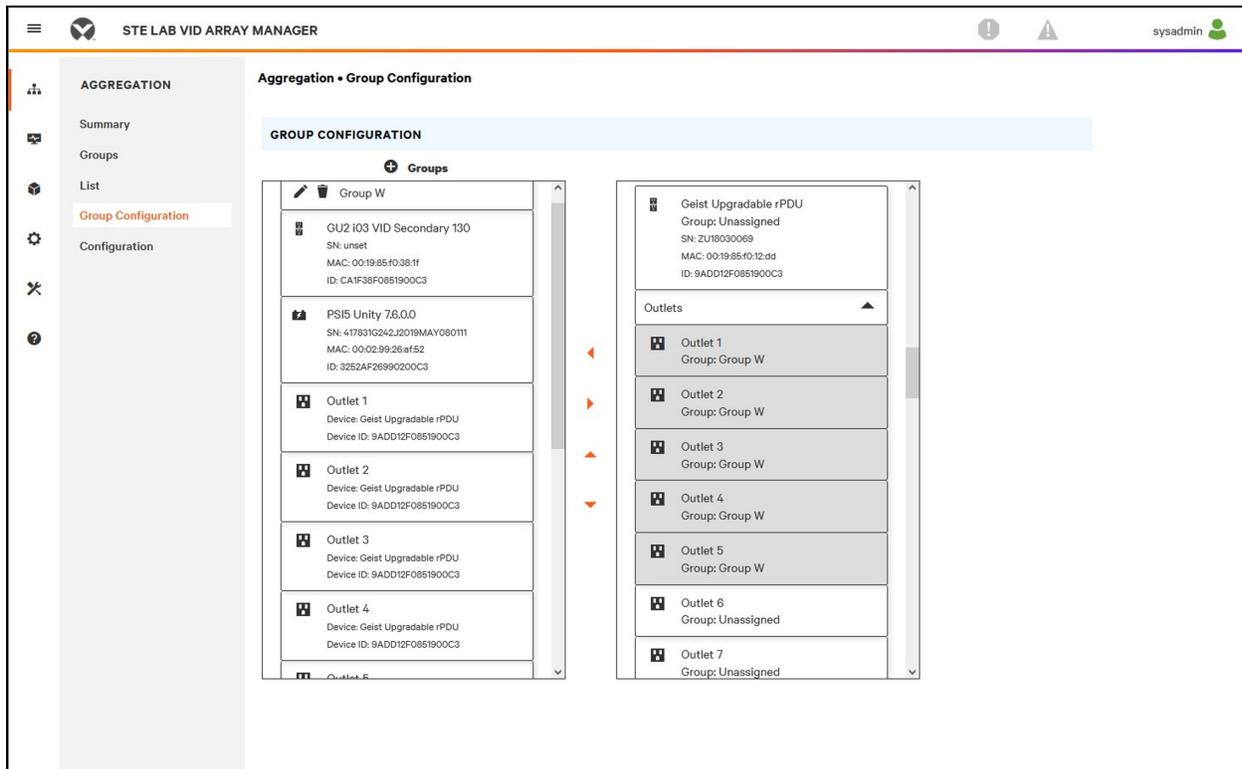

The Group Configuration page lists the automatically discovered devices under the *Unassigned* column showing:

- One or more icons defining the type of device such as, Vertiv™ PowerIT rPDU, Environmental Sensor, UPS or Vertiv™ PowerIT rPDU Outlet.
- Device label
- Serial number
- MAC address
- ID

Configured groups of devices (typically representing racks) are shown on the left.

#### To create a new group:

1. Click the *plus sign (+)* to the left of Groups, to add a new group, under Groups.
2. Click the Configuration icon to change the name of the group label.
3. Edit the label, if desired, and click Save.
4. To assign devices to the group, highlight the desired group (within Groups category) and highlight the desired devices within the Unassigned category.

**NOTE:** You must click on the down arrow below the PDU to see the list of its outlets.

5. Click the *Right Arrow* to assign the devices to the group.
6. Repeat the process for other groups, as needed.

**NOTE:** Groups can be reordered by clicking the up or down arrows.

**To remove devices from a group:**

Highlight the devices and click the *Right Arrow*.

**To delete a group:**

Click the Trash icon next to the group name.

**NOTE: Deleting a group returns all of its devices to the Unassigned group**

## 6.5 Interfaces

Array devices are combined to form groups; each device retains its own standalone user interface and SNMP data.

**To access the Array Device User Interface:**

1. From the List View, use your mouse to hover over the entries in the table. A yellow highlight and text box appear as you pause on the devices. The text box reveals the IP address of the device and port number of the device.
  2. Navigate to an IP address and port number to access the web server interface of the device.
- or-
3. Click the name of the device to access the hyperlink to the device web interface.


**To access Array Device SNMP Data:**

SNMP PowerIT Rack PDU Data is available using port-mapped access through the array manager device IP address using the Vertiv™ PowerIT v5 MIB. The MIB file is downloadable from the array manager SNMP page.

1. From the List view, use your mouse to hover over the entries in the table. As you pause over a device, a yellow highlight and text box appear with the SNMP port of the device.
2. In the MIB browser, enter the SNMP port listed.

**NOTE: Software to monitor individual array devices must be capable of accepting a unique SNMP port number per monitored device.**

**Figure 6.9 MIB Browser**

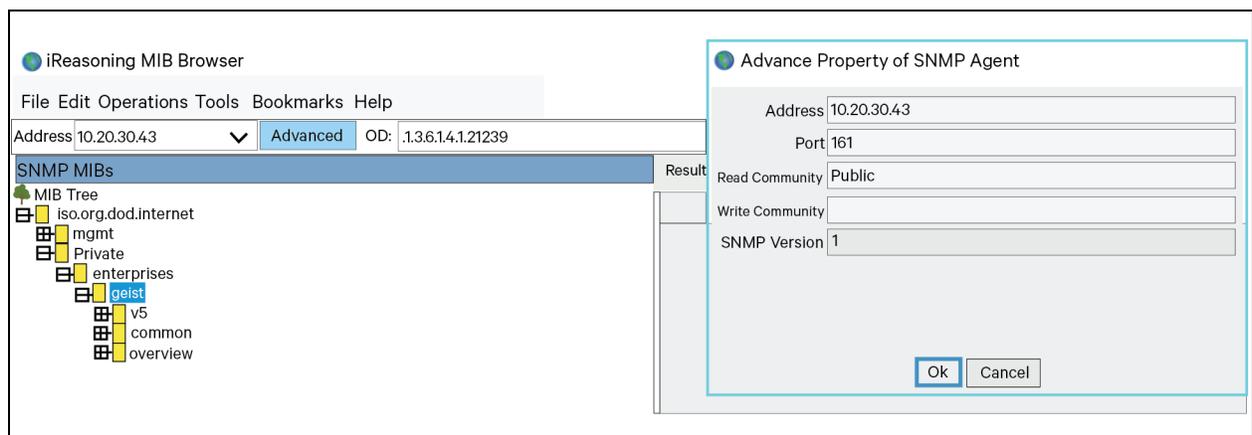

## 6.5.1 Group SNMP data

Aggregated data, both summary (such as total kWh and maximum kW) and group data, is available through the array manager Vertiv™ PowerIT rPDU IP address and default SNMP Port 161. Two MIBS are available for the Array Controller PowerIT rack PDU:

- **v5:** Contains data points for the individual array manager Vertiv™ PowerIT rPDU.
- **Oneview:** Contains data points for aggregated data across all array devices.

## 6.5.2 Tips and troubleshooting

- It is recommended that all devices are updated to the latest firmware version before configuring aggregation.
- Ensure that the rack PDU nominated as the array manager is fully configured and aggregation is enabled before connecting any array devices.
- Ensure all array devices are in a factory default state before connecting them to the array manager. If settings have previously been changed or if any users have been defined on a device, the device must be reset to factory defaults before the device is connected to the array manager.
- If resetting a rack PDU to the factory default settings, ensure you use the *Utilities>Restore defaults>All Settings* function. Using the IMD center button or pinhole reset switch under network port 2 to reset settings does not reset all settings and may cause array devices to not be identified correctly.
- After resetting a rack PDU to factory default settings and before connecting it as an array device, disconnect the rack PDU from the network and restart it using the button beneath network port 1. This ensures any DHCP address allocated during the reset to factory defaults procedure is released.
- It can take up to 20 minutes for array device devices to be recognized after initial setup.
- Summary and group aggregated data cannot be alarmed upon.
- The Provisioner Tool (*Provisioner>Discovery and Provisioner>File Management*) can be used to easily update array manager and array device rack PDU firmware.
- Summary and Group aggregated data cannot be used to generate SNMP traps.
- SNMP community names are configured on each device. Follow the device links displayed on the List page under the Devices menu and logging into each device to configure SNMP.
- Do not change the default SNMP port number, Network settings or Web Server settings when logged into an array device.
- SNMP traps and alarms are routed from a device to the management network through the array manager.

This page intentionally left blank

# Appendices

## Appendix A: Technical Support

### A.1 Resetting a Vertiv™ PowerIT rPDU

If a Vertiv™ PowerIT rPDU loses communication, the processor may be manually rebooted without affecting power to the outlets. Pressing the reboot button on the face of the IMD will reboot the processor. The web interface will remain offline during boot-up. For more information, see [Interchangeable Monitoring Device](#) on page 27.

### A.2 Service and Maintenance

No service or maintenance is required. Opening the Vertiv™ PowerIT rPDU may void the warranty. There are no user-serviceable parts inside the Vertiv™ PowerIT rPDU other than the field-replaceable Interchangeable Monitoring Device (IMD). Vertiv™ PowerIT recommends removing power from the unit before installing or removing any equipment.

The IMD is designed to be field-replaceable by properly trained and qualified service personnel only. The IMD is designed to be replaced while the Vertiv™ PowerIT rPDU is still connected to utility power. Refer the Vertiv™ PowerIT rPDU IMD Modules Replacement Guide for more information.

### A.3 More Technical Support

Technical support can be found at [www.Vertiv.com/support](http://www.Vertiv.com/support).

#### Americas

- Website: [www.Vertiv.com/geist](http://www.Vertiv.com/geist)
- Email: [geistsupport@vertiv.com](mailto:geistsupport@vertiv.com)
- Telephone: 1-888-630-4445

#### Europe and Middle East

- Technical Support: [www.Vertiv.com/en-emea/support](http://www.Vertiv.com/en-emea/support)
- Email: [eoc@Vertiv.com](mailto:eoc@Vertiv.com)
- Telephone: 44 1823 275100

#### Asia

- Telephone (English): 1-888-630-4445 (US number)
- Telephone (Chinese): +86 755 23546462

### A.4 Using Microsoft Exchange as an SMTP Server

If your facility uses a Microsoft Exchange email server, it can be used by the IMD Vertiv™ PowerIT rPDU to send Alarm and Warning notification emails. However, the Exchange server may need to be configured to allow SMTP connections from the unit first, as later versions of Exchange server often have SMTP services or basic authentication disabled by default. If you encounter difficulties in getting your IMD Vertiv™ PowerIT rPDU to send emails through your Exchange server, the following notes may help.

**NOTE: These suggestions apply only if you are using your own, physical Exchange server. Microsoft's hosted Office 365 service is not compatible with the IMD Vertiv™ PowerIT rPDU using firmware versions prior to v3.0.0, as Office 365 requires a StartTLS connection. Firmware versions 3.0.0 and beyond have support for StartTLS and are compatible with Office 365.**

First, since the IMD Vertiv™ PowerIT rPDU cannot use IMAP or Microsoft's proprietary MAPI/RPC Exchange/Outlook protocols to send messages, you must enable SMTP by setting up an SMTP Send Connector in the Exchange server. More information on setting up an SMTP Send Connector in Exchange can be found at this Microsoft TechNet article:

<http://technet.microsoft.com/en-us/library/aa997285.aspx>

Second, you may need to configure your Exchange server to allow messages to be relayed from the monitoring unit. Typically, this will involve turning on the *Reroute incoming SMTP mail* option in the Exchange server's Routing properties, then adding the IMD Vertiv™ PowerIT rPDU's IP address as a domain that is permitted to relay mail through the Exchange server. More information about enabling and configuring SMTP relaying in Exchange can be found at this Microsoft TechNet article:

<http://technet.microsoft.com/en-us/library/dd277329.aspx>

The SMTP AUTH PLAIN and AUTH LOGIN authentication methods for logging in to the server are often no longer enabled by default in Exchange Server; only Microsoft's proprietary NTLM authentication method is enabled.

**To re-enable the AUTH LOGIN method:**

1. In the Exchange console, select *Server Configuration - Hub Transport*.
2. Right-click the *Client Server* and select *Properties*.
3. Select the *Authentication* tab and click the *Basic Authentication* checkbox.
4. Deselect the *Offer Basic only after TLS* checkbox.
5. *Apply* or *Save* and click *Exit*.

**NOTE: You may need to restart the Exchange server after making these changes.**

Finally, once you have enabled SMTP, relaying and the AUTH LOGIN Basic Authentication method, you may also need to create a user account specifically for the IMD Vertiv™ PowerIT rPDU to log into. If you created an account prior to enabling the SMTP Send Connector or if you are trying to use an account created for another user and the IMD Vertiv™ PowerIT rPDU still cannot connect to the Exchange server, the account probably did not properly inherit the new permissions when you enabled them as above. This tends to happen more often on Exchange servers that have been upgraded since the account you are trying to use were created, but can sometimes happen with accounts when new connectors and plug-ins are added, regardless of the Exchange version. Delete the user accounts, then create a new one for the monitoring unit to use and the new account should inherit the SMTP authentication and mail-relaying permissions correctly.

If none of the above suggestions succeed in getting your IMD Vertiv™ PowerIT rPDU to send mail through your Exchange server, then you may need to contact Microsoft's technical support for assistance in configuring your Exchange server to allow SMTP emails to be sent from a third-party, non-Windows device through your network.

## Appendix B: Available Sensors

### B.1 Remote Sensors

- **SRT:** Stainless Remote Temperature.
- **GTHD:** Temperature/Humidity/Dew Point.
- **GT3HD:** Temperature/Humidity/Dew Point with two SRT sensors.
- **RTAFHD3:** Temperature/Air Flow/Humidity/Dew Point.
- **A2D:** Converts Analog I/O Sensors to Remote Digital Sensors.

### B.2 Analog I/O Sensors

- **FS-15:** Flood (Water) Sensor.
- **PFS-100 US / PFS-100 UN:** Power Failure Sensor.
- **RPDS:** Door Switch Kit.

### B.3 Liebert® Integrated and Modular Sensors

**NOTE:** An adapter is required to use any of the following sensors.

- **SN-T:** One Temperature Probe.
- **SN-TH:** One Temperature Probe and one Humidity Probe.
- **SN-Z01:** Integrated Cable with one Temperature Probe.
- **SN-Z02:** Integrated Cable with three Temperature Probes.
- **SN-Z03:** Integrated Cable with four Probes (three Temperature and one Humidity).
- **SN-2D:** Two-Door Switch Monitor Sensor.

### B.4 Connecting Remote Sensors

Up to 16 plug-and-play remote sensors can be attached to the unit at any time via the RJ-12 connectors on the front of the unit. In some cases, splitters may be required to add additional sensors. Each sensor has a unique serial number and is automatically discovered and added to the web page. The sensors serial number determines their display order on the web. Sensor names can be customized on the Sensors Overview page.

**NOTE:** Sensors use Cat 5, CMP wire and RJ-12 connectors. Wiring must be straight-through. Reverse polarity temporarily disables all of the sensors until corrected. Sensors use a serial communication protocol and are subject to network signaling constraints dependent on shielding, environmental noise and length of wire. Typical installations allow runs of up to 600 ft. (180 m) of sensor wire.

## Appendix C: TP-Link Wireless USB Adapters

- Archer T2U Nano (AC600 Nano Wireless USB Adapter)
- Archer T2U Plus (AC600 High Gain Wireless Dual Band USB Adapter)
- Archer T2U v3 (AC600 Wireless Dual Band USB Adapter)
- Archer T3U (AC1300 Mini Wireless MU-MIMO USB Adapter)
- Archer T3U Plus (AC1300 High Gain Wireless Dual Band USB Adapter)
- Archer T4U v3 (AC1300 Wireless Dual Band USB Adapter)

**NOTE:** These devices are auto detected when connected and can be configured as an additional network interface.

This page intentionally left blank

## Appendix D: Outlet LEDs

**NOTE:** This appendix applies to Outlet Monitored / Outlet Switched Vertiv™ PowerIT rPDUs only.

Outlet LEDs provide a visual indication of outlet power status (On, Off or Error). The LEDs are sequentially numbered with easy-to-read white numbers on a black background. Depending on outlet power status, the LEDs illuminate in solid colors or blinking colors.

**Table D.1 LED Outlets**

LED	Description
Green	Outlet voltage is present and above minimum threshold limit
Red	Outlet voltage is not present
Amber	Power output error condition has been detected

**Table D.2 LED Status Description**

Measured voltage	Relay state	State	LED	
On	On or Unknown	Solid	Green	
Off	Off or Unknown	Solid	Red	
Off	On	Blinking <sup>1</sup>	Amber	Red
On	Off	Blinking <sup>2</sup>	Amber	Green

<sup>1</sup> Outlet is sensed to be Off but should be On.

<sup>2</sup> Outlet is sensed to be On but should be Off.

### Error Code

LEDs illuminate in Solid Amber during the following:

- Power failure (all relays are forced open in the event of power failure to allow for power-on sequencing)
- Circuit breaker open
- No input voltage detected

## Appendix E: IMD Display Codes

Table E.1 IMD Display Codes

Display	IMD Type	Explanation
<i>Err1</i>	IMD-01 (Metered only)	The IMD discovered either none or more than one input board. This may be caused by internal cabling issues or an unresponsive input board. This is also displayed if there is a measurement error reported by the input board.
<i>8888</i>	IMD-02, IMD-03, IMD-3	IMD is booting and has yet to discover the simple display and shows <i>boot</i> on it. If this is displayed for more than a few seconds, there is a problem the display board or with internal cabling.
-- (Two dashes on the right-most display position)	IMD-02, IMD-03, IMD-3	The IMD cannot communicate with the input board. This may also be shown intermittently for individual measurements. There is a problem with the input board or with internal cabling.
<i>boot</i>	IMD-01	IMD is booting and discovering the input board.
<i>boot</i>	IMD-02, IMD-03, IMD-3	Firmware is initializing. This will be displayed while firmware is being updated in internal boards.
<i>updt</i>	IMD-02, IMD-03, IMD-3	Firmware update in progress.
<i>rset dflt</i>	IMD-02, IMD-03, IMD-3	Following user action, <i>rset</i> (Reset) will appear during a parameter reset sequence. During a parameter reset, <i>dflt</i> (Default) will appear briefly.
<i>bcup</i>	IMD-02, IMD-03, IMD-3	<i>bcup</i> (Backup) will appear during a configuration backup.
<i>rest conf</i>	IMD-02, IMD-03, IMD-3	<i>rest</i> (Restore) and <i>Conf</i> (Configuration) will appear during a configuration restore.
____ (Four underscores on the bottom of the display)	IMD-03 IMD-3	The IMD display has been configured such that Total Power, Voltage and Current has been disabled.

**NOTE:** The IMD-5M does not have Display Codes; the touchscreen displays status information.

This page intentionally left blank

## Appendix F: Provisioner - Format of the configuration settings file

**NOTE:** The following describes the format of the configuration settings file used by the Provisioner. The examples broadly follow the settings available in the Vertiv™ PowerIT rPDU web user interface.

1. In the examples below, the text in blue can be copied to a text file and updated as required. The text file can then be uploaded to the provisioning tool.
2. When editing configuration files, use a text editor such as notepad which can save files in .txt format.
3. The indentations shown in the examples can be omitted.
4. Ensure the correct double quote is used when editing configuration.
5. If a setting is omitted from the settings file, the value of that setting will remain unchanged.
6. When configuring a previously unconfigured (factory fresh) Vertiv™ PowerIT rPDU, the first configuration setting should be the definition of an admin user, See [Local Users](#) below.
7. To combine several settings (other than local users) into one file (see also [Example 1](#) on page 134 at the end of this document):
  - Append together the required settings into one file.
  - Delete all occurrences of `{ "conf":{` except for the first line of the file.
  - Replace all lines that contain only `}}` by a `,` (comma) except for the last line of the file.
8. If combining local user settings with other settings in one file, refer to [Example 2](#) on page 135 at the end of this document.
9. After selecting *Provisioner>Discovery>Update*, enter the user name and password only when configuring previously configured Vertiv™ PowerIT rPDUs (the user name and password being that of the Vertiv™ PowerIT rPDUs being provisioned). Do not enter a user and password when configuring factory fresh units (identified by Provisioned attribute equalling False).

### Local Users

```
{ "auth": {
  "username": {
    "password": "userpw",
    "enabled": true,
    "control": false,
    "admin": false,
    "language": "en"}
}}
```

<b>username</b>	The user name to be created (in quotes)
<b>password</b>	Password (in quotes)
<b>enabled</b>	Options true or false determines whether the user is enabled
<b>control</b>	Options true or false determines whether the user will have control privileges
<b>admin</b>	Options true or false determines whether the user will have admin privileges
<b>language</b>	Overrides default language for this user, valid options are "de", "en", "es", "fr", "ja", "ko", "pt", "zh"

**LDAP**

```

{"conf":{
  "remoteAuth": {
    "mode": "ldap",
    "ldap": {
      "host": "192.168.123.1",
      "port": 389,
      "mode": "activeDirectory",
      "securityType": "ssl",
      "bindDn": "",
      "password": null,
      "baseDn": "",
      "userFilter": "(objectClass=posixAccount)",
      "userId": "uid",
      "userIdNum": "uidNumber",
      "groupFilter": "(objectClass=posixGroup)",
      "groupId": "gidNumber",
      "groupMemberUid": "memberOf",
      "enabledGroup": "enabled",
      "controlGroup": "control",
      "adminGroup": "admin"}}
}}

```

<b>host</b>	LDAP URL (ref RFC4516 > RFC2255) (in quotes), required if LDAP is enabled.
<b>port</b>	Port for protocol communication
<b>mode</b>	Determines default compatibility among the different LDAP types, options are "openLdap or activeDirectory"
<b>securityType</b>	Encryption to be used in connecting to LDAP server, options are "ssl" and "starttls"
<b>bindDn</b>	Distinguished Name (in quotes) (ref RFC4514 > RFC2253), used to bind to the directory server, blank string implies anonymous bind
<b>password</b>	Password (in quotes) used to bind to the directory server
<b>baseDn</b>	Distinguished Name (in quotes) (ref RFC4514 > RFC2253) to use for the search base
<b>userFilter</b>	LDAP Search Filter (in quotes) (ref RFC4515 > RFC2254), objectClass equivalent to posixAccount (ref RFC2307)
<b>userId</b>	Equivalent to attribute "uid" (in quotes) ref (RFC2307)
<b>userIdNum</b>	Equivalent to attribute "uidNumber" (in quotes) (ref RFC2307)
<b>groupFilter</b>	LDAP Search Filter (in quotes) (ref RFC4515 > RFC2254), objectClass equivalent to posixGroup (RFC2307)
<b>groupId</b>	Equivalent to attribute "gidNumber" (ref RFC2307) (in quotes)
<b>groupMemberUid</b>	Equivalent to attribute "memberUid" (ref RFC2307) (in quotes)
<b>enabledGroup</b>	User (in quotes) in this group will have the "enabled" privilege
<b>controlGroup</b>	User (in quotes) in this group will have the "control" privilege
<b>adminGroup</b>	User (in quotes) in this group will have the "admin" privilege

```

{"conf":{
  "remoteAuth": {
    "mode": "tacacs",
    "tacacs": {
      "authenticationServer1": "10.20.30.21",
      "authenticationServer2": "10.20.30.70",
      "accountingServer1": "10.20.30.21",
      "accountingServer2": "10.20.30.70",
      "sharedSecret": "secret",
      "service": "raccess",
      "adminAttribute": "admin=true",
      "controlAttribute": "control=true",
      "enabledAttribute": "enabled=true"}}
}}

```

<b>authenticationServer1</b>	Primary authentication/authorization server (in quotes)
<b>authenticationServer2</b>	Alternate authentication/authorization server (in quotes)
<b>accountingServer1</b>	Primary accounting server (in quotes)
<b>accountingServer2</b>	Alternate accounting server (in quotes)
<b>sharedSecret</b>	Secret (in quotes) shared by client and server (null deletes secret)
<b>service</b>	Value for the service field in TACACS requests. Options are "ppp" and "raccess"
<b>adminAttribute</b>	User (in quotes) with this Attribute-Value Pair will have "admin" privilege
<b>controlAttribute</b>	User (in quotes) with this Attribute-Value Pair will have "control" privilege
<b>enabledAttribute</b>	User (in quotes) with this Attribute-Value Pair will have "enabled" privilege

## Radius

```

{"conf":{
  "remoteAuth": {
    "mode": "radius",
    "radius": {
      "authenticationServer1": "",
      "authenticationServer2": "",
      "accountingServer1": "",
      "accountingServer2": "",
      "sharedSecret": "Secret",
      "groupAttribute": "filter-id",
      "adminGroup": "admin",
      "controlGroup": "control",
      "enabledGroup": "enabled"}}
}}

```

<b>authenticationServer1</b>	Primary authentication server (in quotes)
<b>authenticationServer2</b>	Alternate authentication server (in quotes)
<b>accountingServer1</b>	Primary accounting server (in quotes)
<b>accountingServer2</b>	Alternate accounting server (in quotes)
<b>sharedSecret</b>	Secret shared by client and server in quotes)
<b>groupAttribute</b>	Identifies the AVP that tells which access group the user belongs to, valid values are "filter-id" and "management-privilege-level".
<b>adminGroup</b>	User (in quotes) that belongs to this group has "admin" privilege
<b>controlGroup</b>	User (in quotes) that belongs to this group has "control" privilege
<b>enabledGroup</b>	User (in quotes) that belongs to this group will have "enabled" privilege

**Network Hostname and IP Addresses**

```

{"conf":{
  "system": {
    "hostname": "rPDUhostname",
    "ip6Enabled": true},
  "network": {
    "ethernet": {
      "label": "Bridge 0",
      "enabled": true,
      "dhcpOn": false,
      "address": {
        "0": {"address": "192.168.123.123", "prefix": 24},
        "1": {"address": "10.20.30.43", "prefix": 24}}}}
}

```

<b>Hostname</b>	Name (in quotes) to identify the unit in a network
<b>ip6Enabled</b>	Options are true or false to enable or disable IPV6 support
<b>label</b>	Bridge label (in quotes)
<b>enabled</b>	Options are true or false to enable or disable the network bridge
<b>dhcpOn</b>	Options are true or false to enable or disable DHCP
<b>address</b>	IP address (in quotes) of the interface
<b>prefix</b>	Prefix of the interface IP address

**Network Ports**

```

{"conf":{
  "network": {
    "port0": {
      "label": "Port 0",

```

```

"enabled": true,
"stp": {"cost": 0}},
"port1": {
"label": "Port 1",
"enabled": true,
"stp": {"cost": 0}}}
}}

```

<b>label</b>	Port label (in quotes)
<b>enabled</b>	Options are true or false to determine whether the port is enabled
<b>cost</b>	Spanning tree cost for this port

### Network Routes

```

{"conf":{
"network": {
"ethernet": {
"route": {
"0": {
"gateway": "10.20.30.254",
"prefix": 0,
"destination": "0.0.0.0"}}}}}
}}

```

<b>gateway</b>	Gateway address (in quotes) for the route
<b>prefixDestination</b>	Network prefix, 0 for default gateway
<b>destination</b>	Destination network address (in quotes), "0.0.0.0" for default network

### Network DNS

```

{"conf":{
"network": {
"ethernet": {
"dns": {
"0": {"address": "8.8.8.8"},
"1": {"address": "8.8.4.4"}}}}}
}}

```

**address** The DNS server address (in quotes). Second occurrence is for the alternate DNS server.

### Network RSTP

```

{"conf":{
"network": {

```

```

"ethernet": {
  "stp": {
    "enabled": false,
    "mode": "rstp",
    "bridgePriority": 24576,
    "helloTime": 2,
    "maxAge": 40,
    "maxHops": 40,
    "forwardDelay": 21}}}
}}

```

<b>enabled</b>	Options are true or false, determines whether spanning tree protocol is enabled
<b>mode</b>	Options are "stp" or "rstp", RSTP mode supports falling back to STP when necessary
<b>bridgePriority</b>	This interface's spanning tree bridge priority
<b>helloTime</b>	The interval in seconds between periodic transmissions of configuration message
<b>maxAge</b>	The maximum age of the information transmitted by this interface, when it serves as the root bridge. Used when "mode" is set to "stp". Should be at least 2 * (helloTime + 1)
<b>maxHops</b>	The maximum number of bridge traversals of the information transmitted by this interface when it serves as the root bridge, used when "mode" is set to "rstp"
<b>forwardDelay</b>	The delay used by bridges to transition the root bridge and designated ports into forwarding mode, should be at least (maxAge / 2) + 1

### Web Server

```

{"conf":{
  "http": {
    "httpEnabled": true,
    "httpPort": 80,
    "httpsPort": 443}
}}

```

<b>httpEnabled</b>	Options are true or false to allow unencrypted communications
<b>httpPort</b>	Port number for HTTP communication
<b>httpsPort</b>	Port number for HTTPS communication

### Reports

```

{"conf":{
  "report": {
    "0": {
      "start": "00:00",
      "days": "MTWTFSS",
      "targets": ["1", "2"],

```

```

"interval": 1},
"1": {
"start": "00:00",
"days": "MT-----",
"targets": ["1"],
"interval": 1}}
}}

```

- start** Time of day from which interval is applied. Format is "(00-23):(00-59)" configurable in 15 minute increments
- days** First letter of selected days (in quotes) in order Monday - Sunday. A '-' is used to represent unselected days targets
- List of keys referencing email targets (in quotes)
- interval** Number of hours between reports, can be 1, 2, 3, 4, 6, 8, 12, and 24

### Display

```

{"conf":{
"display": {
"gmsd": {
"mode": "currentAndTotalPower",
"inverted": false,
"vlc": {"enabled": false}}}
}}

```

- mode** Selects a set of data to present on the display, options are "current", "totalPower", and "currentAndTotalPower"
- inverted** Options are true or false to describe the current orientation of the display
- enabled** Options are true or false to determine rPDU VLC display mode

### Time

```

{"conf":{
"time": {
"mode": "ntp",
"datetime": "2021-03-09 12:05:36",
"zone": "UTC",
"ntpServer1": "0.pool.ntp.org",
"ntpServer2": "1.pool.ntp.org"}
}}

```

- mode** Mode, valid options are "ntp" and "manual"
- datetime** Date and time, format is "YYYY-MM-DD HH:MM:SS" with hours ranging from 0-23 (This field is displayed in local time), must only be used with mode="manual"
- Zone** This must be a valid name (in quotes) from the tz database
- ntpServer1** Primary NTP server address (in quotes), must only be used with mode="ntp"
- ntpServer2** Backup NTP server address (in quotes) , must only be used with mode="ntp"

**SSH**

```

{"conf":{
  "ssh": {
    "enabled": true,
    "port": 22}
}}
```

- enabled** Options are true or false to enable or disable SSH
- port** Port number for SSH communication

**USB**

```

{"conf":{
  "usb": {"enabled": true}
}}
```

- enabled** Options are true of false, enables or disabled the USB port

**Serial Port**

```

{"conf":{
  "serial": {
    "baudRate": 115200,
    "dataBits": 8,
    "enabled": true,
    "parity": "none",
    "stopBits": 1}
}}
```

- baudRate** Baud rate, options are 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200
- dataBits** Number of bits of data in one frame, options 7 and 8
- enabled** Options are true of false, enables or disabled the serial CLI on a device
- parity** Parity bit type used in the frame, options "none", "even" and "odd"
- stopBits** Number of stop bits used to terminate each frame, options 1 and 2

**Email**

```

{"conf":{
  "email": {
    "server": "Example-server",
    "port": 25,
    "sender": "From email address",
    "username": "username",
    "password": "password",
    "target": {
      "0": {"name": "email1@domain.com"},
      "1": {"name": "email2@domain.com"}}
    }
  }
}

```

<b>Server</b>	SMTP sever address (in quotes)
<b>port</b>	SMTP port number
<b>sender</b>	Senders email address (in quotes)
<b>username</b>	SMTP user name (in quotes)
<b>password</b>	SMTP password (in quotes)
<b>name</b>	Destination email address (in quotes)

**SNMP v1 or v2c**

```

{"conf":{
  "snmp": {
    "v1v2cEnabled": true,
    "port": 161,
    "readCommunity": "public",
    "writeCommunity": "private",
    "trapCommunity": "private",
    "target": {
      "0": {
        "port": 162,
        "name": "10.20.30.10",
        "trapVersion": "1"},
      "1": {
        "port": 162,
        "name": "10.20.30.11",
        "trapVersion": "1"},
      "2": {
        "port": 162,
        "name": "10.20.30.12",
        "trapVersion": "2c"}}
    }
  }
}

```

<b>v1v2cEnabled</b>	Options are true or false, enables or disables SNMP version 1 and 2c
<b>port</b>	Port number for SNMP communication
<b>readCommunity</b>	Read community name (in quotes), must be different from writeCommunity
<b>writeCommunity</b>	Write community name (in quotes), must be different from readCommunity
<b>trapCommunity</b>	Trap community name (in quotes)
<b>port</b>	Port number for SNMP traps
<b>name</b>	Address (in quotes) for the SNMP trap destination
<b>trapVersion</b>	SNMP trap version, "1" or "2c"

**SNMP v3**

```

{"conf":{
  "snmp": {
    "v3Enabled": true,
    "port": 161,
    "user": {
      "0": {
        "privPassword": "password",
        "type": "read",
        "username": "name",
        "privType": "aes",
        "authPassword": "password",
        "authType": "sha1"},
      "1": {
        "privPassword": "password",
        "type": "write",
        "username": "name",
        "privType": "none",
        "authPassword": "password",
        "authType": "none"},
      "2": {
        "privPassword": "password",
        "type": "trap",
        "username": "name",
        "privType": "none",
        "authPassword": "password",
        "authType": "none"}}}
}}
```

<b>v3Enabled</b>	Options are true or false, enable or disable SNMP version 1 and 2c
<b>port</b>	Port number for SNMP communication
<b>type</b>	Permission type, possible values "read", "write" or "trap"
<b>username</b>	SNMPv3 user name (in quotes)
<b>privPassword</b>	Privacy password (in quotes)
<b>privType</b>	Privacy encryption type, values "aes", "des" or "none"
<b>authPassword</b>	Authentication password (in quotes)
<b>authType</b>	Authentication type, values "sha1", "md5" or "none"

### Syslog

```

{"conf":{
  "syslog": {
    "enabled": true,
    "target": "10.20.30.40",
    "port": 514}
}}
```

<b>enabled</b>	Options are true or false, enable the transmission of syslog messages to a remote destination
<b>target</b>	Address (in quotes) of the remote destination for syslog messages
<b>port</b>	Destination port number for messages

### Admin

```

{"conf":{
  "contact": {
    "description": " Geist GU PDU ",
    "location": "Example Location",
    "contactName": "Example Contact",
    "contactEmail": "email@example.com",
    "contactPhone": "123 456 789"},
  "system": {"label": "System Label"}
}}
```

<b>description</b>	Unit description (in quotes)
<b>location</b>	Unit location (in quotes)
<b>contactName</b>	Unit contact name (in quotes)
<b>contactEmail</b>	Unit contact email (in quotes)
<b>contactPhone</b>	Unit contact phone number (in quotes)
<b>label</b>	Unit system label (in quotes)

**Locale**

```

{"conf":{
  "locale": {
    "defaultLang": "en",
    "units": "metric"}
  }}

```

**defaultLang** Language, valid options are "de", "en", "es", "fr", "ja", "ko", "pt", "zh"

**units** Units, valid options are "metric" and "imperial"

**Data Logging Interval**

```

{"conf":{
  "datalog": {"interval": 15}
  }}

```

**interval** The interval in minutes for data logging

**Aggregation**

```

{"conf":{
  "oneview": {
    "enabled": true,
    "username": "x",
    "password": "pass"}
  }}

```

**enabled** Options are true or false, determines whether aggregation is enabled

**username** User name (in quotes) to be set array devices

**password** Password (in quotes) to set for array devices (null deletes password)

**Example 1**

File to configure a hostname, IP address, gateway, SNMP v1 community names and locale:

```

{"conf":{
  "system": {
    "hostname": "hostname1"},
  "network": {
    "ethernet": {
      "dhcpOn": false,
      "address": {
        "0": {"address": "10.20.30.40", "prefix": 24}}}}}

```

```

,
"network": {
"ethernet": {
"route": {
"0": {
"gateway": "10.20.30.254",
"prefix": 0,
"destination": "0.0.0.0"}}}}
,
"network": {
"ethernet": {
"dns": {
"0": {"address": "8.8.8.8"},
"1": {"address": "8.8.4.4"}}}}
,
"snmp": {
"v1v2cEnabled": true,
"port": 161,
"readCommunity": "public",
"writeCommunity": "private",
"trapCommunity": "private",
"target": {
"0": {
"port": 162,
"name": "10.20.30.60",
"trapVersion": "1"}}}
,
"locale": {
"defaultLang": "en",
"units": "metric"}
}}

```

### Example 2

File to configure an admin user, disable HTTP, and configure a NTP server:

```

{ "auth": {
"username": {
"password": "userpw",
"enabled": true,
"control": false,
"admin": false,
"language": "en"}
},
"conf":{
"http": {
"httpEnabled": false}
,
"time": {
"mode": "ntp",
"zone": "UTC",
"ntpServer1": "0.pool.ntp.org", "ntpServer2": "1.pool.ntp.org"} }}

```

## Sensor Settings and Alarms

```

{"dev": {
  "0000000000000000": {
    "label": "PDU 22A",
    "type": "i03",
    "conf": {"outletControlEnabled": true},
    "outlet": {
      "0": {
        "poaAction": "last",
        "rebootHoldDelay": 10,
        "rebootDelay": 5,
        "poaDelay": 1.25,
        "onDelay": 5,
        "mode": "manual",
        "offDelay": 5,
        "label": "Outlet 1"
      },
      "1": {
        "poaAction": "last",
        "rebootHoldDelay": 10,
        "rebootDelay": 5,
        "poaDelay": 1.50,
        "onDelay": 5,
        "mode": "manual",
        "offDelay": 5,
        "label": "Outlet 2"
      }
    },
    "entity": {
      "total0": {"label": "Total"},
      "breaker0": {"label": "Circuit 1"},
      "breaker1": {"label": "Circuit 2"},
      "phase0": {"label": "Phase A"},
      "phase1": {"label": "Phase B"},
      "phase2": {"label": "Phase C"},
      "line3": {"label": "Neutral Line"}
    }
  },
  "alarm": {
    "action": {
      "0": {
        "target": "trap0",
        "delay": 0,
        "repeat": 0
      },
      "1": {
        "target": "email0",
        "delay": 0,
        "repeat": 0
      }
    }
  },
  "trigger": {
    "0": {

```

```

        "path": "0000000000000000/entity/phase0/measurement/0",
        "severity": "alarm",
        "type": "high",
        "threshold": 222.0,
        "tripDelay": 0,
        "clearDelay": 1,
        "latching": false,
        "selectedActions": ["0", "1"]
    },
    "1": {
        "path": "0000000000000000/outlet/0/measurement/0",
        "severity": "alarm",
        "type": "low",
        "threshold": 55.0,
        "tripDelay": 2,
        "clearDelay": 0,
        "latching": false,
        "selectedActions": ["0"]
    },
    "2": {
        "path": "0000000000000000/entity/breaker0/measurement/4",
        "severity": "alarm",
        "type": "high",
        "threshold": 12.0,
        "tripDelay": 0,
        "clearDelay": 0,
        "latching": false,
        "selectedActions": ["0"]
    },
    "3": {
        "path": "0000000000000000/entity/total0/measurement/0",
        "severity": "alarm",
        "type": "high",
        "threshold": 7200.0,
        "tripDelay": 0,
        "clearDelay": 0,
        "latching": false,
        "selectedActions": ["0"]
    }
}
}}

```

<b>0000000000000000</b>	The device-id (found on the sensors>overview page) of the rPDU to be configured. If this device-id does not match any of the selected devices being provisioned, all selected devices will be provisioned. Setting device-id to 0000000000000000 ensures all selected devices are configured.
<b>label</b>	The rPDU label (shown on the sensors>overview page)
<b>type</b>	<p>For setting alarms on the internal PDU measurements, the “type” must match the IMD being used on the PDU, so it must be “i03” for PDUs using any IMD-03x or IMD-3x, and “i05” for PDUs using the IMD-5M.</p> <p>For setting alarms on external sensors, “type” must be the external sensor’s type. Valid values are “remotetemp”, “afht3”, “thd”, “t3hd”, “a2d”, “snt”, “snh”, “snd”.</p> <p>If omitted, prevents any selected rPDUs being configured when the device-id does not match that of any rPDU.</p>
<b>outletControlEnabled</b>	Applies to outlet switched rPDUs only and determines whether it is possible to control outlets on an outlet switched rPDU. The value true allows outlets to be controlled, the value false prevents outlets from being controlled.
<b>outlet</b>	The outlet section applies to outlet switched rPDUs only and defines settings for each rPDU outlet. Note that outlet numbering starts with 0 (rPDU outlet number 1). Individual outlets (or the entire Outlet section) can be omitted if these settings do not require change.
<b>poaAction</b>	Defines the state the outlet will start when powered on (“on”, “off” or “last”).
<b>rebootHoldDelay</b>	Time, in seconds, the unit waits after switching the outlet off, before switching an outlet back on during a reboot. Can be any whole number between 0 and 14400.
<b>rebootDelay</b>	Time, in seconds, the unit waits before rebooting an outlet. Can be any whole number between 0 and 14400.
<b>poaDelay</b>	Time, in seconds, the unit waits after being powered on before powering on the outlet. Can be any whole number between 0 and 14400.
<b>onDelay</b>	Time, in seconds, the unit waits before switching an outlet on. Can be any whole number between 0 and 14400.
<b>mode</b>	Should have the value “manual” for user-controlled outlets.
<b>offDelay</b>	Time, in seconds, the unit waits before switching an outlet off. Can be any whole number between 0 and 14400.
<b>label</b>	The outlet label.
<b>entity</b>	The entity section is used to label non-outlet measurements on the sensors>overview page.
<b>total0 label</b>	Label for the rPDU total on the sensors>overview page
<b>breaker0 label</b>	Label for the first circuit (if present). Further circuits if present can be labelled using breaker1, breaker2 etc.

<b>phase0 label</b>	Label for the first phase. Further phases if present can be labelled using phase1 and phase2.
<b>line3 label</b>	Label for the neutral line.
<b>alarm</b>	<p>The alarm section defines the methods that can be used to send alarms. Each method is numbered starting from 0 defines:</p> <p>For SNMP trap alarm delivery the target can have the values "trap0", "trap1" etc. which refers to the first, second etc. SNMP traps defined on the System&gt;SNMP page.</p>
<b>target</b>	<p>For email alarm delivery the target can have the values "email0", "email1" etc. which refers to the first, second etc. target email defined on the System&gt;Email page.</p> <p>Note that the target must not specifies SNMP traps or email targets that have not been configured.</p>
<b>delay</b>	Determines how long this event must remain tripped before this action's first vertical notification is sent.
<b>repeat</b>	Determines whether multiple notifications will be sent for this event action.
<b>trigger</b>	This section defines which alarms have been configured, starting with the first alarm which is numbered 0.
<b>Path</b>	<p>Defines the measurement to be alarmed upon. The format of this field is:</p> <p>"0000000000000000/entity/phase0/measurement/0" defines alarms for rPDU inlet phase measurements, where phase0 refers to the first rPDU input phase, phase1 refers to the second phase (if present) etc. The number immediately following measurement indicates the type of measurement to be alarmed upon as defined below:</p> <p>0: Voltage</p> <p>4: Current</p> <p>8: Real power</p> <p>9: Apparent power</p> <p>10: Power Factor</p> <p>11: Energy</p> <p>14: Current crest factor</p> <p>"0000000000000000/outlet/0/measurement/0" defines outlet alarms for rPDUs with outlet monitoring where the number immediately following outlet specifies the outlet number (starting at zero). The number immediately following measurement indicates the type of measurement to be alarmed upon as defined below:</p> <p>0: Voltage</p>

- 4: Current
- 8: Real power
- 9: Apparent power
- 10: Power Factor
- 11: Energy
- 12: Balance
- 14: Current crest factor

"0000000000000000/entity/total0/measurement/0" defines alarms for rPDU phase total inlet measurements. The number immediately following measurement indicates the type of measurement to be alarmed upon as defined below:

- 0: Real power
- 1: Apparent power
- 2: Power Factor
- 3: Energy

"0000000000000000/entity/breaker0/measurement/4" defines alarms for rPDU circuit alarms where the first circuit is indicated by breaker0, second by breaker1 etc. The number immediately following measurement indicates the type of measurement to be alarmed upon as defined below:

- 4: Current

"0000000000000000/entity/line3/measurement/4" defines alarms for rPDU neutral current alarms. The number immediately following measurement indicates the type of measurement to be alarmed upon as defined below:

- 0: Current

<b>severity</b>	Can be "warning" or "alarm" describing the severity of the generated alarm.
<b>type</b>	Can be "high" or "low" which defines whether this is a high or low threshold.
<b>threshold</b>	Threshold value which can be any number between -999.0 through 999.0. Neutral line current can be specified with up to two decimal places.
<b>tripDelay</b>	The measurement must exceed the threshold for this many seconds before the event will be tripped, can be any whole number between 0 and 14400.

<b>clearDelay</b>	The measurement must return to normal for this many seconds before the event will clear and reset. can be any whole number between 0 and 14400.
<b>latching</b>	Can be true or false. If true, the event and its associated actions remain active until the event is acknowledged, even if the measurement subsequently returns to normal.
<b>selectedActions</b>	Defines which actions defined above to use to send the alarm. Such as ["0","1"] defines actions 0 and 1 which are defined as actions using trap0 and email0 in the example above.

This page intentionally left blank

## Appendix G: API / CLI Error Codes

### G.1 Success

Code	Explanation
Success	Operation has succeeded

### Authentication Errors

Code	Explanation
No Admin user configured	At least one Admin user must be configured on the system
Not Authorized	The current user is not authorized
Not Authorized: Session expired	The token used is no longer valid
Not Authorized: Not enough permissions	The current user does not have enough permissions to perform the operation
Invalid credential combination	Both username/password and token were provided or only one of username or password was provided
Must have at least one admin user	At least one Admin user must be configured on the system

### JSON Format Errors

Code	Explanation
Malformed JSON	Received JSON is not valid or corrupt
Missing field	An expected field was not found in the JSON structure
Duplicate fields	The same field was set multiple times, such as in the HTTP body and query string

### Path Errors

Code	Explanation
Invalid path	Supplied path does not fulfill system requirements
Path not found	Supplied path was not found
Identifier not found	One of the fields in the received JSON structure does not exist
Field not applicable	A field in the JSON structure exists but should not have been sent

### Data Validation Errors

Code	Explanation
Invalid input	An input field is invalid but does not fit in other data validation categories
Input too long	An input field exceeds the maximum allowed length
Invalid characters	An input field contains invalid characters for the field

Code	Explanation
Invalid serial	An input field is an invalid serial number
Invalid Boolean	An input field is an invalid Boolean value
Out of range	An input field falls outside the valid range for the field
Invalid integer	An input field is not an integer when one is expected
Invalid number	An input field is not a number when one is expected
Invalid URL	An input field is not a valid URL when one is expected
Invalid IP	An input field is not a valid IP address when one is expected
Paths not allowed	An input field contains a path when one is not expected
Invalid username	An input field is an unsupported user name
Invalid email address	An input field is not a valid email address when one is expected
Invalid option	An input field contains an invalid option selection
Invalid datetime	An input field is not a valid date or time when one is expected
Out of bounds	An input field is out of the allowed bounds for the field
Invalid week	An input field represents an invalid days of the week selection
Duplicate entry	An input field would create a duplicate when one is not allowed
Invalid Route	A network route was misconfigured

### Other Errors

Code	Explanation
Unknown error	A system error occurred for which no other error code applies
Command not allowed	The received command is not allowed at the specified path
System busy	The action attempted cannot be currently executed and should be retried

### Data Consistency Errors

Code	Explanation
Inconsistent state	The command will leave the system in an inconsistent state, so it is rejected
Syslog enabled requires target	Enabling remote syslog requires a target host be specified
NTP mode requires servers	Enabling NTP requires servers to query
Start time must come before end time	Time was received for which the end came before the start
Invalid SNMPv3 auth/priv combination	SNMPv3 privacy cannot be used without authentication
Port not available	There was an attempt to set a port number to one already in use
Vertiv Intelligence Director missing credentials	Enabling Vertiv Intelligence Director requires that a username and password be set
Time not settable	Setting datetime requires manual time mode

**Upload Errors**

<b>Code</b>	<b>Explanation</b>
Invalid firmware package	The package is formatted incorrectly or corrupt
Invalid file key	The package specifies a wrong OEM key and cannot be used with this unit
Invalid version	The version is too old or otherwise unsupported
Invalid product	The package is meant for a different hardware architecture
Invalid certificate file	The SSL certificate provided could not be parsed
Invalid certificate password	The password did not work with the SSL certificate provided

This page intentionally left blank

## Appendix H: An Example of Configuring LDAP for Active Directory Credentials

### H.1 Overview

Active Directory integration with the Vertiv-branded and PowerIT-branded Interchangeable Monitoring Device (IMD) allows users to authenticate and authorize at the IMD's web and CLI interface using their enterprise Active Directory credentials. The user will also be authorized into one of three IMD roles based upon an Active Directory security group the user is a member of. These roles are:

- **Admin:** Full configuration rights including Control role permissions.
- **Control:** Ability to control outlet state if applicable, change device names and alarm/event settings.
- **Enabled:** Read-only of the configuration settings and no outlet control rights.

### H.2 General Requirements and Notes

- IMD v5.3.3 or new firmware can be used for this procedure.
- Examples are represented in green.


### H.3 Active Directory Configuration Procedure

- Create or utilize an existing AD bind account for the IMD. This account will be used by the IMD to search the AD domain and authenticate users. The password for this account should be set to never expire.
- Create one or more AD security groups to represent the Admin, Control and Enabled IMD roles.
- Make the AD user a member of the applicable security group.
  - AD account "vertiv" has been assigned a member of security group "admin" in example shown below. As a result, the "vertiv" AD user account will assume the IMD Admin role upon login.

**NOTE:** The naming of the security group is at your discretion. The security group name and DN should match what is defined in the IMD's LDAP "Group" section.

**NOTE:** An AD user belonging to more than one of these IMD role mapped security groups will inherit the highest role privileges.


Figure H.1 Admin Properties Settings

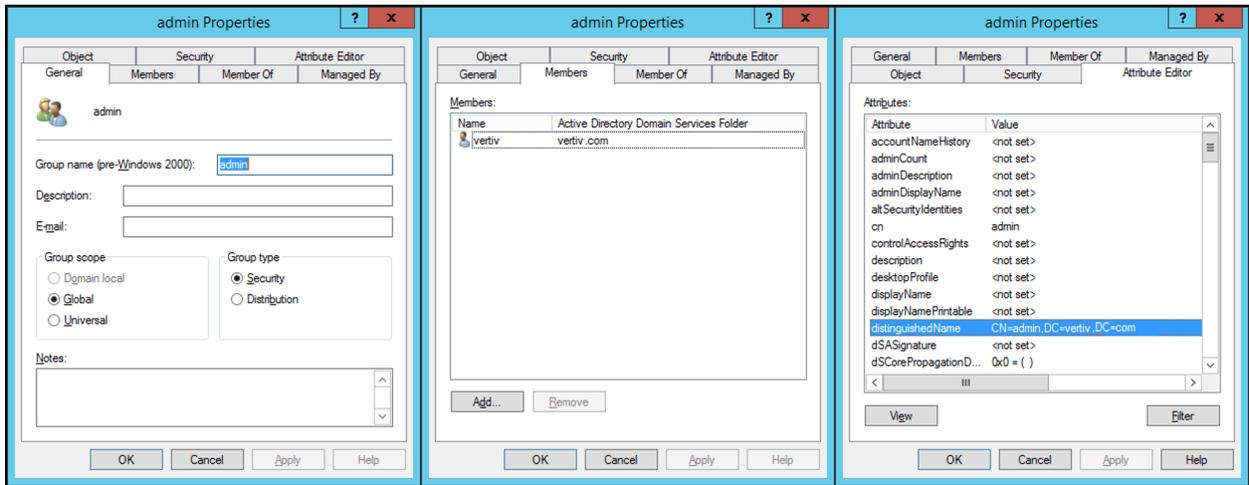

### H.4 IMD Configuration Procedure (Web Interface)

- Open a web browser to the IP or DNS name of the IMD and login as the local admin account.
- Navigate to *System >Remote Authentication*.
- Set Remote Authentication Mode to LDAP and save.

Figure H.2 Remote Authentication

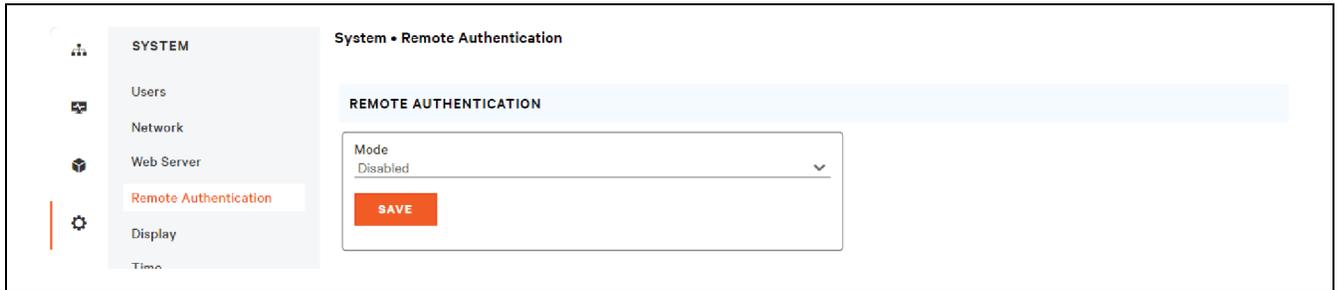

- Refer to the illustration below for descriptions of the LDAP section settings.

Figure H.3 LDAP Setting

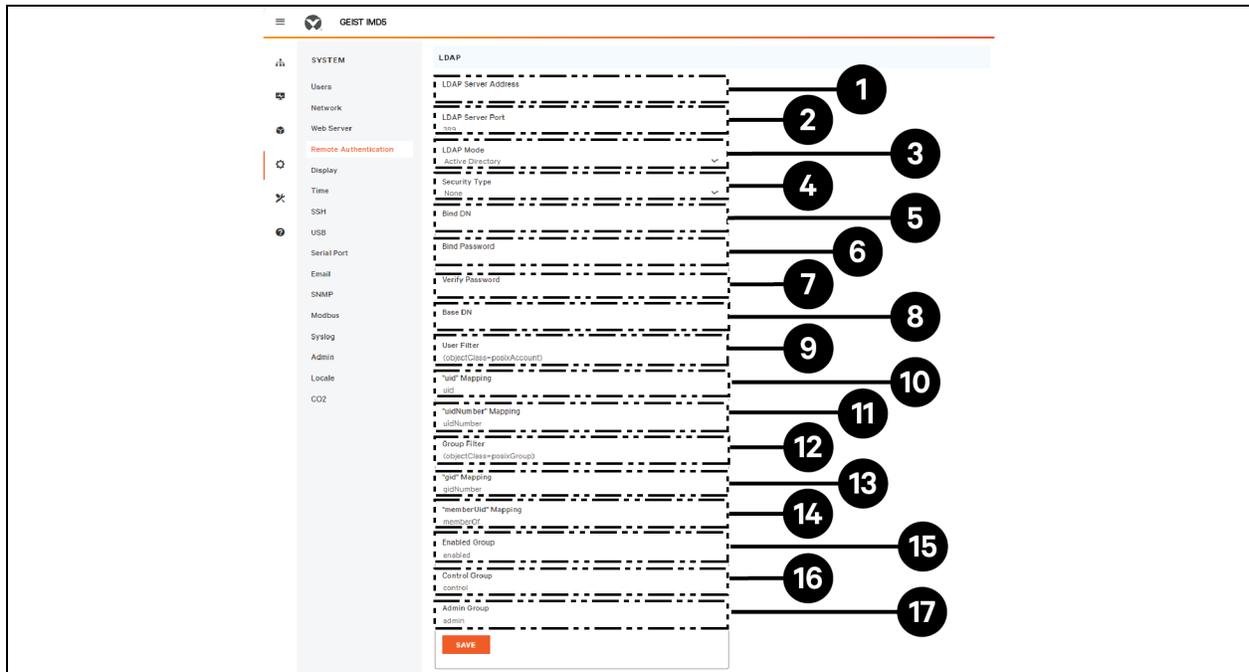


Table H.1 LDAP Setting

Item	Description
1	Active Directory Server's IP Address
2	Active Directory TCP Port <sup>2</sup> 389 - Non SSL 636 - SSL
3	LADAP Mode OpenLDAP - Active Directory
4	Active Directory Security <sup>2</sup> None - SSL - StartTLS
5	AD Account Used to Bind to AD Server Must be in full DN path notation CN=adbindacct,CN=Users,DC=vertiv,DC=com Account password should not expire
6	Set AD Bind Account Password
7	Verify Password
8	Base Domain Path to Search AD Users <sup>1</sup> Must be in full DN path notation DC=vertiv, DC=com
9	AD User ObjectClass Attribute Filter (objectClass=user)

**Table H.1 LDAP Setting (continued)**

Item	Description
10	AD User Account Name Filter samaccountname
11	"uidNumber" Mapping uidNumber
12	AD Group ObjectClass Attribute Filter (objectClass=group)
13	"gid" Mapping gidNumber
14	Required Setting memberOf
15	AD Security Group Map to Enabled Role Must be in full DN path notation CN=enabled, DC=vertiv, DC=com
16	AD Security Group Map to Control Role Must be in full DN path notation CN=control, DC=vertiv, DC=com
17	AD Security Group Map to Admin Role Must be in full DN path notation CN=admin, DC=vertiv, DC=com
<p><b>NOTE:</b> <sup>1</sup>Best practice is to reduce the scope of AD domain traversal to search for authenticated users. Try to avoid just specifying the base domain when there is a large and nested AD schema.</p> <ul style="list-style-type: none"> <li>• Ideal: OU=Enabled Users, OU=User Accounts, DC=vertiv, DC=com</li> <li>• Not Ideal: DC=vertiv, DC=com</li> </ul>	
<p><b>NOTE:</b> <sup>2</sup>StartTLS uses TCP port 389. It initially establishes the session unencrypted but will encrypt the session from that point forward if the LDAP_START_TLS_OID request is accepted by the Active Directory server.</p>	

### **Connect with Vertiv on Social Media**



<https://www.facebook.com/vertiv/>



<https://www.instagram.com/vertiv/>



<https://www.linkedin.com/company/vertiv/>



<https://www.x.com/Vertiv/>



---

Vertiv.com | Vertiv Headquarters, 505 N Cleveland Ave, Westerville, OH 43082 USA

©2025 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

SL-71211\_REVB\_04-25