

Vertiv™ Liebert® GXT5 UPS

3,000 VA, HV, 208V (L1, L2, G) IN, 208V OUT



Quick Installation Guide



Thank you for your recent purchase of a Vertiv UPS! We appreciate your business and are confident that your new product will provide many years of uninterrupted power to your connected equipment. With this purchase, you may also want to consider Vertiv's complete line of racks, PDUs, thermal solutions, KVM switches, and serial consoles. Vertiv also offers a broad array of services and extended warranties. If you require any assistance or support please don't hesitate to reach out to one of our resellers, local rep firms, or directly to us at 1-800-222-5877 menu option 3, or email at warranty@vertiv.com. We stand ready to support you. We sincerely hope that you'll continue to select Vertiv for all of your future infrastructure needs!

The Vertiv Team

IMPORTANT: Before installing, connecting to supply or operating your Vertiv Liebert GXT5 UPS, please review the Safety and Regulatory Statements sheet. For detailed installation, operating, maintenance and troubleshooting information refer to the Liebert GXT5 User Guide for your model available at www.Vertiv.com.

Installations

1. Inspecting the UPS

Inspect the UPS for any signs of obvious damage. If damage is visible, do not proceed and call our warranty support line for assistance at 1-800-222-5877 menu option 3, or email at microups.warranty@vertiv.com.

2. Choosing a location


Install the UPS in a temperature-controlled environment that is free of corrosive and conductive contaminants. Avoid locations near heat or water sources and exposed to direct sunlight.

For proper ventilation, leave four inches clearance on all sides of the UPS.


The input outlet should be nearby and easily accessible.

Model Design Configuration


GXT5-3KL620RT2UXL

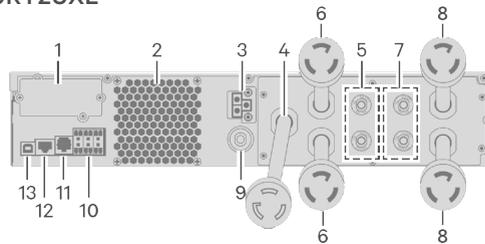

GXT5-3KL620RT2UXL

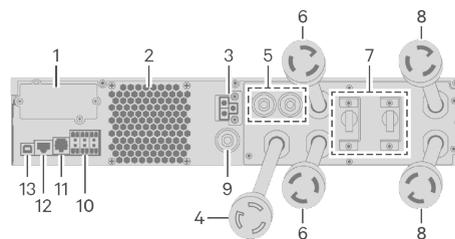

#	Description
1	Liebert® IntelliSlot Port
2	Ventilation hole
3	External-battery connector
4	Input-power cable: L6-20P for 3KL620, L6-30P for 3KL630
5	Output circuit breaker
6	Output cable: L6-20R for 3KL620, L6-30R for 3KL630
7	Output circuit breaker
8	Output cable, L6-15R
9	Input circuit breaker
10	Dry-contacts, Battery Detection (3), REPO input (REPO)
11	RS-232 port - Used for CL
12	RS-485 port - Used for external temperature sensors
13	USB port

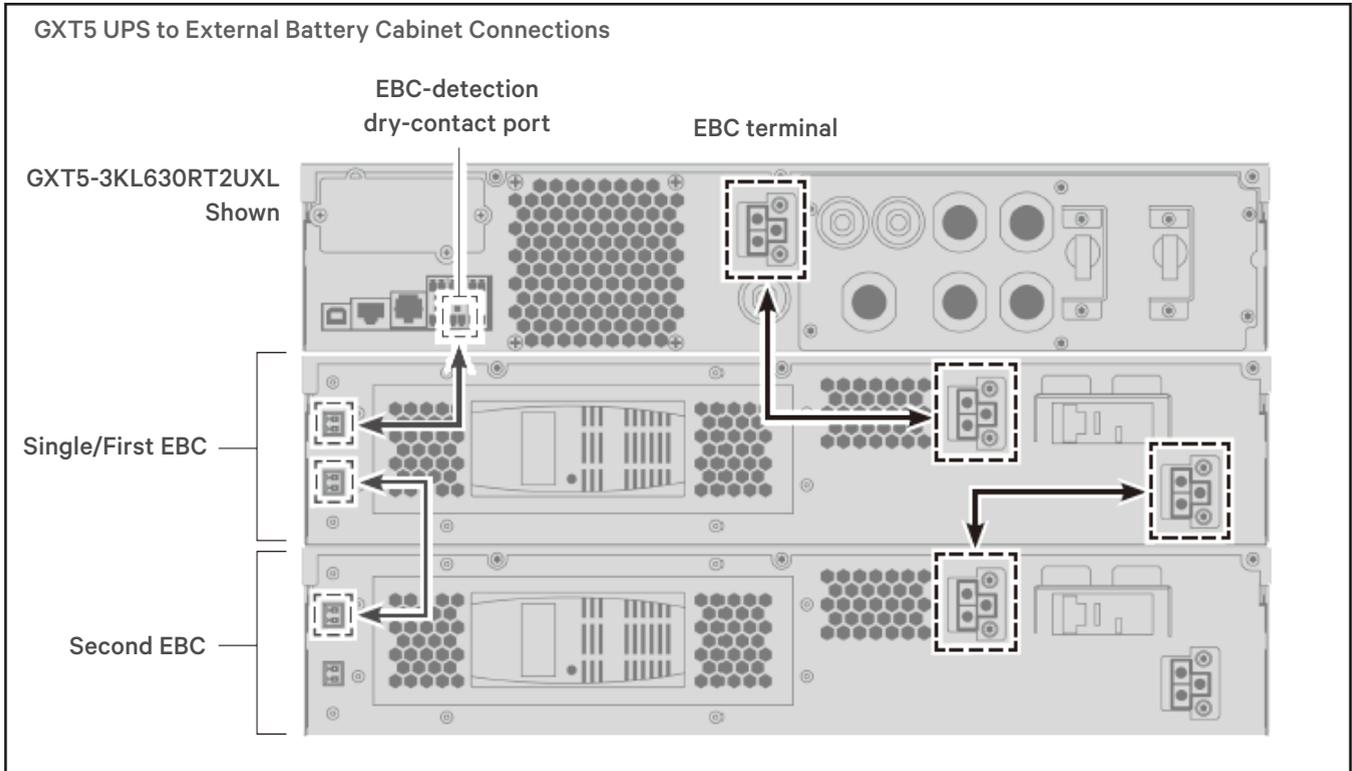

3. Installing the UPS

The UPS and optional External Battery Cabinets may be installed in either a tower or rack configuration.


- For tower installation, assemble and attach the tower support stands and spacers.
- For rack installation:
 1. Remove internal batteries from the UPS so it can be relocated into the rack more easily.
 2. Attach the handles to the UPS.
 3. Install the rail kit in the rack.

NOTE: Align shelf of rack kit with rack U number for proper alignment.

4. Install the UPS in the rack.
5. Secure the handles to the rack.

After UPS installation, reinstall internal batteries.

WIRING	
Model	Recommended external breaker
GX5-3KL620RT2UXL	20 A
GX5-3KL630RT2UXL	30 A

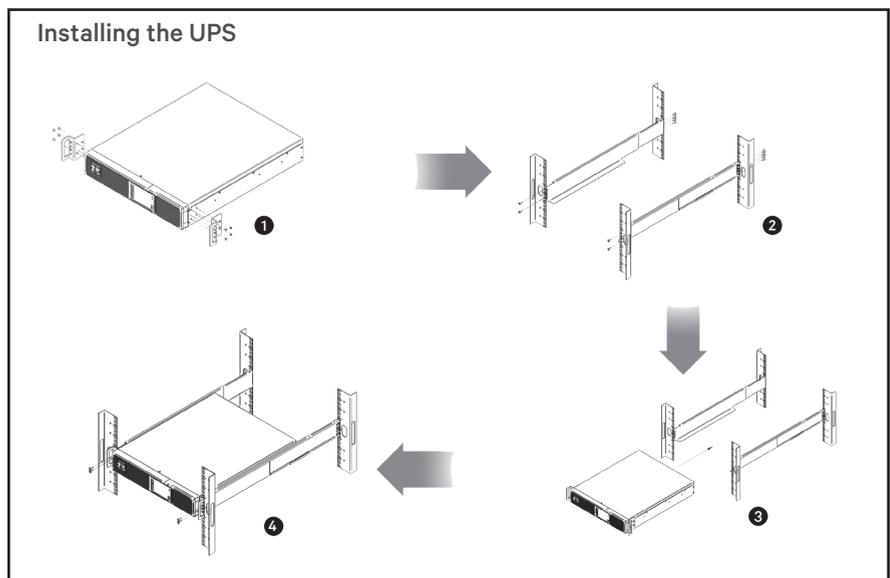

Connections

1. Connecting External Battery Cabinet (Optional)

External battery cabinets (EBC) provide longer battery run-time for connected devices. Refer to GXT5 User Guide, to select the appropriate model and quantity for your GXT5 model and applications.

- Verify that the EBC breaker is in the “Off” position.
- Connect one end of the supplied EBC cable to the UPS and one end to the battery cabinet. If connecting more than one external battery, connect one end of the external battery cable to the second connector on the battery cabinet, then connect the other end to the next battery cabinet.

2. Connecting the UPS to Receptacle

The UPS is cord and plug connected using an L6-20P or L6-30P input plug depending on your model. Perform all wiring in accordance to all local and national electrical codes.

The UPS is equipped with output receptacles. Connect the equipment to be protected to the output receptacles.

NOTE: Allow the batteries to charge at-least 8 hours before first start-up to ensure adequate back-up time. The batteries charge when the UPS is connected to AC input regardless of the off/on status of the UPS.

Powering the UPS

NOTE: Do not start the UPS until after the installation has been finished, the system is commissioned by an authorized engineer, and the external input circuit breakers have been closed.

1. Make sure the breaker supplying power to the UPS is closed, and close the input breaker on the rear of the UPS.
2. If necessary, use the LCD display or a connected computer to make any required settings. (Refer to the User Guide for configuration set up.)
3. Close all output breakers on the rear of the UPS (or in an external panel board, if used).
4. If external battery cabinets are included, close the breakers on the rear of each cabinet.
5. Power-on the UPS using the Operation and Display Panel (see the illustration on the previous page) by pressing and holding the power button until the confirmation dialog appears. Use the Up/Down arrows to select “YES”, then press Enter.

NOTE: During operation, the UPS may sound an alarm as the output receptacles are powered. You may press the Esc button for 2 seconds to silence the audible alarm.

Important! DO NOT ROTATE DISPLAY. UPS has a gravity-sensor function



Feature

Vertiv™ Power Assist is a free software available to Vertiv customers for monitoring your equipment protecting your data and stay up to date on device current state.

Please use the link below to download the software: <https://www.vertiv.com/en-us/products-catalog/monitoring-control-and-management/software/vertiv-power-insight-application/> during operation, the UPS may sound an alarm as the output receptacles are powered. You may press the Esc button for 2 seconds to silence the audible alarm.



To contact Vertiv Technical Support: visit www.Vertiv.com

© 2021 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications, rebates and other promotional offers are subject to change at Vertiv's sole discretion upon notice.

